



# Installation & Configuration Model 5000B

## Mechanical Installation

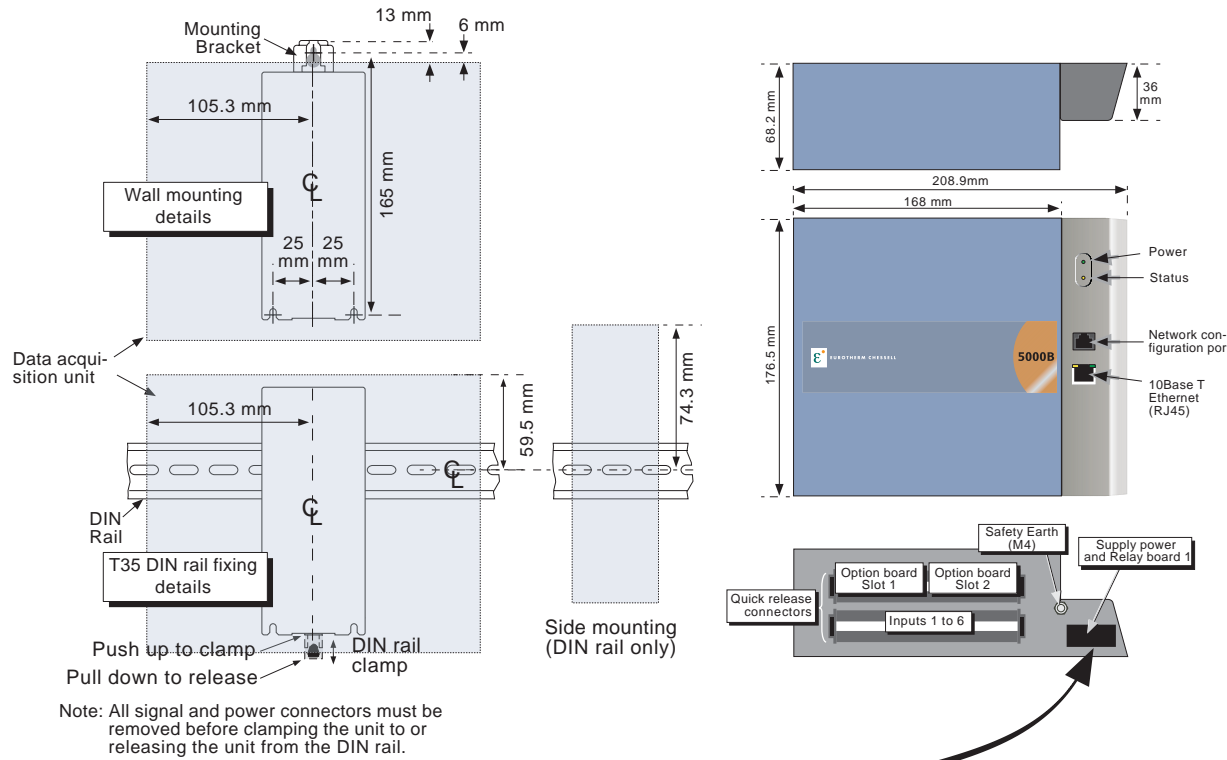

## Connector locations

 
 
 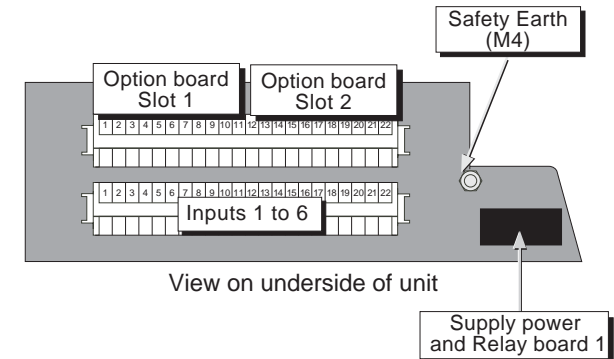


### Notes:







1. If channels 7 to 12 are fitted, they occupy option board slots 1 and 2.
2. Relay board 1 fitted as standard.
3. Relay boards 2 and 3 (if fitted) occupy option slots 1 and 2, respectively.

## Pinouts

### Option boards





### Universal input board

  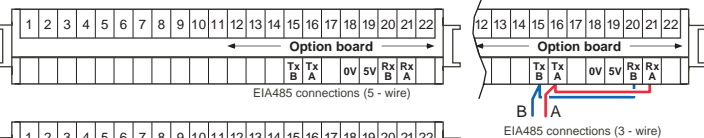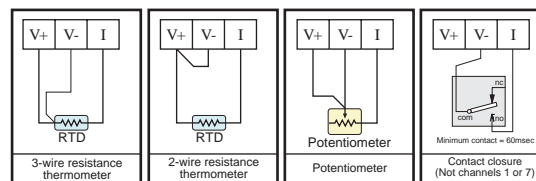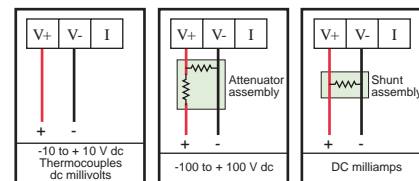
 


Serial communications option board (Comms manual section 4)

# Operator Display

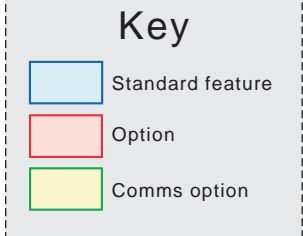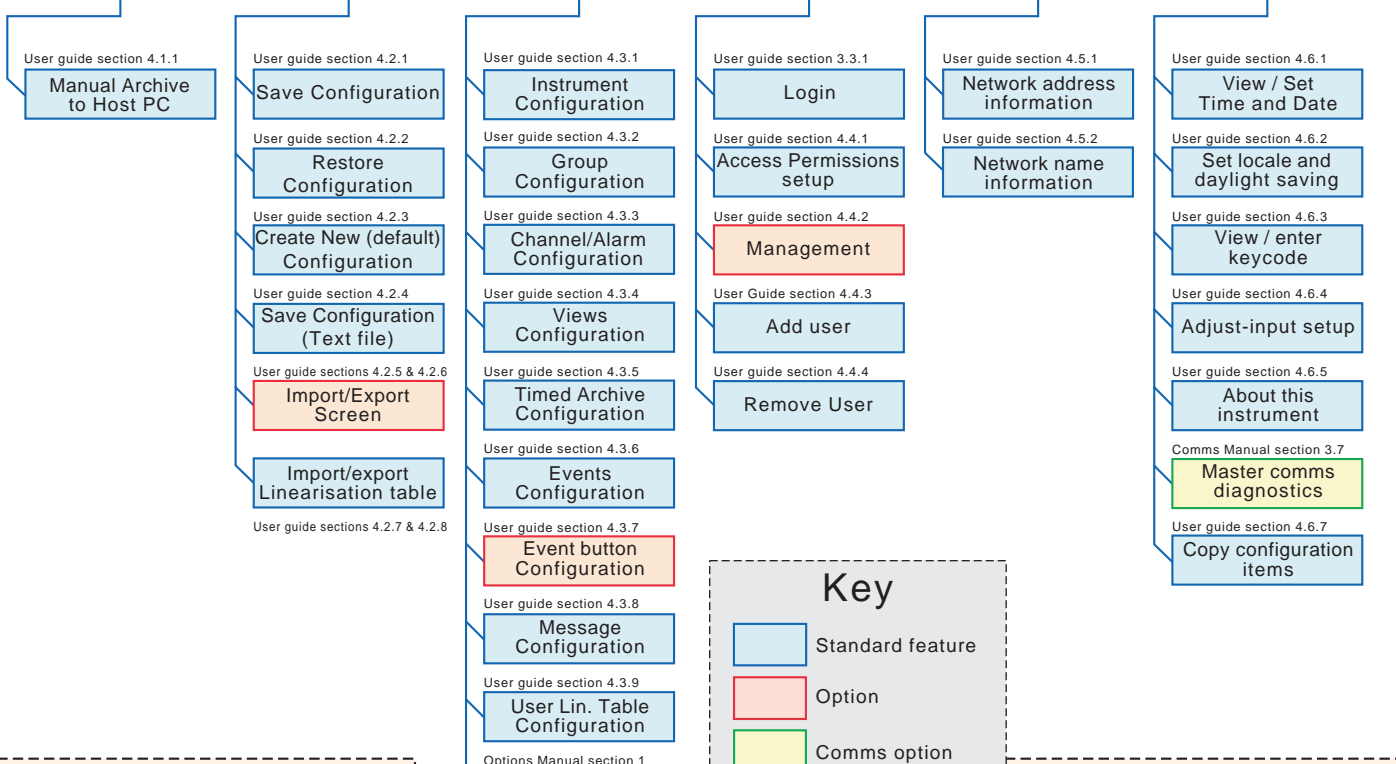

## Display modes (User guide section 3.4)

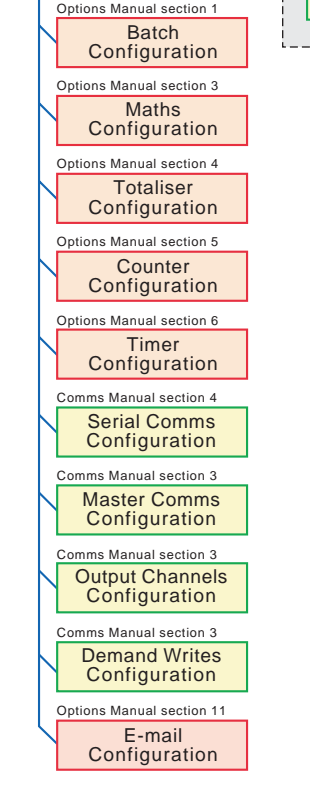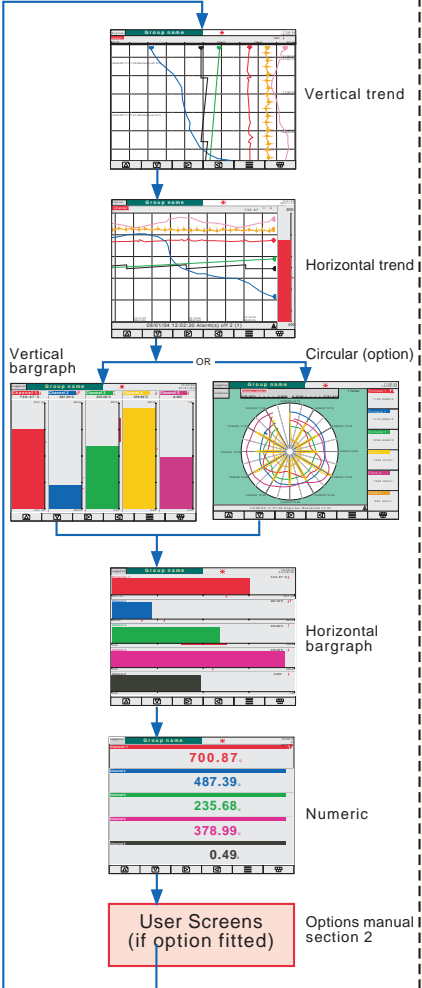

## Alarm symbols

▲	Absolute High
▼	Absolute Low
▲▼	Deviation in
▼▲	Deviation out
▲▲	Rate-of-change Rising
▼▼	Rate-of-change Falling

## Jobs

