

Compact SCR Power Controller

EPack Single Phase EtherCAT option

HA033412 Issue 01

05/2019



EtherCAT®

Eurotherm®

by **Schneider** Electric

Legal Information

The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Eurotherm Limited, Schneider Electric or any of its affiliates or subsidiaries shall not be responsible or liable for misuse of the information contained herein.

If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

You agree not to reproduce, other than for your own personal, non-commercial use, all or part of this document on any medium whatsoever without permission of Eurotherm Limited, given in writing. You also agree not to establish any hypertext links to this document or its content. Eurotherm Limited does not grant any right or license for the personal and non-commercial use of the document or its content, except for a non-exclusive license to consult it on an "as-is" basis, at your own risk. All other rights are reserved.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Failure to use Eurotherm Limited software or approved software with our hardware products may result in injury, harm, or improper operating results.

Failure to observe this information can result in injury or equipment damage.

Eurotherm, EurothermSuite, ECAT, EFit, EPack, EPower, Eycon, Eyris, Chessell, Mini8, nanodac, optivis, piccolo and versadac are trademarks of Eurotherm Limited SE, its subsidiaries and affiliated companies. All other trademarks are the property of their respective owners.

© 2019 Eurotherm Limited. All rights reserved.

EtherCAT® is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

TwinCAT® is a registered and licensed trademark of Beckhoff Automation GmbH.

Table of Contents

- Table of Contents 4
- Safety Information 10
 - Important Information..... 10
- Safety Notes 11
 - Reasonable use and responsibility 14
 - SELV 14
 - Symbols Used in the Instrument Labeling..... 15
 - Hazardous Substances 15
 - Cybersecurity 16
 - Introduction 16
 - Cybersecurity Good Practices 16
 - Comms Port and Channel Enabled by Default 16
 - Comms Port and Channel Disabled by Default 17
- Introduction 19
 - Unpacking the Units 19
 - Order Code 20
 - Basic Product Coding 21
 - Software Upgrade Options..... 22
- Installation 24
 - Mechanical Installation 24
 - Mounting details 24
 - Mechanical installation requirements 26
 - Mounted clearance dimensions 27
 - Bulkhead Mounting 27
 - DIN Rail Mounting..... 29
 - Dimensions 30
 - 16A to 32A unit dimensions 30
 - 40A to 63A unit dimensions 31
 - 80A to 100A unit dimensions 32
 - 125A unit dimensions 33
 - Electrical Installation 34
 - Connection Details 35
 - Auxiliary supply 39
 - 24V ac/dc auxiliary supply 39
 - 85 to 550Vac auxiliary supply 39
 - Connections (Supply Power and Load) 41
 - Signal wiring..... 45
 - Firing Enable..... 45
 - Relay Output..... 45
 - I/O Input & Output Details 47
 - Network Communications (EtherCAT) 48
 - Overview 48
 - EtherCAT Communications..... 48
 - EtherCAT Status Indicator 49
 - EtherCAT Explicit Device ID selectors 50
 - Fuse Holders Contact Data (Fuse Ordering Code HSM)..... 51
- Operator Interface 53
 - Display 53
 - Status area..... 53
 - Softkey icons..... 54
 - Pushbuttons 55
 - Pushbutton functions 55
 - Menu item value selection 55

Front Panel Event Indication	56
Instrument events	56
Indication alarms.....	56
System alarms	56
Process alarms	56
Quickcode	57
Quickcode Menu Parameters Description.....	58
Firing modes definitions	59
Logic	59
Burst Fixed Firing.....	60
Burst Variable Firing.....	60
Phase Angle Control	60
Intelligent Half-Cycle (IHC) Mode	61
50% Duty Cycle	61
33% Duty Cycle	61
66% Duty Cycle	61
Feedback type	62
Transfer Mode.....	62
Limitation features.....	62
Firing Angle Limiting (in Phase Angle mode)	63
Firing Angle Limiting (in Burst mode).....	63
Duty Cycle Limiting (in Burst mode)	63
Chop Off Definition.....	64
Communications	65
Field Device Tool (FDT) and Device Type Manager (DTM) Support.....	65
Modbus	67
Overview	67
Protocol Basics	67
Parameter Resolution	68
Reading of Large Numbers.....	69
Wait Period.....	69
Latency	69
Configuration Mode Parameters (EtherCAT)	69
Modbus Advanced Topics	70
Access to Full Resolution Floating Point and Timing Data	70
Data Types Used In E-Pack Power Controller Units	71
Enumerated, Status Word, and Integer parameters	71
Floating Point Parameters	71
Time Type Parameters.....	72
EtherCAT®	73
Description	73
Product Handling from EtherCAT Configuration Tool.....	74
Out-of-the-box Startup	74
Ethernet over EtherCAT (EoE).....	75
Access E-Pack from a Master Platform	75
Access E-Pack from a Remote PC	77
iTools Interface with EoE	78
File Access over EtherCAT (FoE)	78
Overview to FoE	78
Firmware Upgrade	79
Configuration Upload/Download	80
Upload	80
Download.....	81
E-Pack Object Dictionary	82
Communication Area.....	82
Process Data Object Mapping Area.....	83
Synchronization Object Area.....	85
Object Area of the Module	87
Input Data	87
Output Data.....	89

- Object area of the device 91
- Process Data..... 104
 - Mapping 104
 - Synchronization 106
- CAN Application Protocol over EtherCAT (CoE) 107
- TwinCAT Project Configuration 108
- Configuration from the Front Panel 111**
 - Menu Pages 112
 - EoE Comms menu 112
 - Meas menu 113
 - Adjust menu 114
 - Info menu 117
 - Alarms menu 118
 - Alm Disable menu 119
 - Alm Latch Menu 120
 - Alm Stop menu 121
 - Alm Relay menu 122
 - DI Stat menu 123
 - ECAT ID menu 123
 - PLF Adjust menu 123
 - Access to 'OEM security' 123
- Configuration using iTools 125**
 - Introduction 125
 - Overview 125
 - Access Menu 126
 - Alarm Configuration 127
 - Control Configuration 129
 - Control setup menu 130
 - Parameters 130
 - Control Main menu 131
 - Parameters 131
 - Control limit configuration 132
 - Parameters 132
 - Control diagnostic menu 133
 - Parameters 133
 - Control Alarm disable menu 133
 - Parameters 133
 - Control Alarm Detection Parameters 134
 - Parameters 134
 - Control Alarm signaling parameters 134
 - Parameters 134
 - Control Alarm Latch parameters 135
 - Parameters 135
 - Control Alarm Acknowledgement parameters 135
 - Parameters 135
 - Control Alarm Stop parameters 136
 - Parameters 136
 - AlmRelay, Control Alarm Relay 136
 - Parameters 136
 - Counter Configuration 137
 - Parameters 137
 - Cascading Counters 138
 - Energy Configuration 139
 - Parameters 139
 - Resolution 140
 - Fault Detection Menu 141
 - Parameters 141
 - Firing Output Menu 143
 - Examples 144
 - Safety Ramps, Soft Start and Delayed Trigger, firing types 144
 - Input/Output (IO) Configuration 145

Analog Input configuration	146
Ai Main	146
AlmDis	147
AlmDet	147
AlmSig	147
AlmLat.....	147
AlmAck.....	147
AlmStop	148
AlmRelay	148
Digital Input configuration	149
Parameters	149
Relay status	150
Parameters	150
Instrument Configuration Menu.....	151
Instrument Display configuration.....	151
Parameters	151
Instrument Config configuration	152
Parameters	152
Instrument configuration	153
Parameters	153
Scaling Factor.....	154
SetProv Example	154
IP Monitor Configuration	155
Parameters	155
Lgc2 (Two Input Logic Operator) Menu	156
Lgc2 Parameters.....	156
Lgc8 (Eight-input Logic Operator) Configuration.....	158
Parameters	158
LGC8 schematic	159
Invert input decoding table.....	160
LIN16 Input Linearization	161
Compensation for Sensor Non-Linearities	162
Input Linearization Parameters	163
Math2 Menu	164
Math2 Parameters	164
Modulator Configuration.....	166
Modulator parameters.....	166
Network Configuration.....	167
Network Meas Menu	168
Parameters	168
Network Setup configuration	170
Parameters	170
Network Alarms.....	172
AlmDis	172
Network AlmDet Submenu	172
Network Almsig Submenu.....	172
Network Almlat Submenu	172
Network Almack Submenu.....	173
Network Almstop Submenu	173
Network Almrelay Submenu	173
Qcode.....	174
Parameters	174
Setprov Configuration Menu	175
Setpoint provider parameters.....	175
Timer Configuration.....	177
Parameters	177
Timer examples	178
Totalizer Configuration	179
Parameters	179
User Value Configuration Menu	180
User Value parameters	180

Using iTools 181

- iTools connection..... 181
 - Automatic detection 181
 - Ethernet (Modbus TCP) communications 182
- Graphical Wiring Editor 183
 - Toolbar 185
 - Wiring Editor Operating Details 185
 - Component Selection 185
 - Block Execution Order 186
 - Function Blocks 186
 - Wires..... 189
 - Wire Colors 191
 - Thick Wires 191
 - Comments 191
 - Monitors 192
 - Downloading 193
 - Colors 193
 - Diagram Context Menu 194
 - Compounds 195
 - Tool Tips..... 196
- Parameter Explorer 197
 - Parameter Explorer Detail..... 198
 - Explorer Tools 199
 - Context Menu..... 199
- Watch/Recipe Editor 200
 - Creating a Watch List..... 200
 - Adding Parameters to the Watch List 200
 - Data Set Creation 201
 - Watch Recipe Toolbar Icons 202
 - Watch/Recipe Context Menu 202

Parameter Addresses (Modbus) 204

- Introduction 204
- Parameter Types..... 204
- Parameter Scaling..... 204
- Parameter List..... 205

Alarms 206

- Global System Monitoring 206
- System Alarms 207
 - Missing mains 207
 - Thyristor short circuit..... 207
 - Over temperature..... 207
 - Network dips 207
 - Mains frequency fault detected 207
 - Chop Off alarm..... 207
- Process Alarms 208
 - Total Load Failure (TLF) 208
 - Closed Loop alarm..... 208
 - Alarm input..... 208
 - Over current detection 208
 - Over Voltage Alarm 208
 - Under Voltage Alarm 208
 - Partial Load Failure (PLF)..... 209
- Indication Alarms 209
 - Process Value Transfer active 209
 - Limitation active 209
 - Load Over-Current..... 209

Maintenance 211

- Precautions 211
 - Reasonable use and responsibility 211

Preventive Maintenance.....	212
Fusing	213
Fuses Holders Contacts Kit	215
Fuse holder dimensions.....	216
Auxiliary supply fuse protection	219
Instrument upgrade	221
iTools upgrade.....	221
Software upgrade.....	221
Obtaining a Passcode via Telephone.....	221
Obtaining a Passcode via iTools	222
EPack Licence Notice	223
Technical Specification	224
Standards.....	224
Installation Categories	225
Specification.....	225
Power (at 45°C)	225
Physical	227
Environment.....	227
Operator Interface.....	230
Inputs/Outputs	230
Digital Inputs	231
Relay Specification	232
Fuse Holders Contacts Kit Specification.....	232
Mains Network Measurements	233
Communications	233

Safety Information

Important Information


Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this manual or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.





The addition of either symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

 DANGER
DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

 WARNING
WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

 CAUTION
CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE
NOTICE is used to address practices not related to physical injury.

Safety Notes

DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See applicable national standards e.g. NFPA70E, CSA Z462, BS 7671, NFC 18-510.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Refer to manual for installation and servicing.
- The product is not suitable for isolation applications, within the meaning of EN60947-1. Turn off all power supplying this equipment before working on the loads of the equipment.
- Turn off all power supplying this equipment before working on equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- If on receipt, the unit or any part within is damaged, do not install but contact your supplier.
- Do not disassemble, repair or modify the equipment. Contact your supplier for repair.
- This product must be installed, connected and used in compliance with prevailing standards and/or installation regulations.
- Do not exceed the device's ratings.
- The unit must be installed in an enclosure or cabinet connected to the protective earth ground.
- Electrically conductive pollution must be excluded from the cabinet in which the product is mounted.
- Do not allow anything to fall through the case apertures and ingress the product.
- Before any other connection is made, the protective earth ground terminal must be connected to a protective conductor.
- Protective conductor must be sized in compliance with local and national regulatory requirements.
- Tighten all connections in conformance with the torque specifications. Periodic inspections are required.
- High speed fuses (supplemental fuses in addition to branch circuit protective device), as listed in fusing sections, are mandatory to protect EPack against load short circuit.
- If opening of either the branch circuit protective device or the high-speed fuses (supplemental fuses) occurs, the product must be examined by suitably qualified personnel and replaced if damaged.
- A High-speed fuse (supplemental fuses in addition to branch circuit protective device) or a double protection fuse as listed in fusing sections is mandatory for 85Vac to 550Vac auxiliary supply.
- If opening of any fuses or branch circuit protection device that supply the 85Vac to 550Vac auxiliary supply occurs, first check the wiring. If the wiring is not damaged, do not replace the fuse and contact the manufacturer's local service center.
- The maximum voltage between any pole of the 85Vac to 550Vac auxiliary supply and all other terminals must be lower than 550Vac.
- The "24V auxiliary supply" is an SELV circuit. The supply Voltage must be derived from a SELV or PELV circuit.
- The I/O Input & Output, the Communications ports are SELV circuit. They must be connected to SELV or PELV circuit.

Failure to follow these instructions will result in death or serious injury.

DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- The relay output and the fuse holders contacts are compliant to the SELV requirements; they can be connected to SELV, PELV circuit or to voltage up to 230V (maximum value of rated operational voltage to earth:230V)
- Ensure all cables and wiring harness are secured using a relevant strain relief mechanism.
- Respect electrical installation requirements to ensure optimum IP rating.
- Replace doors and plug-in terminals before turning on power to this equipment.
- Use appropriate safety interlocks where personnel and/or equipment hazards exist.

Failure to follow these instructions will result in death or serious injury.

DANGER

HAZARD OF FIRE

- Product current rating must be greater than or equal to the maximum current of the load.
- With Current limit function by phase angle reduction, the product rating must be greater than or equal to the nominal current of the load and to Current limit function by phase angle reduction setting.
- The current limit function by phase angle reduction is not available with Intelligent Half Cycle (IHC), The product rating must be selected to cope with inrush current.
- Duty cycle current limiting features (in burst mode), does not limit the peak current value. The product rating must be selected to cope with the peak current value.
- This product does not contain any branch-circuit protection, the installer must add branch-circuit protection upstream of the unit.
- Branch circuit protection must be selected according to maximum current in each phase and must be rated in compliance with local and national regulatory requirements.
- Power connections: The cables must be rated 90°C stranded copper only, the cross section must be selected according to the branch circuit protection rating.
- The cables used to connect the EPack's auxiliary supply and voltage reference must be protected by branch-circuit protection. Such branch-circuit protection must comply with local and national regulatory requirements.
- Connection of two conductors in the same terminal is not permitted, partial or total loss of connection may create an overheat of the terminals.
- The conductor stripping length must be as stated in electrical installation.
- Respect mechanical installation requirements to allow heatsink to dissipate power.
- At commissioning ensure that under maximum load condition, the ambient temperature of the product will not exceed the limit stated in that manual.
- Heat-sink must be cleaned regularly. Periodicity depends on the local environment, but should not exceed 1 year.

Failure to follow these instructions will result in death or serious injury.

 **WARNING****UNINTENDED EQUIPMENT OPERATION**

- Do not use the product for critical control or protection applications where human or equipment safety relies on the operation of the control circuit.
- Signal and power voltage wiring must be kept separate from one another. Where this is impractical, all wires must be rated to the power voltage & shielded cables are recommended for signal wiring.
- This product has been designed for environment A (Industrial). Use of this product in environment B (domestic, commercial and light industrial) may cause unwanted electromagnetic disturbances in which cases the installer may be required to take adequate mitigation measures.
- For Electromagnetic Compatibility, panel or DIN rail to which product is attached must be grounded.
- Observe all electrostatic discharge precautions before handling the unit.
- Nominal current of product must be set between 25% & 100% of maximum current.
- At commissioning, ensure cybersecurity robustness of the installation.

Failure to follow these instructions can result in death, serious injury or equipment damage.

 **CAUTION****HOT SURFACE RISK OF BURNS**

- Allow heatsink to cool before servicing.
- Do not allow flammable or heat-sensitive parts in the immediate vicinity of heatsink.

Failure to follow these instructions can result in injury or equipment damage.

NOTICE**UNINTENDED EQUIPMENT OPERATION**

- EtherCAT slave controllers will reflect any frame back onto the network, therefore, it should not be connected to an office network as this may result in a broadcast storm.
- EtherCAT communication is not available as software upgrade option. If EtherCAT is required, order EtherCAT communication together with the product.
- PROFINET protocol and the Ethernet/IP protocol are not available as software upgrade option on product with EtherCAT communication. Do not order EtherCAT communication if PROFINET protocol or Ethernet/IP protocol are required.
- Non-volatile memory must not be accessed in write mode more than 10,000 times during the whole lifetime of the product.

Failure to follow these instructions can result in non-functional equipment.

Reasonable use and responsibility

The information contained in this manual is subject to change without notice. While every effort has been made to ensure the accuracy of the information, your supplier shall not be held liable for errors contained herein.

EPack is an “AC semiconductor controller for non-motor loads” designed according to IEC60947-4-3 & UL60947-4-1, it meets the requirements of the Low voltage and EMC European Directives which covers safety and EMC aspects.

Use in other applications, or failure to observe the installation instructions of this manual may impair safety or EMC.

The safety and EMC of any system incorporating this product is the responsibility of the assembler/installer of the system.

Failure to use approved software/hardware with our hardware products may result in injury, harm, or improper operating results

Eurotherm shall not be held responsible for any damage, injury, losses or expenses caused by inappropriate use of the product (EPack), or failure to comply with these instructions.

SELV











SELV is defined (in IEC60947-1) as an electrical circuit in which the voltage cannot exceed 'ELV' under normal conditions or under single fault conditions, including earth ground faults in other circuits. The definition of ELV is complex as it depends on environment, signal frequency, etc. See IEC 61140 for further details.

The I/O connector (5-way) & auxiliary supply (24V ac/dc, 2-way) are compliant to the SELV requirements.

The alarm relay output and the fuse holder contacts are compliant with the SELV requirements; they can be connected to SELV or to voltage up to 230V (Rated insulation voltage U_i : 230V).

Symbols Used in the Instrument Labeling

One or more of the symbols below may appear as a part of the instrument labeling.


	Protective conductor terminal		Risk of electric shock
	AC supply only		Precautions against static electrical discharge must be taken when handling this unit.
	Underwriters laboratories listed mark, for Canada and the U.S.		Refer to the manual for instructions
	Do not touch heatsink Hot Surface		CE Mark. Indicates compliance with the appropriate European Directives and Standards
	EAC (EurAsian Conformity) customs union mark of conformity		Regulatory Compliance Mark (RCM) to Australian Communication and Media Authority

Hazardous Substances

This product conforms to European **R**estriction **o**f **H**azardous **S**ubstances (RoHS) (using exemptions) and **R**egistration, **E**valuation, **A**uthorisation and Restriction of **C**hemicals (REACH) Legislation.

RoHS Exemptions used in this product involve the use of lead. China RoHS legislation does not include exemptions and so lead is declared as present in the China RoHS Declaration.

Californian law requires the following notice:

 **WARNING:** This product can expose you to chemicals including lead and lead compounds which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to:

<http://www.P65Warnings.ca.gov>

Cybersecurity

Introduction

When utilizing EPack controllers’ range in an industrial environment, it is important to take ‘cybersecurity’ into consideration: in other words, the installation’s design should aim to prevent unauthorized and malicious access. This includes both physical access (for instance via the front fascia), and electronic access (via network connections and digital communications).

WARNING
<p>UNINTENDED EQUIPMENT OPERATION</p> <ul style="list-style-type: none"> At commissioning, ensure cybersecurity robustness of the installation. <p>Failure to follow these instructions can result in death, serious injury or equipment damage.</p>

To minimize any potential loss of control when communicating across a network via a third-party device (i.e. controller, PLC or configuration tool), ensure all system hardware, software and network design are correctly configured and commissioned for maximum cybersecurity robustness.

Cybersecurity Good Practices

Overall design of a site network is outside the scope of this manual. The Cybersecurity Good Practices Guide, Part Number HA032968 provides an overview of principles to consider. This is available from www.eurotherm.co.uk.

Typically, an industrial controller such as the EPack power controller should not be placed on a network with direct access to the public Internet. Rather, good practise involves locating these devices on a firewalled network segment, separated from the public Internet by a so-called ‘demilitarized zone’ (DMZ).

Comms Port and Channel Enabled by Default

EPack controllers’ range supports Ethernet connectivity by default (see Communications chapter), including the Bonjour™ service discovery protocol. Bonjour™ is an implementation of Zeroconf and it enables the controller to be automatically discovered by other devices on the network without the need for manual intervention. Bonjour™ is released under a terms-of-limited-use license by Apple.

Note: EtherCAT product supports Ethernet connectivity over EtherCAT (EoE).

By default, the following comms ports are opened to traffic:

Port	Service
5353	UDP Zeroconf
502	TCP ModbusTCP

If Ethernet/IP option is enabled (not available on EtherCAT products), the following additional comms ports are opened to traffic:

Port		Service
2222	UDP	
22112	UDP	Ethernet-IP-2
44818	TCP	
44818	UDP	

If PROFINET option is enabled (see "PROFINET" on page 90, not available on EtherCAT products), the following additional comms ports are opened to traffic:

Port		Service
34964	UDP	Profinet-cm
49152	UDP	Profinet RPC mapper

Comms Port and Channel Disabled by Default

By default, the following comms ports are closed to traffic, but can be temporarily opened for operation such as firmware upgrade:

Port		Service
80	TCP	http
69	UDP	tftp

In addition, if DHCP mode is used (see "Communications" on page 65), the following port can be opened:

Port		Service
68	UDP	bootp

Introduction

This document describes the installation, operation and configuration of a single phase EPack Power Controller with EtherCAT option. The unit includes the following analog and digital inputs and outputs, fitted as standard:

- Two digital inputs (contact closure or voltage level), of which one of the digital inputs can be configured as 10V user output.
- One analog input.
- One change-over relay under software control, configurable by the user.
- Also fitted are a pair of RJ45 EtherCAT connectors.

Chapter [Installation](#) provides details on connector locations and pinouts.

The operator interface consists of a 1.44 inch square TFT display and four pushbuttons for navigation and data selection.

The single phase EPack comes in four versions with maximum load currents of: 32A, 63A, 100A and 125A.

The supply voltage for the units can be specified as either low voltage (24V ac/dc) or line voltage (85 to 550V ac). The choice is made at time of order and cannot be changed in the field.

Unpacking the Units


 DANGER
<p>HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH</p> <ul style="list-style-type: none">• If on receipt, the unit or any part within is damaged, do not install but contact your supplier. <p>Failure to follow these instructions will result in death or serious injury.</p>

The units are despatched in a special pack, designed to give adequate protection during transit. If any of the outer boxes show signs of damage, open them immediately and examine the instrument. If there is evidence of damage, do not operate the instrument and contact your local representative for instructions.

After the instrument has been removed from its packing, examine the packing to ensure that all accessories and documentation have been removed. Then store the packing for future transport requirements.


Order Code

EPack power controller is ordered using a short code for hardware and chargeable software options code.

 DANGER
<p>HAZARD OF FIRE</p> <ul style="list-style-type: none"> Product current rating must be greater than or equal to the maximum current of the load. <p>Failure to follow these instructions can result in death, serious injury or equipment damage.</p>

Calculate the maximum current of the load by taking account of load resistive tolerance (tolerance and variation due to temperature) and voltage tolerance.

Current limit function by phase angle reduction may be selected to limit the inrush current of the load and reduce the current rating of the product.

 DANGER
<p>HAZARD OF FIRE</p> <ul style="list-style-type: none"> With Current limit function by phase angle reduction the product rating must be greater than or equal to the nominal current of the load and to Current limit function by phase angle reduction setting. <p>Failure to follow these instructions can result in death, serious injury or equipment damage.</p>

NOTICE
<p>UNINTENDED EQUIPMENT OPERATION</p> <ul style="list-style-type: none"> EtherCAT communication is not available as software upgrade option. If EtherCAT is required, order EtherCAT communication together with the product. PROFINET protocol and the Ethernet/IP protocol are not available as software upgrade option on product with EtherCAT communication. Do not order EtherCAT communication if PROFINET protocol or Ethernet/IP protocol are required. <p>Failure to follow these instructions can result in non-functional equipment.</p>

EPack supports the Modbus/TCP protocol. whatever the communication protocol is.

EPack with EtherCAT communication protocol supports the Modbus/TCP protocol by using Ethernet over EtherCAT (EoE).

PROFINET protocol is available as software upgrade option on product with Modbus TCP communication protocol and Ethernet/IP protocol

Ethernet/IP protocol is available as software upgrade option on product with Modbus TCP communication protocol and PROFINET protocol.

Basic Product Coding

Product Coding



Model	
EPACK-1PH	Power Controller
1 Maximum Current	
16A	16 amps
25A	25 amps
32A	32 amps
40A	40 amps
50A	50 amps
63A	63 amps
80A	80 amps
100A	100 amps
125A	125 amps
2 Auxillary Power Supply ^{***}	
500V	500V max
24V	24V ac/dc
3 Reserved	
XXX	Reserved
4 Control Option	
V2	V ² control (standard)
I2	I ² control
V2CL	V ² with current limitation by threshold
PWRCL	Power control with current limit
5 Transfer Option	
XXX	-
TFR	I ² Transfer
6 Energy Option	
XXX	-
EMS	Energy measurement

7 Comms Option	
TCP	Modbus TCP (standard)
IP	Ethernet IP
PN	ProfINET
CAT ^{***}	EtherCAT
8 OEM Security	
XXX	-
OEM	OEM Security
9 Warranty	
XXXXXX	Standard Warranty
WL005	5 Year Warranty
USWL3	US Extended Warranty
10 Custom Labelling	
XXXXXX	Standard (Eurotherm)
FXXXX	Special Label
11 Graphical Wiring	
XXX	Standard configuration (no graphical edition)
GWE	Graphical Wiring Editor
12 Fuse	
XXX	Without fuse
HSP	High speed fuse without microswitch
HSM	High speed fuse with microswitch
13 Configuration	
XXXXXX	Default
LC	Long code
EEnnn	Customer clone number

Optional Configuration	
14 Nominal Load Current	
NNNA	1 - Value field 1
15 Nominal Line Voltage	
100V	100 volts
110V	110 volts
115V	115 volts
120V	120 volts
127V	127 volts
200V	200 volts
208V	208 volts
220V	220 volts
230V	230 volts
240V	240 volts
277V	277 volts
380V	380 volts
400V	400 volts
415V	415 volts
440V	440 volts
460V	460 volts
480V	480 volts
500V	500 volts
16 Load Type	
XX	Resistive
TR	Transformer primary
17 Heater Type	
XX	Resistive
MOSI	Molybdenum
CSI	Silicon Carbide
SWIR	Short Wave Infra-Red
18 Firing Mode	
PA	Phase angle
IHC	Intelligent half cycle
BF	Variable Modulation
	Burst firing (default 16 cycles)
FX	Fix modulation period (default 2 seconds)
LGC	Logic mode
19 Analog Input Function	
XX	None
SP	Setpoint
HR	Setpoint limit
IL	Current limit
TS	Current transfer span
20 Analog Input Type	
0V	0-10 volts
1V	1-5 volts
2V	2-10 volts
5V	0-5 volts
0A	0-20 mA
4A	4-20mA
21 Digital Input 2 Function	
XX	None
LG	Setpoint for logic mode
AK	Alarm acknowledgement
RS	Remote setpoint selection
FB	Fuse blown
SU	10V supply
22 Reserved	
-	Default value for skype
XXX	Reserved

^{***}Hardware variant, not available as software upgrade option

Software Upgrade Options



1 Serial number instrument		5 Energy option	
nnnn	Serial number	XXX TFR	No change Energy measurement
2 Current ratings		6 Comms option	
XXX 16A-25A 16A-32A 25A-32A 40A-50A 40A-63A 50A-63A 80A-100A	No change Upgrade 16A to 25A Upgrade 16A to 32A Upgrade 25A to 32A Upgrade 40A to 50A Upgrade 40A to 63A Upgrade 50A to 63A Upgrade 80A to 100A	XXX IP PN	No change Ethernet/IP Profinet
3 Control option		7 Graphical wiring	
XXX V2-V2CL V2-PWRCL V2CL-PWRCL	no change Upgrade V ² to V ² CL Upgrade V ² to PWRCL Upgrade I ² to PWR	XXX GWE	No change Graphical wiring editor
4 Transfer option		8 OEM security	
XXX TFR	No change I ² Transfer	XXX OEM	No change OEM security

NOTICE

UNINTENDED EQUIPMENT OPERATION

- EtherCAT communication is not available as software upgrade option. If EtherCAT is required, order EtherCAT communication together with the product.
- PROFINET protocol and the Ethernet/IP protocol are not available as software upgrade option on product with EtherCAT communication. Do not order EtherCAT communication if PROFINET protocol or Ethernet/IP protocol are required.

Failure to follow these instructions can result in non-functional equipment.

EPack supports the Modbus/TCP protocol. whatever the communication protocol is.

EPack with EtherCAT communication protocol supports the Modbus/TCP protocol by using Ethernet over EtherCAT (EoE).

Installation

Mechanical Installation

Mounting details

DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See applicable national standards e.g. NFPA70E, CSA Z462, BS 7671, NFC 18-510.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Turn off all power supplying this equipment before working on equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- If on receipt, the unit or any part within is damaged, do not install but contact your supplier.
- Do not disassemble, repair or modify the equipment. Contact your supplier for repair.
- This product must be installed, connected and used in compliance with prevailing standards and/or installation regulations.
- Do not exceed the device's ratings.

Failure to follow these instructions will result in death or serious injury.

DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- The unit must be installed in an enclosure or cabinet connected to the protective earth ground.

Failure to follow these instructions will result in death or serious injury.

Notes:

1. CE: protective earth ground minimum size must be selected according to IEC 60364-5-54 table 54.2 or IEC61439-1 table 5 or applicable national standards.
2. U.L.: protective earth ground minimum size must be selected according to NEC table 250.122 or NFPA79 table 8.2.2.3 or applicable national standards.

 **DANGER****HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH**

- Electrically conductive pollution must be excluded from the cabinet in which the product is mounted.

Failure to follow these instructions will result in death or serious injury.

Notes:

1. The product has been designed for pollution degree 2 according to IEC60947-1 definition: Normally, only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation may be expected.
2. Electrically conductive pollution must be excluded from the cabinet in which the product is mounted. To ensure a suitable atmosphere in conditions of conductive pollution, fit adequate air conditioning/filtering/cooling equipment to the air intake of the cabinet, e.g. fitting fan-cooled cabinets with a fan failure detection device or a thermal safety cut-out.

 **DANGER****HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH**

- Do not allow anything to fall through the case apertures and ingress the product.

Failure to follow these instructions will result in death or serious injury.

Note: Conductive or non-conductive parts which ingress the product may reduce or short circuit the insulation barriers inside the product.

 **WARNING****UNINTENDED EQUIPMENT OPERATION**

- Observe all electrostatic discharge precautions before handling the unit.

Failure to follow these instructions can result in death, serious injury or equipment damage.

Mechanical installation requirements

 **DANGER**

HAZARD OF FIRE

- Respect mechanical installation requirements to allow heatsink to dissipate power.

Failure to follow these instructions can result in death or serious injury.

Notes:

1. The product is designed to be mounted vertically.
2. There must be no obstructions (above or below) which could reduce or hamper airflow.
3. If more than one instance of the product is in the same cabinet, they must be mounted in such a way that air from one unit is not drawn into another.
4. The gap between two EPack devices must be at minimum 10mm.
5. The gap between EPack and cable tray must be at least those defined in the table in Mounted clearance dimensions.

 **DANGER**

HAZARD OF FIRE

- At commissioning ensure that under maximum load condition, the ambient temperature of the product will not exceed the limit stated in that manual.

Failure to follow these instructions can result in death or serious injury.

Notes:

1. EPack has been designed for a maximum temperature of 45°C (113°F) at 1000m (3281ft) altitude at nominal current & 40°C (104°F) at 2000m (6562ft) altitude at nominal current.
2. At commissioning ensure that the ambient temperature inside the cabinet does not exceed the limit under maximum load condition.

 **DANGER**

HAZARD OF FIRE

- Heat-sink must be cleaned regularly. Periodicity depends on the local environment, but should not exceed 1 year.

Failure to follow these instructions can result in death or serious injury.

 **CAUTION**

HOT SURFACE RISK OF BURNS

- Do not allow flammable or heat-sensitive parts in the immediate vicinity of heatsink.

Failure to follow these instructions can result in injury or equipment damage.

Mounted clearance dimensions

Phase:	single phase			
Amps:	16 - 32A	40 - 63A	80 - 100A	125A
E-Pack clearance dimensions mm (inches):				
between cable tray and E-Pack	70 (2.76)	100 (3.94)	150 (5.91)	150 (5.91)
between two cable trays	270 (10.6)	330 (13)	475 (18.7)	475 (18.7)
between or side by side another E-Pack	10 (.39)	10 (.39)	10 (.39)	10 (.39)

Figures 4 to 7 show dimensions for the various units.

The units are designed for DIN Rail or bulkhead mounting using the mounting fixings supplied.

Bulkhead Mounting

32A and 63A Units

For Bulkhead mounting, fit the upper bracket 'A' to the rear of the unit by removing screw 'B' and associated shakeproof washer, offering the bracket up to the unit, and then securing it by installing screw 'B' ensuring that the bracket is correctly oriented (as shown) and that the shakeproof washer is fitted between the screw head and the bracket.

Use a screwdriver with a 3mm AF hexagonal bit. The recommended tightening torque is 1.5 Nm (1.1 lb-ft).

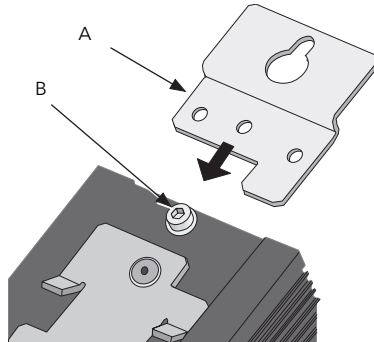


Figure 1 Fitting upper bulkhead mounting bracket (32A unit shown; 63A units similar)

80A, 100A and 125A Units

For bulkhead mounting, fit the upper bracket 'A' to the rear of the unit by removing screws 'B' and associated shakeproof washers, offering the bracket up to the unit, and then securing it using screws 'B' ensuring that the bracket is correctly oriented (as shown) and that the shakeproof washers are fitted between the screw heads and the bracket. The relevant screwdriver should have a 3mm AF hexagonal bit. The recommended tightening torque is 1.5Nm (1.1 lb-ft).

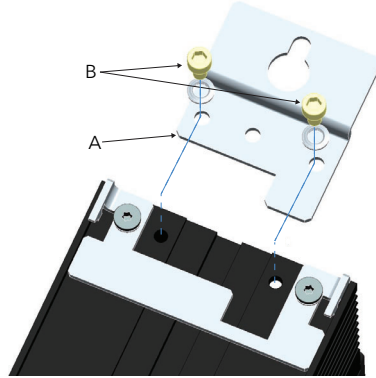


Figure 2 Bulkhead mounting 80A/100A unit shown (125A similar)

DIN Rail Mounting

32A and 63A Units

The 32A and 63A units can be mounted using a standard 7.5mm or 15mm DIN rail, mounted horizontally.

80A, 100A and 125A Units

These higher power units can be mounted, using two horizontal, parallel, 7.5mm or 15mm DIN rails, as shown below.

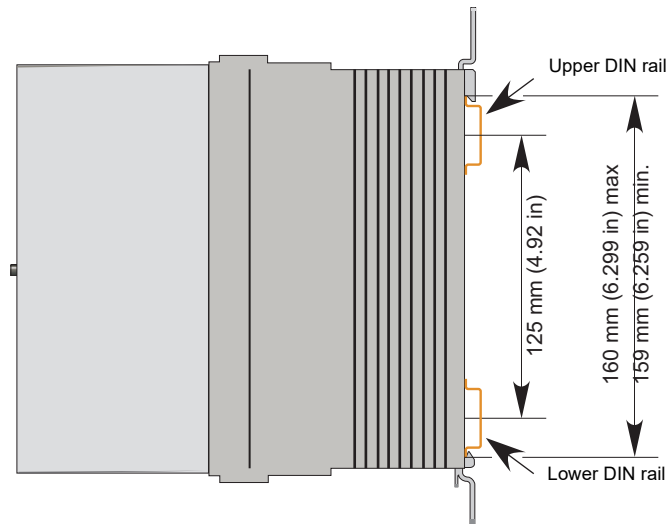


Figure 3 DIN rail mounting details for 80A, 100A and 125A units

Dimensions

16A to 32A unit dimensions

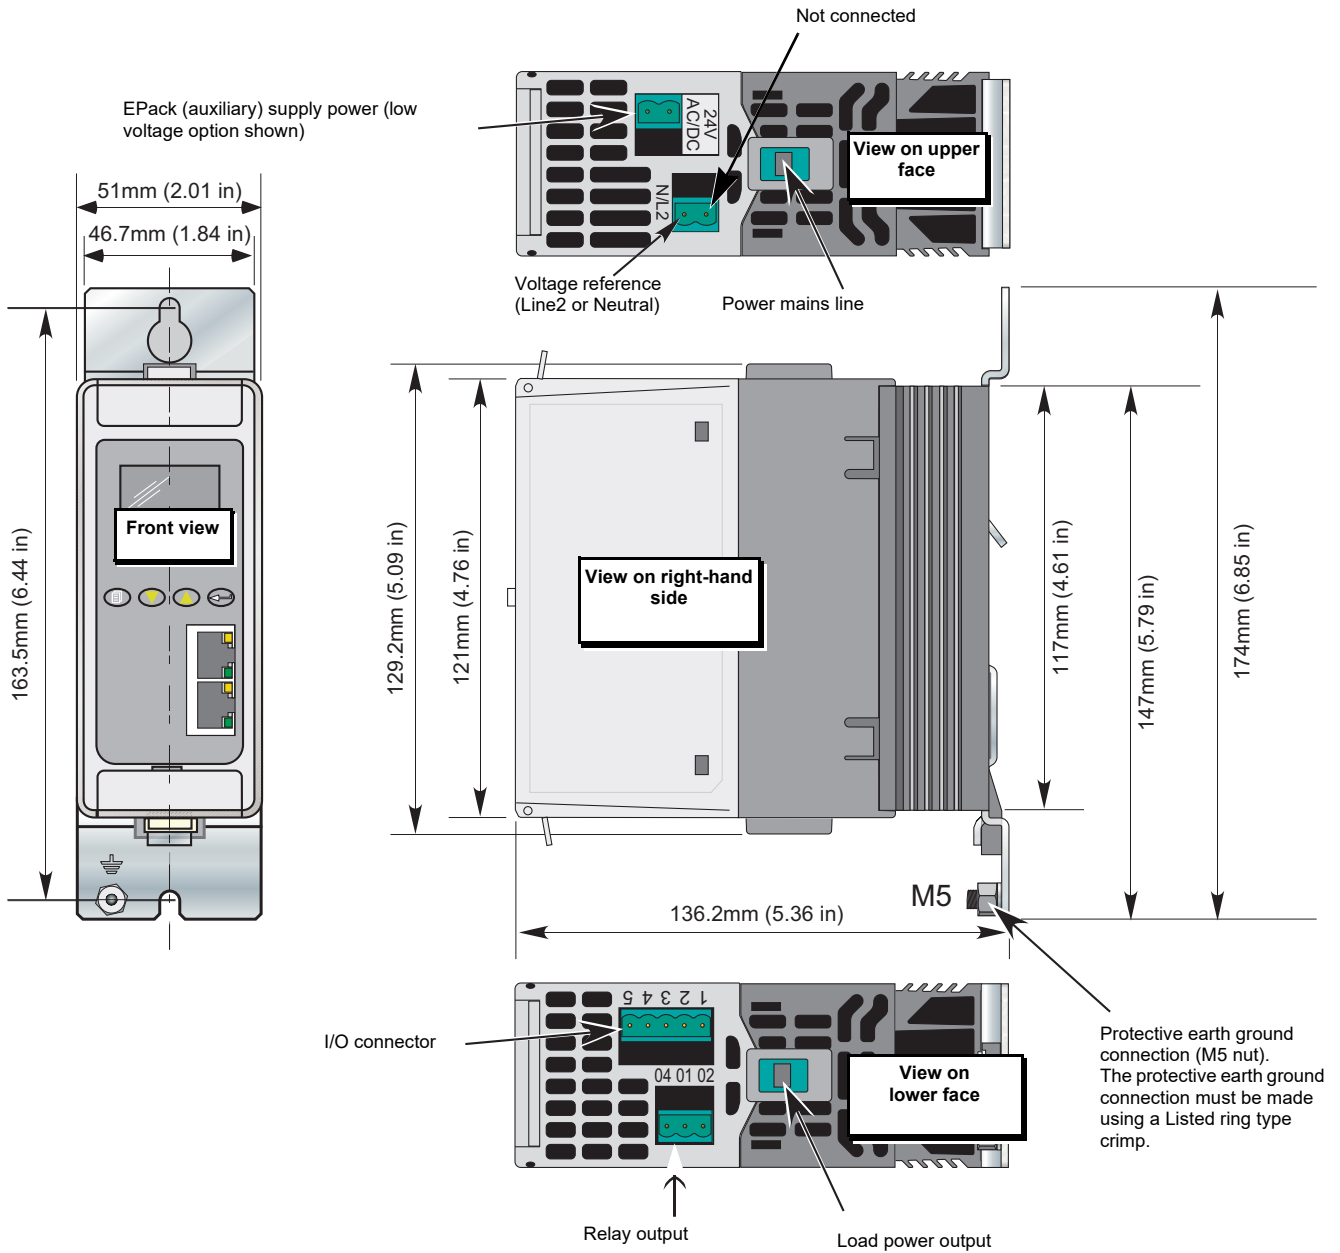


Figure 4 Mechanical installation details (16A to 32A units)

40A to 63A unit dimensions

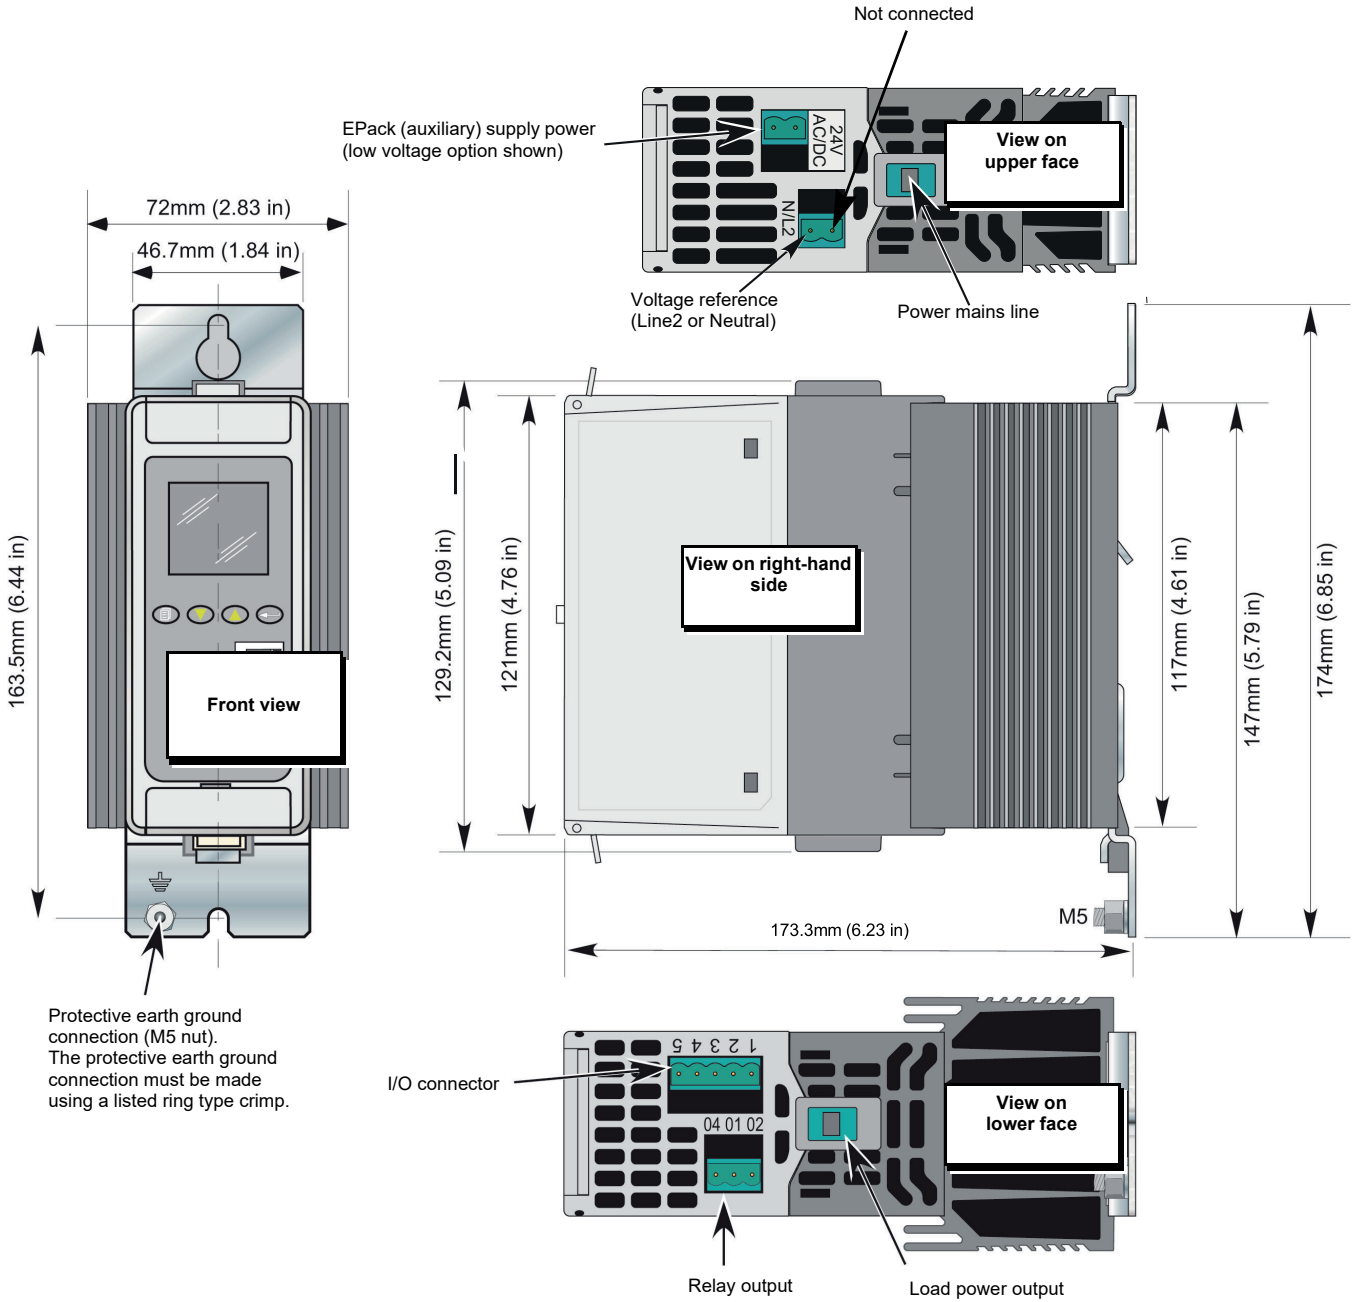


Figure 5 Mechanical installation details (40A to 63A units)

80A to 100A unit dimensions

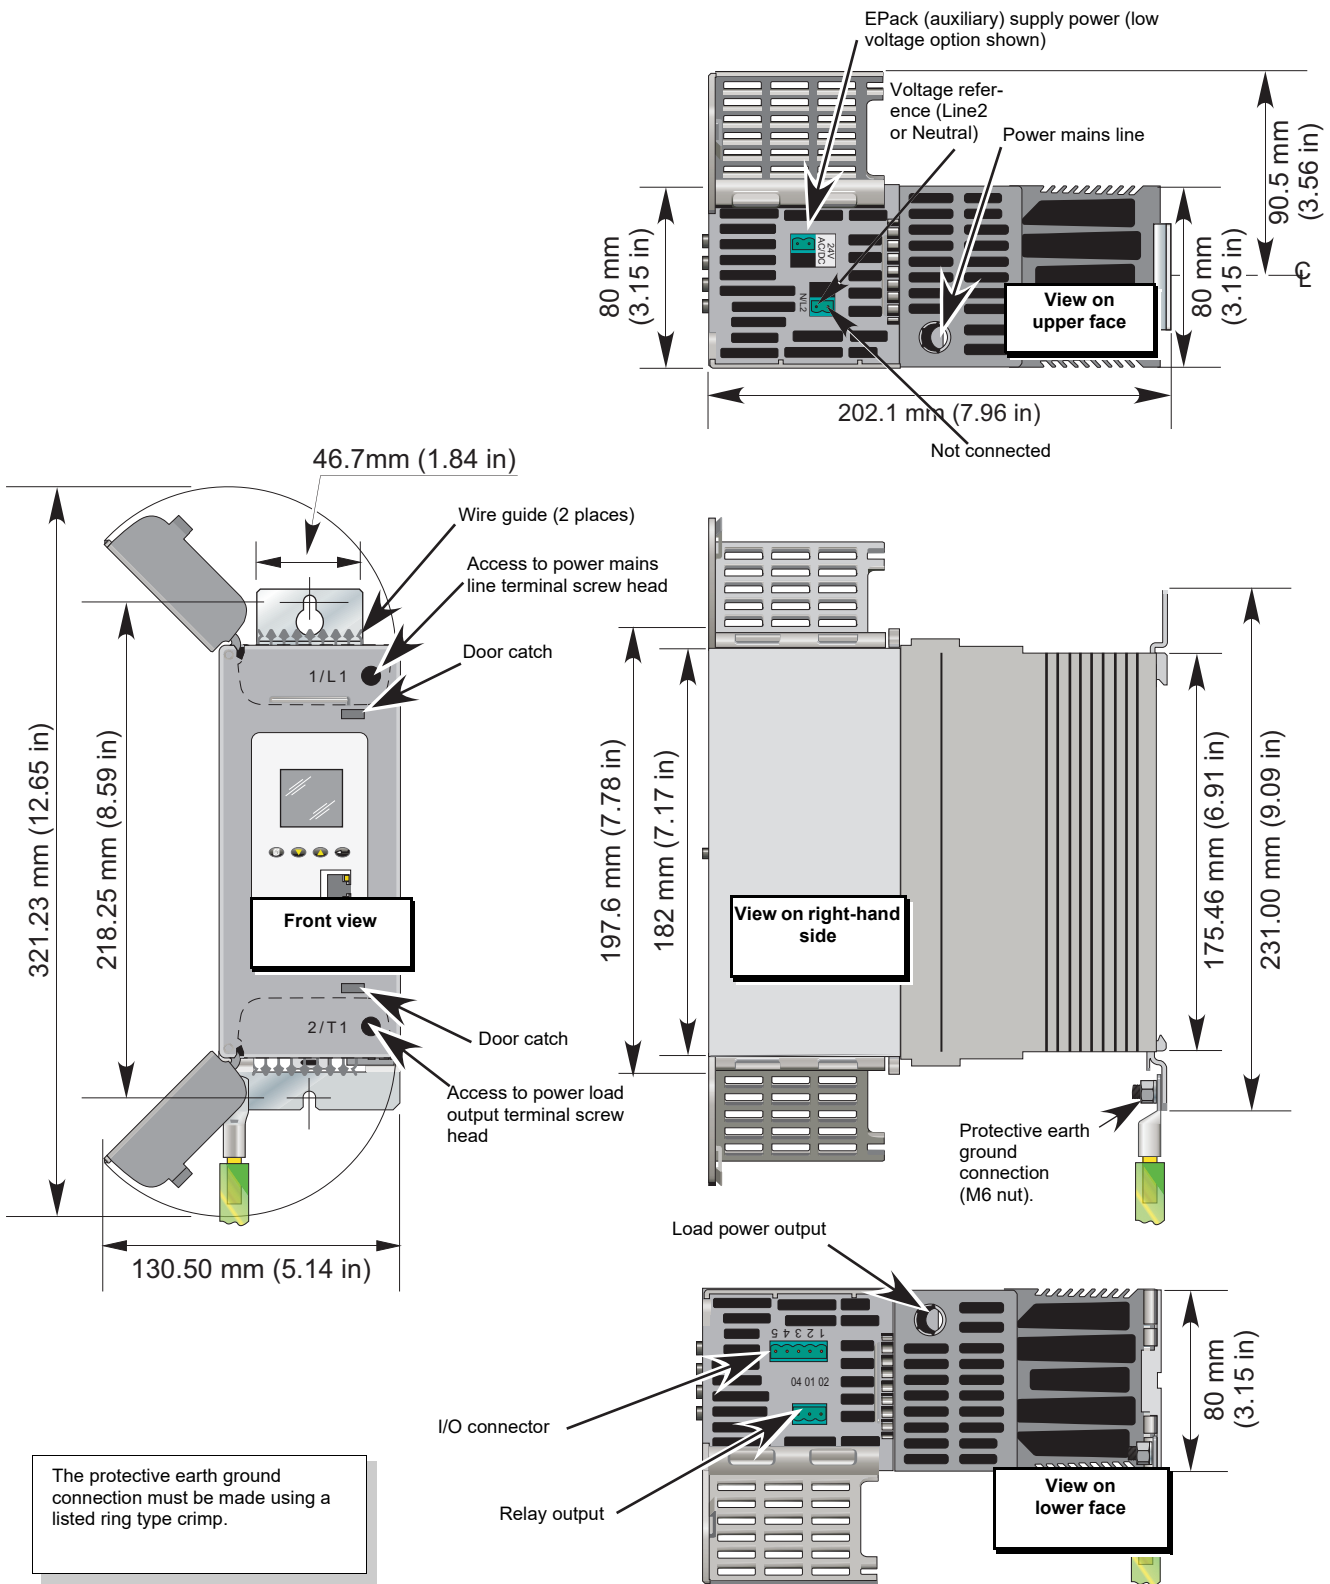


Figure 6 Mechanical installation details (80A to 100A units) (doors open).

125A unit dimensions

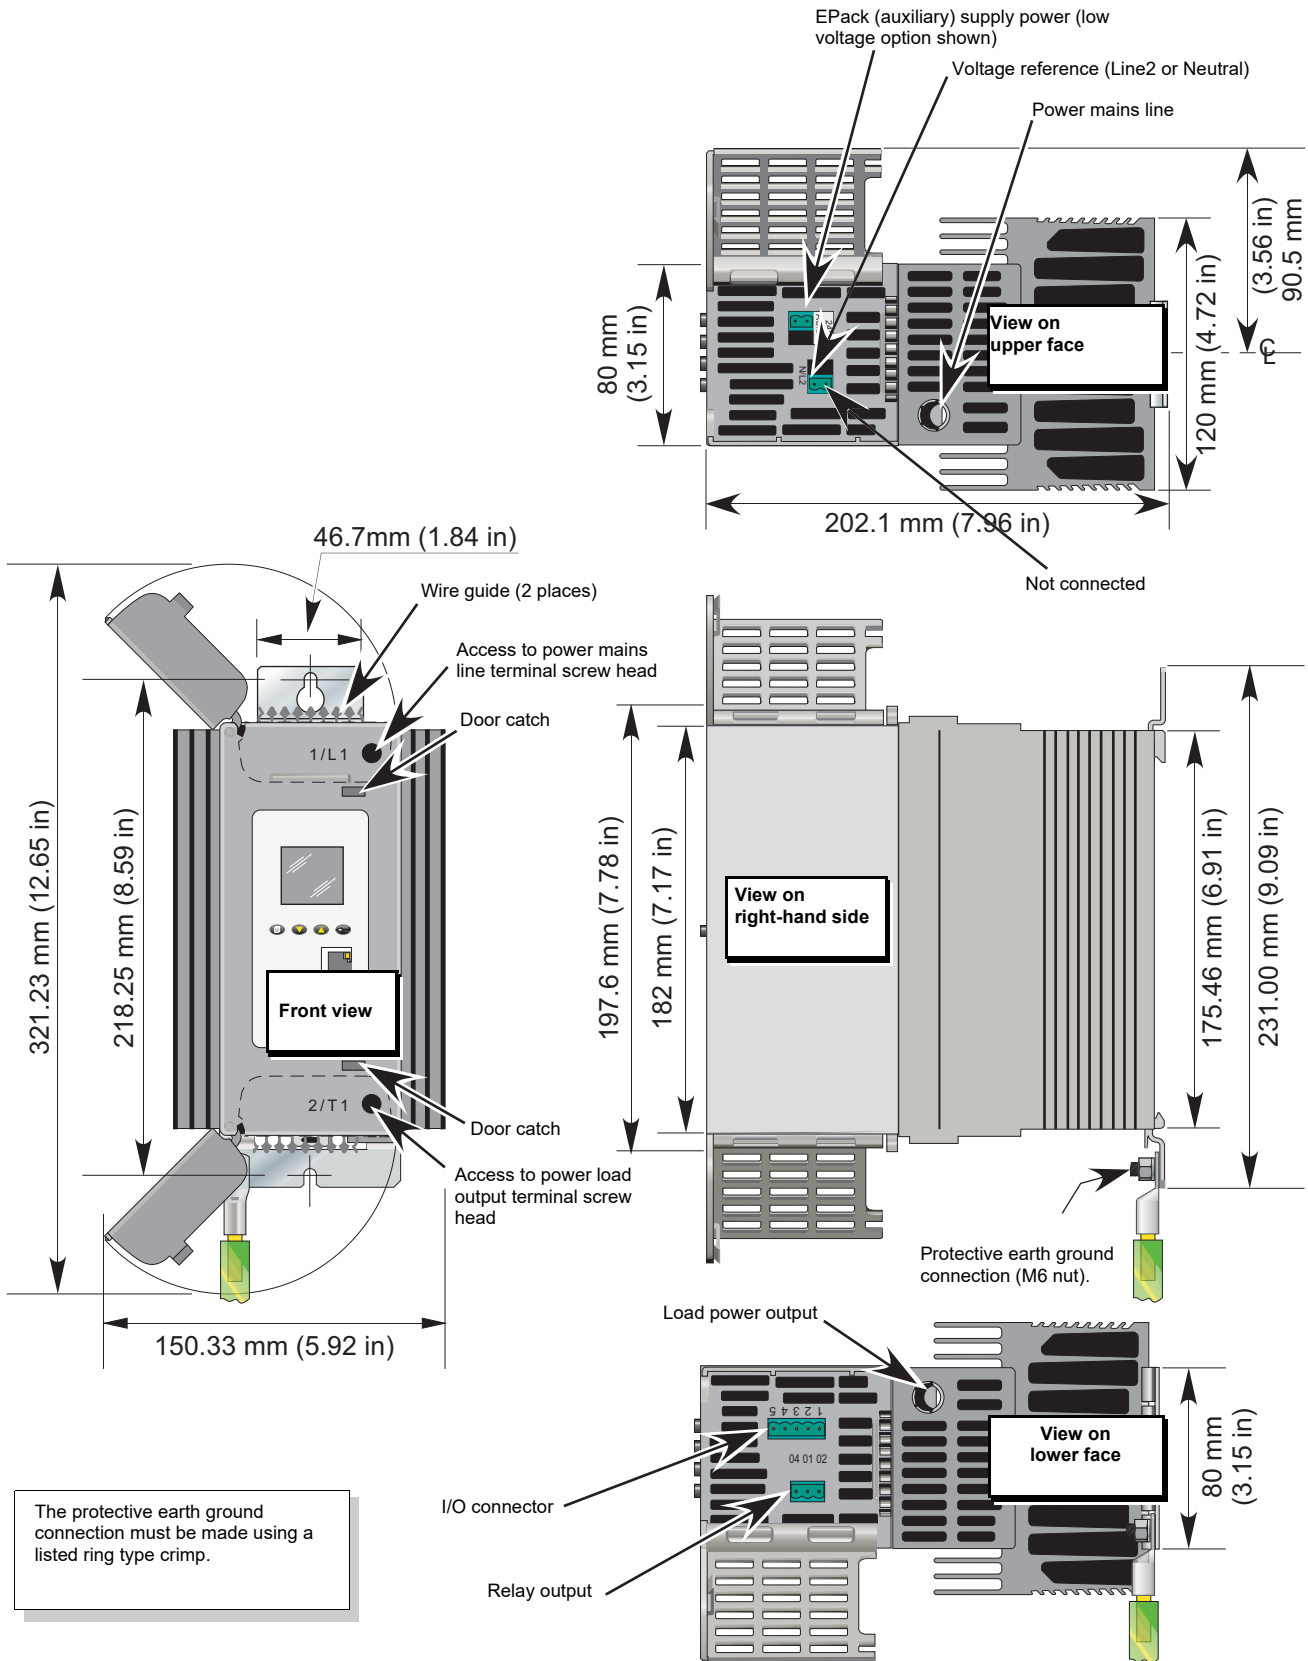



Figure 7 Mechanical installation details (125A units) (Doors open).


Electrical Installation

 **DANGER**

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See applicable national standards e.g. NFPA70E, CSA Z462, BS 7671, NFC 18-510.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Turn off all power supplying this equipment before working on equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- If on receipt, the unit or any part within is damaged, do not install but contact your supplier.
- Do not disassemble, repair or modify the equipment. Contact your supplier for repair.
- This product must be installed, connected and used in compliance with prevailing standards and/or installation regulations.
- Do not exceed the device's ratings.

Failure to follow these instructions will result in death or serious injury.

 **DANGER**

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- Do not allow anything to fall through the case apertures and ingress the product.

Failure to follow these instructions will result in death or serious injury.

Note: Conductive or non-conductive parts which ingress product may reduce or short the insulations barriers inside the product.

 **DANGER**

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- Ensure all cables and wiring harness are secured using a relevant strain relief mechanism.

Failure to follow these instructions will result in death or serious injury.

Note: Wires may slip out of the terminals.

**WARNING****UNINTENDED EQUIPMENT OPERATION**

- Observe all electrostatic discharge precautions before handling the unit.
- Signal and power voltage wiring must be kept separate from one another. Where this is impractical, all wires must be rated to the power voltage & shielded cables are recommended for signal wiring.
- For Electromagnetic Compatibility, panel or DIN rail to which product is attached must be grounded.

Failure to follow these instructions can result in death, serious injury or equipment damage.

Connection Details

**DANGER****HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH**

- Before any other connection is made, the protective earth ground terminal must be connected to a protective conductor.
- Protective conductor must be sized in compliance with local and national regulatory requirements.

Failure to follow these instructions will result in death or serious injury.

The earth connection must be made by using a lug terminal of size as given in Table 1, "Connection Details". The cables must be rated 90°C stranded copper only.

- CE: The protective earth ground cable minimum size must be selected according to IEC 60364-5-54 table 54.2 or IEC61439-1 table 5 or applicable national standards. The protective earth ground connection must be made to the unit with a ring type crimp terminal, using the nut and shakeproof washer supplied (M5 for 16A to 63A units and M6 for 80A to 125A units).
- U.L.: The protective earth ground cable cross sectional area should be selected according to NEC table 250.122 or NFPA79 table 8.2.2.3 or applicable national standards. The protective earth ground connection must be made to the unit with a U.L. listed ring type crimp terminal, using the nut and shakeproof washer supplied (M5 for 16A to 63A units and M6 for 80A to 125A units).

 **DANGER****HAZARD OF FIRE**

- Power connections: The cables must be rated 90°C stranded copper only, the cross section must be selected according to the branch circuit protection rating.

Failure to follow these instructions will result in death or serious injury.

CE: Wire conductor cross sections must comply with IEC 60364-5-52 or applicable national standards

U.L.: Wire conductor cross sections must comply with NEC Table 310.15(B)(16) (formerly Table 310.16) taking account of table 310.15(B)(2) for the ampacity correction factors or NFPA79 Table 12.5.1 taking account of Table 12.5.5(a) for the ampacity correction factors or applicable national standards.

Table 1, "Connection Details" gives details of tightening torques for the various supply power and signal wiring connections.

Table 1: Connection Details

Terminals	Product Rating	Terminal Capacity ¹		Wire Type	Torque	Comments
		mm ²	AWG			
Supply voltage (1/L1) and Load supply (2/T1)	16A to 63A	1.5mm ² to 16mm ²	AWG 14 to AWG 6 ²	Stranded copper Rated 90°C (194°F)	1.7Nm (15lb in)	Flat-bladed screwdriver 4 x 0.8mm (5/32in x 0.0315in) or 4.5 x 0.8mm (7/32in x 0.0315in)
	80A to 125A	10mm ² to 50mm ²	AWG 8 to AWG 2/0		5.6Nm (50lb in)	Flat-bladed screwdriver 5.5 x 1mm (7/32in x 0.039in) or 6.5 x 1.2mm (1/4in x 0.047in)
Protective earth ground	16A to 63A	M5 ring-type crimp terminal			2.5Nm (22lb in)	U.L.: Listed ring-type crimp terminal must be used
	80A to 125A	M6 ring-type crimp terminal			5.6Nm (50lb in)	U.L.: Listed ring-type crimp terminal must be used
Neutral Reference (N/L2) (2-way) Supply (24Vac/dc) (2-way) Supply (85V-550Vac)(3-way) I/O connector (5-way) Relay connector (3-way)	All	0.25mm ² to 2.5mm ²	AWG 24 to AWG 12	Stranded copper Rated 75°C (167°F)	0.56Nm (5lb in)	Flat-bladed screwdriver 3.5 x 0.6mm (1/8in x 0.0236in)

1. AWG (American Wire Gauge) for USA and Canada (according to cUL standard); section in mm² for IEC countries (according to IEC/EN standard).
2. Use U.L. listed crimp terminals YEV4CP20X75FX, from Burndy (E9498), to connect AWG 4 wire to terminal.

 **DANGER****HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH**

- Tighten all connections in conformance with the torque specifications. Periodic inspections are required.

Failure to follow these instructions will result in death or serious injury.

See Table 1, "Connection Details".

Wires are not properly retained in terminals with insufficient torque.

Insufficient torque may increase the contact resistance:

- The protective earth ground connection may be too resistive. In case of short circuit between live parts and heatsink, the heatsink may reach a dangerous voltage.
- The power terminals will overheat.

Excessive torque may damage the terminal.

 **DANGER****HAZARD OF FIRE**

- Connection of two conductors in the same terminal is not permitted.

Failure to follow these instructions will result in death or serious injury.


Partial or total loss of connection as a result of attempting to connect two or more conductors in the same terminal results in an overheat of the terminals.

See Table 1, "Connection Details".


Auxiliary supply

The auxiliary supply connections (to operate the EPack unit) are terminated using a 2-way (24V ac/dc version) or 3-way (85 to 550Vac version) connector, located on the upper side of the unit, as shown in [Figure 8](#) and [Figure 9](#).

24V ac/dc auxiliary supply

 DANGER
HAZARD OF FIRE
<ul style="list-style-type: none"> The cables used to connect the EPack’s auxiliary supply and voltage reference must be protected by branch-circuit protection. Such branch-circuit protection must comply with local and national regulatory requirements.
Failure to follow these instructions will result in death or serious injury.


- CE: branch-circuit protection must be selected according to IEC 60364-4-43 or applicable local regulations.
- UL: branch-circuit protection must be selected according to NEC article 210.20, it is necessary for compliance with National Electric Code(NEC) requirements.

 DANGER
HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH
<ul style="list-style-type: none"> The “24V auxiliary supply” is an SELV circuit. The supply Voltage must be derived from a SELV or PELV circuit.
Failure to follow these instructions will result in death or serious injury.

SELV is defined (in IEC60947-1) as an electrical circuit in which the voltage cannot exceed 'ELV' under normal conditions or under single fault conditions, including earth ground faults in other circuits.

The definition of ELV is complex as it depends on environment, signal frequency, etc. See IEC 61140 for further details.

85 to 550Vac auxiliary supply

 DANGER
HAZARD OF FIRE
<ul style="list-style-type: none"> The cables used to connect the EPack’s auxiliary supply and voltage reference must be protected by branch-circuit protection. Such branch-circuit protection must comply with local and national regulatory requirements.
Failure to follow these instructions will result in death or serious injury.

Branch circuit protection is mandatory to protect the cable used to connect the auxiliary supply.

- CE: branch-circuit protection must be selected according to IEC 60364-4-43 or applicable local regulations.
- UL: branch-circuit protection must be selected according to NEC article 210.20, it is necessary for compliance with National Electric Code(NEC) requirements.

⚠ DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- A High-speed fuse (supplemental fuses in addition to branch circuit protective device) or a double protection fuse as listed in "Fusing" on page 213 is mandatory for 85Vac to 550Vac auxiliary supply.

Failure to follow these instructions will result in death or serious injury.

This fuse is necessary to avoid the 85Vac to 550Vac auxiliary supply to emit flame or molten element in case of breakdown of a component.

High-speed fuse (supplemental fuse) does not protect the wiring, they must be fitted **(in addition to branch circuit protective device)**.

Double protection fuse comprises a branch circuit fuse and a high-speed fuse.

Double protection fuses must be selected according to applicable national standards

Branch circuit protection fuses standards in USA/Canada differ from IEC standards (e.g; Europe (CE)). Therefore:

- A fuse approved as branch circuit protection fuses in USA/Canada is not a branch circuit in all countries where IEC standards apply (e.g; Europe (CE)).
- A fuse approved as branch circuit protection fuses in all countries where IEC standards apply (e.g; Europe (CE)) is not a branch circuit in USA/Canada.

See tables in "Fusing" on page 213.

⚠ DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- If opening of any fuses or branch circuit protection device that supply the 85Vac to 550Vac auxiliary supply occurs, first check the wiring. If the wiring is not damaged, do not replace the fuse and contact the manufacturer's local service center.

Failure to follow these instructions will result in death or serious injury.

If the wiring is not damaged a component inside the 85Vac to 550Vac auxiliary supply is broken and product must go back to service center.

⚠ DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- The maximum voltage between any pole of the 85Vac to 550Vac auxiliary supply and all other terminals must be lower than 550Vac.

Failure to follow these instructions will result in death or serious injury.

If the 85Vac to 550Vac auxiliary supply is supplied by a dedicated transformer the phasing must be checked to avoid overvoltage.

Connections (Supply Power and Load)

DANGER

HAZARD OF FIRE

- This product does not contain any branch-circuit protection, therefore the installer must add branch-circuit protection upstream of the unit.
- Branch circuit protection must be selected according to maximum current in each phase and must be rated in compliance with local and national regulatory requirements.

Failure to follow these instructions will result in death or serious injury.

Branch circuit protection is mandatory to protect the wiring.

- CE: branch-circuit protection must be selected according to IEC 60364-4-43 or applicable local regulations.
- UL: branch-circuit protection must be selected according to NEC article 210.20, it is necessary for compliance with National Electric Code(NEC) requirements.

DANGER

HAZARD OF FIRE

- Power connections: The cables must be rated 90°C stranded copper only, the cross section must be selected according to the branch circuit protection rating.

Failure to follow these instructions will result in death or serious injury.

CE: Wire conductor cross sections must comply with IEC 60364-5-52 or applicable national standards

U.L.: Wire conductor cross sections must comply with NEC Table 310.15(B)(16) (formerly Table 310.16) taking account of table 310.15(B)(2) for the ampacity correction factors or NFPA79 Table 12.5.1 taking account of Table 12.5.5(a) for the ampacity correction factors or applicable national standards.

DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- High speed fuses (supplemental fuses in addition to branch circuit protective device), as listed in fusing sections, are mandatory to protect EPack against load short circuit.
- If opening of either the branch circuit protective device or the high-speed fuses (supplemental fuses) occurs, the product must be examined by suitably qualified personnel and replaced if damaged.

Failure to follow these instructions will result in death or serious injury.

See tables in "Fusing" on page 213.

 **DANGER**
HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- Respect electrical installation requirements to ensure optimum IP rating.

Failure to follow these instructions will result in death or serious injury.

Products rated 16A to 63A are rated IP10 according to EN60529.

Products rated 80A to 125A are rated IP20 according to EN60529.

If the conductor stripping lengths of the power cables are longer than the requirements, then IP20 is compromised.

If the conductor stripping lengths of the power cables are shorter than the requirements there is a potential risk of total loss of connection. Wires may slip out of the terminals.

For product rated 80A to 125A, if the breakaway features are removed for cables with diameter lower than 9mm then IP20 rating is compromised and the product is rated at IP10.

 **DANGER**
HAZARD OF FIRE

- The conductor stripping length must be as stated in Electrical Installation.

Failure to follow these instructions will result in death or serious injury.

If the conductor stripping lengths of the power cables are shorter than the requirements there is a potential risk of partial loss of connection which may create an overheat of the terminals

 **DANGER**
HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH


- Replace doors and plug-in terminals before turning on power to this equipment

Failure to follow these instructions will result in death or serious injury.

For product rated 80A to 125A, if the upper and/or lower access door are open, the IP20 is compromised and the products are IP10.

Products rated 16A to 63A are rated IP10 according to EN60529, if the voltage reference connector (N/L2) remains connected the rating is improved to IP20.

16A to 32A and 40A to 63A Units

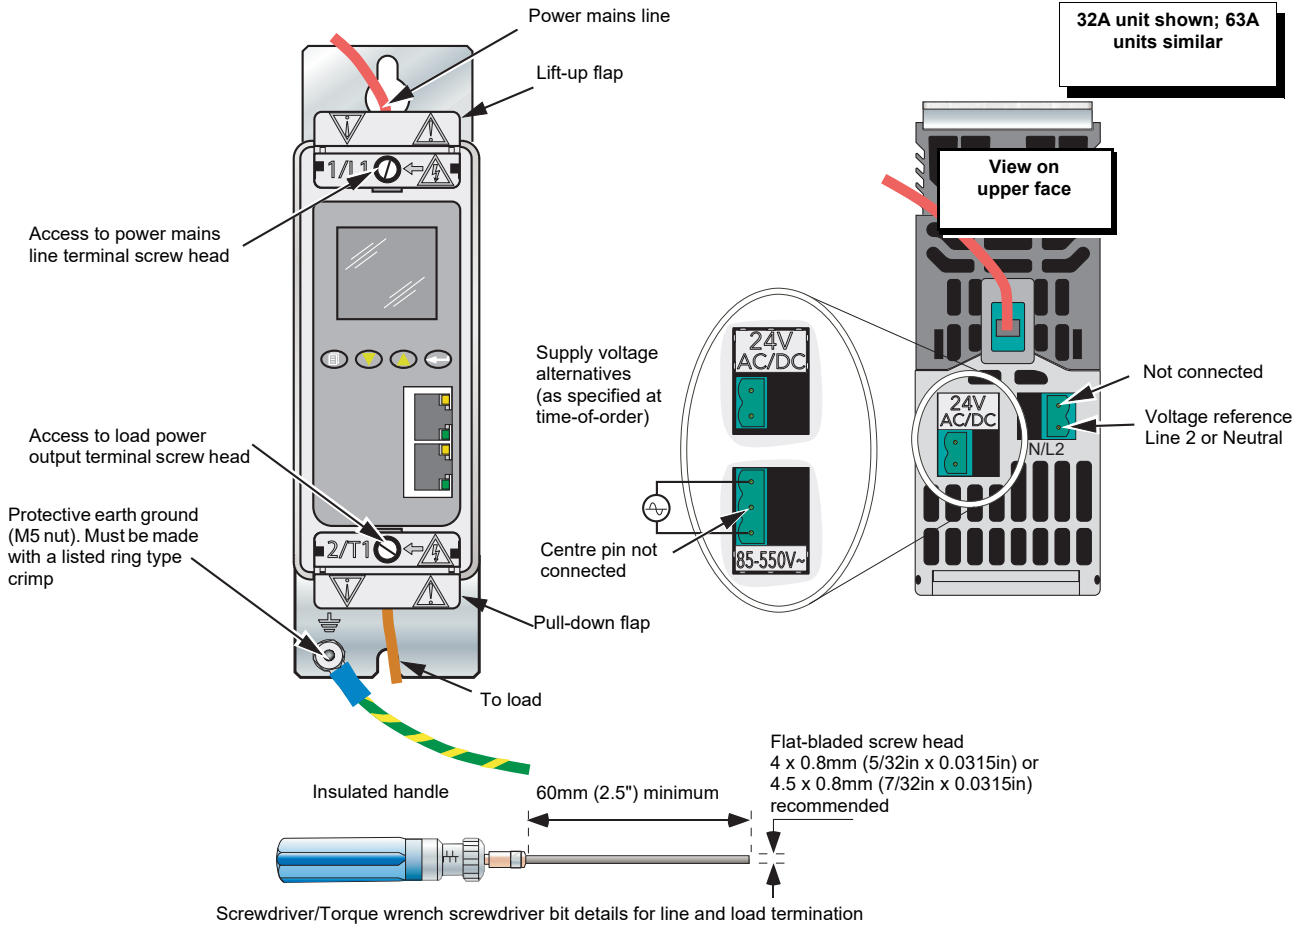

Screwdriver/Torque wrench screwdriver bit details for line and load termination

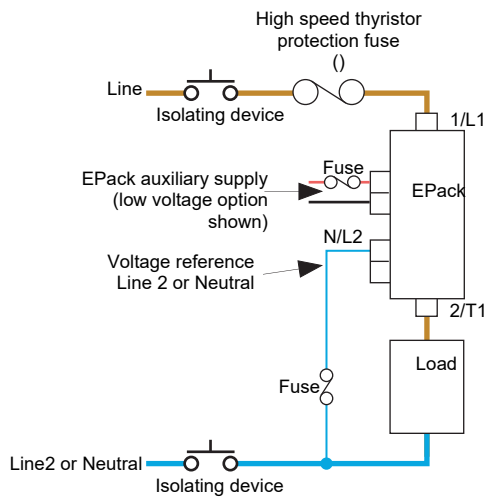


Figure 8 Supply power and Load connection details (16A to 63A units)

E-Pack rating (Amps)	Exposed conductor length mm (inch)	Cable diameter maximum mm (inch)
16A to 63A	9 to 11 (0.35 to 0.43)	8.5 (0.33)

Table 2: E-Pack single phase, 16A to 63A cable connection specification

80A to 125A units

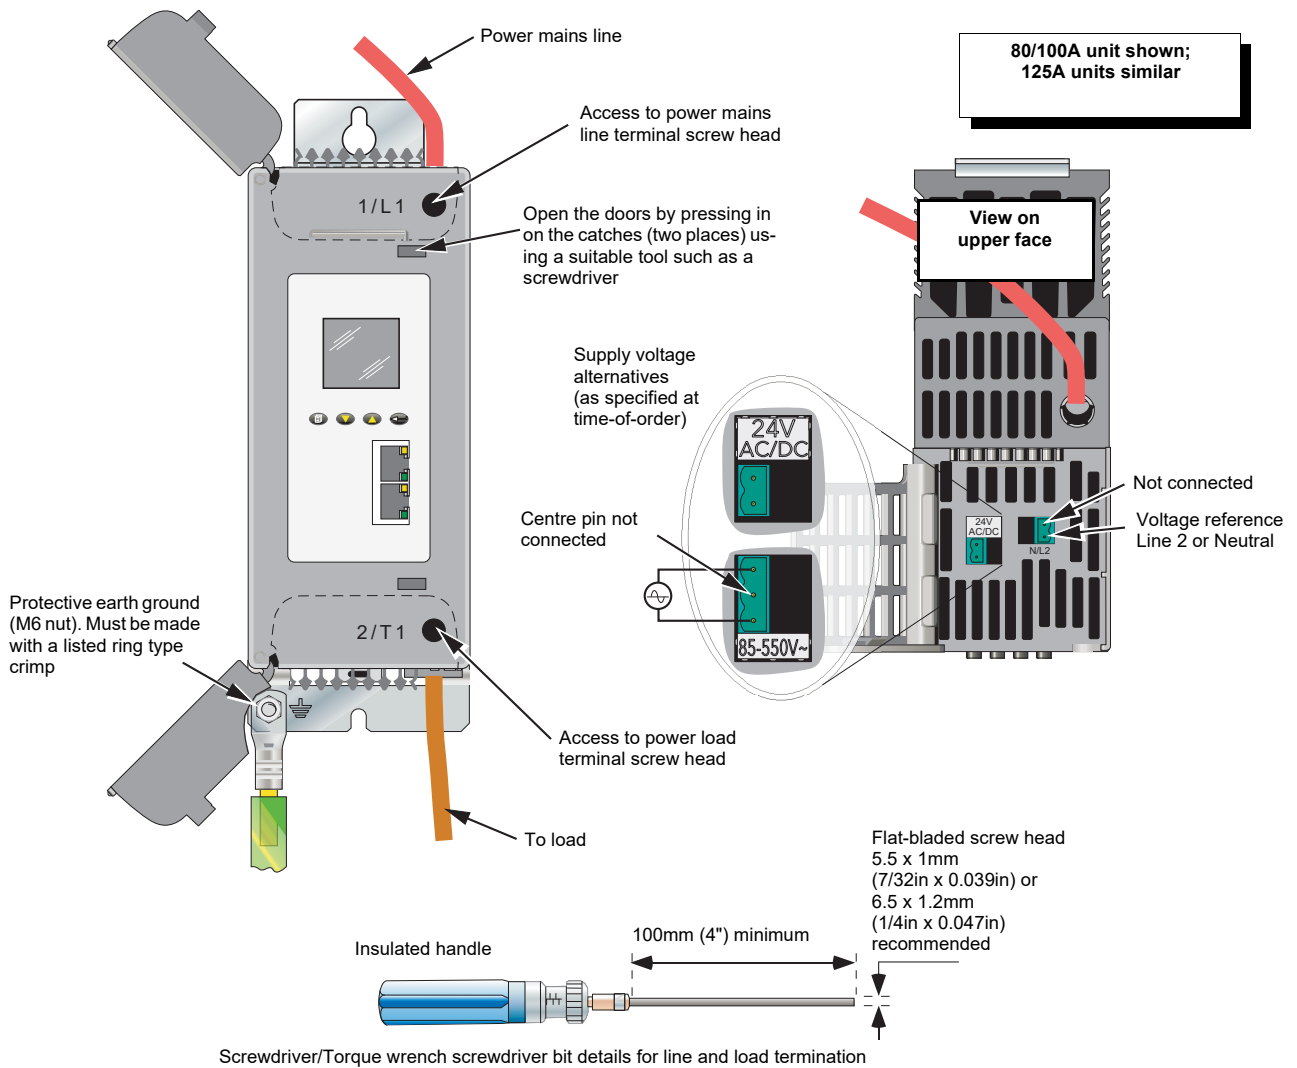


Figure 9 Supply power and Load connection details (80A to 125A units)

See [Figure 9](#) for basic wiring details.

E-Pack rating (Amps)	Exposed conductor length mm (inch)	Remove terminal housing breakaway part? mm (inch) cable diameter	Cable diameter maximum mm (inch)
80A to 125A	20 - 23 (0.79 - 0.91)	Yes, for cables greater than 9 (0.35)	17.5 (0.69)

Table 3: E-Pack single phase 80A to 125A cable connection specification


Signal wiring

Figure 10 shows the connector location, on the underside of the unit, for the digital and analog inputs, and for the internal relay output.

Firing Enable

For the power module thyristors to operate, the Firing Enable must be enabled.


In the default configuration Digital input 1 is used to enable the firing and is configured in contact closure type. Therefore, Firing Enable is achieved by shorting pins 0V and DI1 of the I/O connector located on the underside of the unit (Digital input 1).

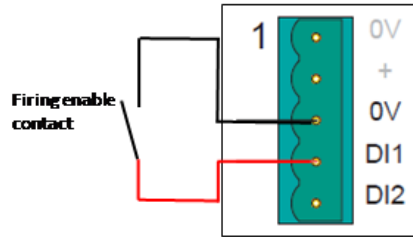

QuickCode menu allows the user to select Digital input 2 to Enable Firing. Digital input 2 is configured in contact closure type, therefore, Firing Enable is achieved by shorting pins 0V and DI2 of the I/O connector located on the underside of the unit (Digital input 2).

If none of them have been selected as firing enable function in the QuickCode menu therefore userval1 function block will be connected to the firing enable input of the firingOP function block.

Userval1 function block will be set to 1 which will enable the firing.

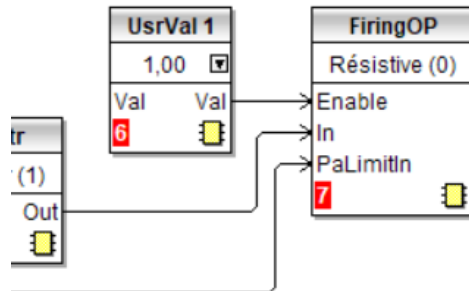

Relay Output

The relay is normally energized (Common and Normally Open pins shorted), and is de-energized (Common and Normally Closed pins shorted) when active. In the default configuration, the relay output is operated by the Fault detect 'Custom Alarm' becoming active.

By default, the Custom alarm is set up to be equivalent to 'AnySystemAlarm' which becomes active if any 'stop firing' conditions, such as those listed below, is detected.

In configuration mode, it is also possible to configure the relay using the Alarm Relay menu in the Operator Interface (page 122).

1. Missing mains. Supply voltage line is missing.
2. Thyristor short circuit^a
3. Network dips. A reduction in supply voltage exceeding a configurable value (VdipsThreshold), causes firing to be inhibited until the supply voltage returns to a suitable value. VdipsThreshold represents a percentage change in supply voltage between successive half cycles.
4. Freq out of range. The supply frequency is checked every half cycle, and if the percentage change between successive half cycles exceeds a threshold value (max. 5%), a Mains Frequency System Alarm is generated.
5. Supply failure detected to EPack unit.
6. Chop Off ([page 64](#))
7. Analog input over current. For mA inputs this alarm is active if there is too high a current flowing through the shunt.
8. Line under voltage (of nominal voltage).
9. Line over voltage (of nominal voltage).
10. Over current (of nominal current).

The relay is de-energized temporarily then re-energized at start-up.

a. It is not possible to detect a thyristor short circuit when the unit is delivering 100% output power.

I/O Input & Output Details

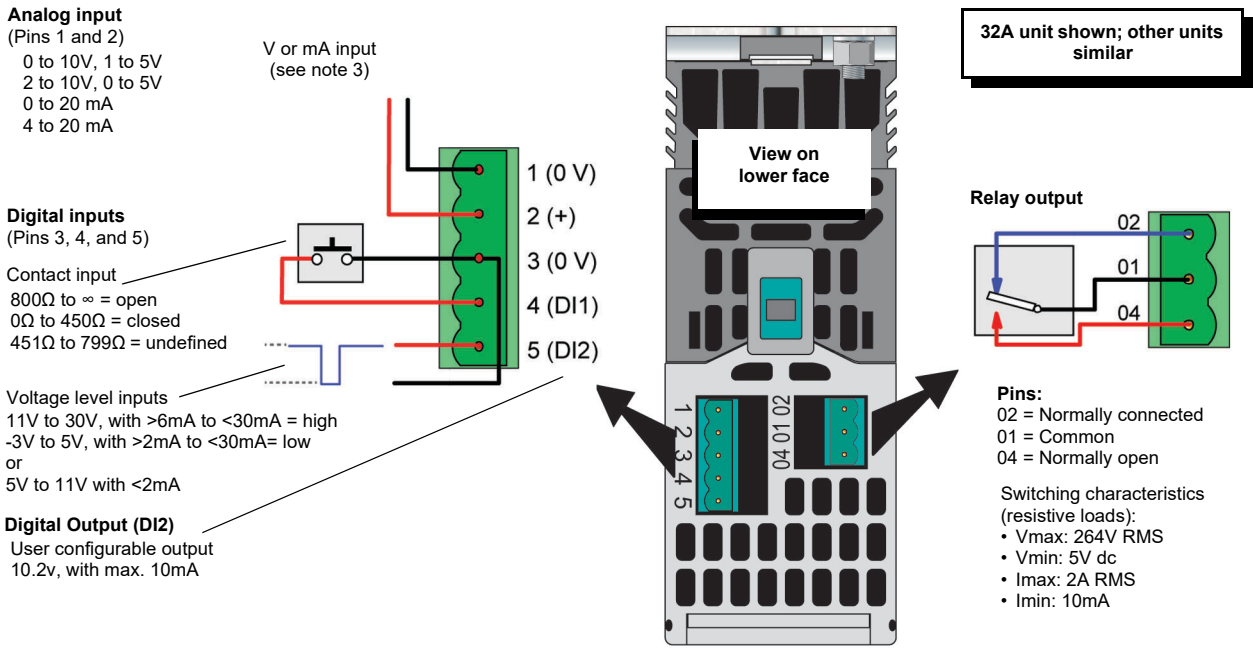


Figure 10 I/O details

Notes:

1. Diagram shows DI1 as a contact input and DI2 as a voltage level input.
2. DI1 can be configured as contact inputs or voltage inputs.
3. DI2 can be configured as contact inputs or voltage inputs or 10.2V output (with max. 10mA).
4. Analog input type (Volts or mA) is selected in I/O Analog IP configuration. When a mA range is selected, a suitable shunt resistor is automatically connected into circuit. It is thus unnecessary for the user to fit external components.

⚠ **DANGER**

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- Do not exceed the device's ratings
- The I/O Input & Output, the Communications ports are SELV circuit. They must be connected to SELV or PELV circuit.
- The relay output and the fuse holders contacts are compliant to the SELV requirements; they can be connected to SELV, PELV circuit or to voltage up to 230V (maximum value of rated operational voltage to earth:230V).

Failure to follow these instructions will result in death or serious injury.

SELV is defined (in IEC60947-1) as an electrical circuit in which the voltage cannot exceed 'ELV' under normal conditions or under single fault conditions, including earth ground faults in other circuits.

The definition of ELV is complex as it depends on environment, signal frequency, etc. See IEC 61140 for further details.

Network Communications (EtherCAT)

Overview

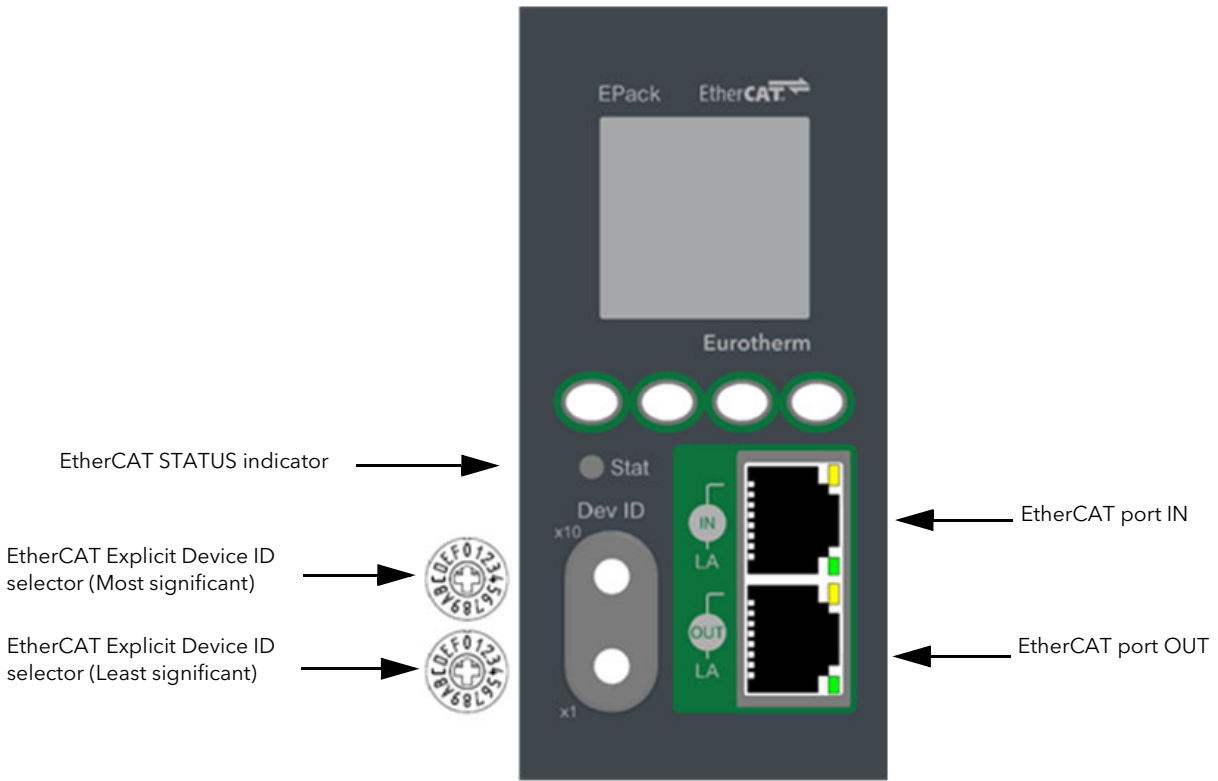


Figure 11 EPack EtherCAT connectors

The EtherCAT networking capability is provided by a pair of RJ45 connectors, located at the front of the EPack power controller unit.

EtherCAT Communications

Each connector has a pair of LED indicators to indicate network connection (amber LED) and network Tx activity (flashing green).

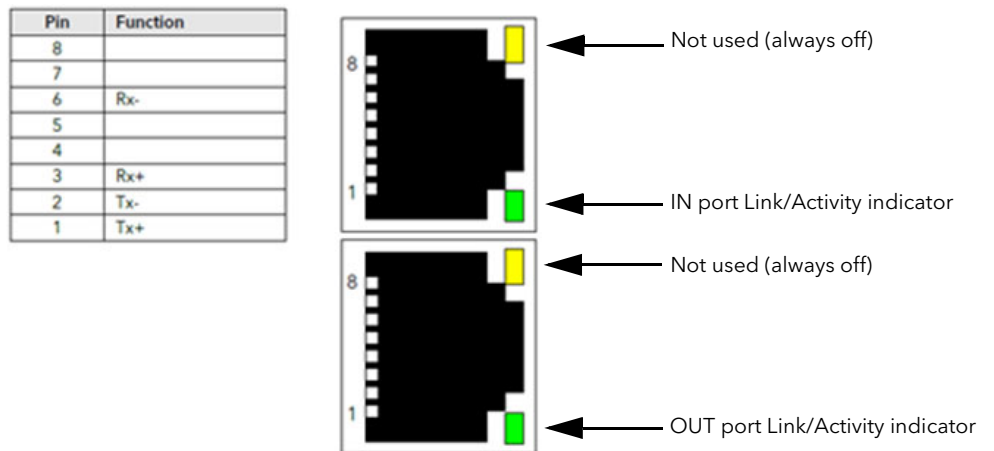


Figure 12 EPack Pinouts

The Link/Activity indicators show the state of the physical link and activity on this link. The blink codes of the Link/Activity Indicator are described below:

Link	Activity	Link/Activity Code
Yes	No	ON
Yes	Yes	Flickering
No	(not applicable)	OFF

EtherCAT Status Indicator

EtherCAT STATUS indicator is a bi-colored red and green LED. The green indication shows the status of the EtherCAT State Machine. The red indication shows errors such as watchdog timeouts and unsolicited state changes due to local errors (e.g. input error). If, at a given time several errors are present, the error that occurred first is indicated.

Green indication details:

Indicator states	Slave state	Description
OFF	INITIALISATION	The device is in state INIT
Blinking	PRE_OPERATIONAL	The device is in state PRE-OPERATIONAL
Single Flash	SAFE-OPERATIONAL	The device is in state SAFE-OPERATIONAL
ON	OPERATIONAL	The device is in state OPERATIONAL
Flickering	INITIALISATION or BOOTSTRAP	The device is booting and has not yet entered the INIT state, or: The device is in state BOOTSTRAP. Firmware download operation in progress

Red indication details:

ERR State	Error Name	Description	Example
ON	Application Controller Failure	A critical communication or application controller error has occurred	Application controller is not responding any more (PDI Watchdog Timeout detected by ESC)
Double Flash	Process Data Watchdog Timeout/EtherCAT Watchdog Timeout	An application watchdog timeout has occurred	Sync Manager Watchdog timeout
Single Flash	Local Error	Slave device application has changed the EtherCAT state autonomously, due to local error (see ETG.1000 part 6 EtherCAT State Machine). Error Indicator bit is set to 1 in AL State Register.	

ERR State	Error Name	Description	Example
Blinking	Invalid Configuration	General Configuration Error	State change commanded by master is impossible due to register or object settings, or invalid hardware configuration (pin sharing violation detected by ESC)
OFF	No error	The EtherCAT communication of the device is in working condition.	

EtherCAT Explicit Device ID selectors

Explicit Device Identification Mechanism is supported, with the “Requesting Mechanism” as defined in ETG.1020. Two hexadecimal rotary switches (value 0x0 to 0xF) are featured to set an Explicit Device Identification value. They are labeled as follows:

- “x1” - The least significant switch, corresponding to the first hex digit
- “x10” - The most significant switch, corresponding to the second hex digit

Therefore, ID from 0 to 255 (0xFF) can be selected.

Note: The Requesting ID mechanism might be ignored by the Master / Configuration Tool and Configured Station Alias Register 0x0012 may be used alternatively. The ID-Selector shall be zero in that case.

Fuse Holders Contact Data (Fuse Ordering Code HSM)

⚠ **DANGER**

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- Do not exceed the device's ratings.
- The relay output and the fuse holders contacts are compliant to the SELV requirements; they can be connected to SELV, PELV circuit or to voltage up to 230V (maximum value of rated operational voltage to earth:230V).

Failure to follow these instructions will result in death or serious injury.


SELV is defined (in IEC60947-1) as an electrical circuit in which the voltage cannot exceed 'ELV' under normal conditions or under single fault conditions, including earth ground faults in other circuits.

The definition of ELV is complex as it depends on environment, signal frequency, etc. See IEC 61140 for further details.


If fuse ordering code HSM has been selected, the fuses holder is delivered with a contact kit which provides indication if the fuse is blown or missing. This is shown locally on the fuseholder by a red handle which also activates microcontacts. These contacts may be wired to a digital input on the EPack as shown in the following diagrams.

Fuses Holders Contacts Kit are delivered with NO, NC contact.

Fuse in fuse holder and not blown
The handle and contacts are in the closed state

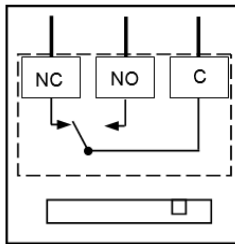

Fuse missing or fuse blown
The handle is open and shown red. The contacts are in open state

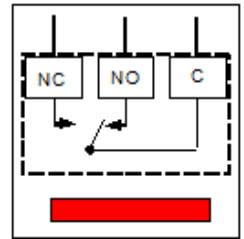

- Connection: Faston lugs 2.8 x 0.5mm (0.11 x 0.02in)
- Rated insulation voltage: 250VAC
- Rated operational current following IEC 60947-5 & -1
- Utilization category AC15: 4A/24V, 4A/48V, 3A/127V, 2.5A/240V
- Utilization category DC13: 3A/24V, 1A/48V, 0.2A/127V, 0.1A/240V


For contact kit reference according to product rating see Table 3 or Table 4.

Contact kit Mersen Y227928A, for fuse size 14x51 or Contact kit Mersen G227959A for fuse size 22x58.

Minimum operational current and voltage: 1mA/4V AC or DC.

- These contacts are compatible with Digital inputs configured in contact closure mode.

Recommended wiring:

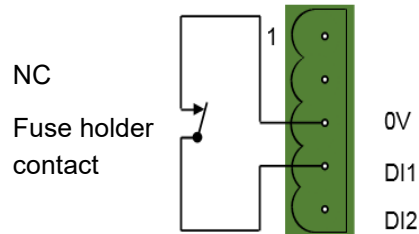


For contact kit Mersen E227612A, for fuse size 27x60

Minimum operational current and voltage: 100mA/20V AC or DC

- These contacts are not compatible with Digital inputs configured in contact closure mode.
- These contacts are compatible with Digital inputs configured in Voltage inputs with external dc power supply and load 100 mA dc minimum.

Recommended wiring:

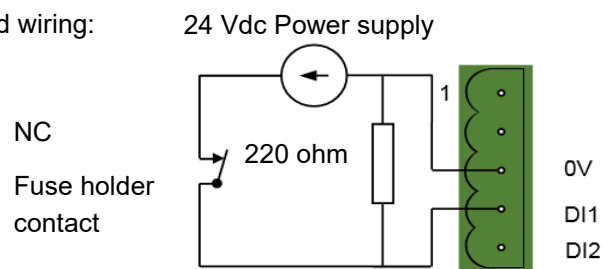

Operator Interface

Located at the front of the Driver Module, the operator interface consists of a square display, and four pushbutton switches.

Display

The display is divided vertically into three areas, which for the purposes of this manual are called the status area at the top, the data display, in the center, and the soft keys at the bottom. This display, together with the four pushbuttons allows full operation and configuration of the unit.

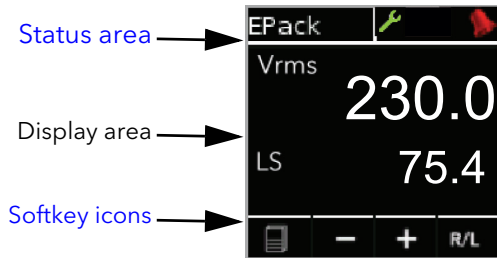


Figure 13 Operator interface

The figure above shows a typical operator mode screen. The other available screens are scrolled through using the return (page) pushbutton. The configuration of the unit defines which parameters actually appear.

The screens are displayed in the following order:

1. EPack Main Screen (as shown in the figure)
2. Meas menu
3. Alarms menu
4. EoE Comms menu
5. DI Stat
6. ECAT ID menu
7. PLF Adjust menu

Notes:

1. The Alarms display appears only if there are any active alarms. The up/down arrow pushbuttons can be used to scroll through the alarm list, if there are more alarms active than can be displayed on one screen height.
2. The 'Goto' item allows the user to enter Configuration mode, providing the password is known.
3. The Energy display appears only if the Energy option is fitted.

Status area

This area at the top of the screen contains text descriptive of the current operation, and a number of icons as follows



Configuration key. Displayed when the unit is in configuration mode.



Alarm symbol. Indicates that one or more alarms is active.

Softkey icons

A number of icons can appear at the bottom of the display, and each icon represents the action of the pushbutton immediately below it.



Menu. This appears in the bottom left corner, and operation of the Return pushbutton causes the top level menu to appear.



Return. This red cross icon appears in the bottom left corner, and operation of the Return pushbutton causes any configuration changes on the current page to be 'undone' or, if none, causes the display to 'go up' one level.



Plus and minus icons. Operation of the associated scroll up/down pushbutton causes the displayed value to increment or decrement.



Up/down arrows. Operation of the associated scroll up/down pushbutton causes the various menu items on display to be scrolled through.



Right/Left arrow. The right-pointing arrow appears in the bottom right-hand corner, and operation of the Enter pushbutton causes the cursor to shift right. Once this has been done, a left-pointing arrow appears in the bottom left-hand corner, allowing the user to shift the cursor to the left using the Return pushbutton.




Enter. This green tick appears in the bottom right corner, and operation of the Enter pushbutton causes any configuration change(s) on the display page to be confirmed.



Remote/Local. This appears in the bottom right corner, and operation of the Enter pushbutton toggles the setpoint selection between local and remote.

Pushbuttons

The functions of the four pushbuttons below the display depend on what is displayed in the softkey area. The leftmost pushbutton (Return) is associated with the leftmost soft key, the down arrow pushbutton is associated with the next soft key and so on. In the example above, the 'Return' key is used both to enter the Menu, and to return from it to the initial display.

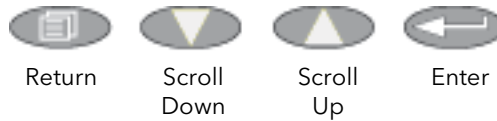

Pushbutton functions

Return	Returns to previous menu (while menus are displayed), cancels editing (during parameter editing), and performs screen cycling (during operator mode).
Scroll down/up	Allows the user to scroll through the available menu items or values.
Enter	Goes to next menu item. In parameter edit mode, this button confirms the changes.

Menu item value selection

Menu items are scrolled through using the up/down pushbuttons. Once the required item is displayed, the Enter pushbutton is used to select it for editing. Editing of the item's value is carried out by scrolling through the available choices, using the up and down scroll keys. Once the desired value is displayed, the Enter pushbutton is used to confirm the choice.

Where multiple changes have to be made (as in editing an IP address for example), the Enter pushbutton acts as a right cursor key, moving from the field just edited to the next field. (The Return pushbutton moves the cursor left). Once all fields have been edited, the Enter pushbutton is used a final time to confirm the choice.

Front Panel Event Indication

A number of instrument alarms and events can occur, and these are indicated by icons appearing on the display screen. The events and alarms are listed below. See [Alarms \(page 206\)](#) for a more details.

Instrument events

Conf Entry	The instrument has been placed in configuration mode (cogwheel symbol).
Conf Exit	The instrument has been taken out of configuration mode (no icon).
GlobalAck	A global acknowledgement of all latched alarms has been performed.
Quick Code Entry	The Quick Code menu is active (cogwheel icon + 'QCode' in display area).

The following alarms all cause a red bell icon to appear in the top right hand corner of the screen.

Indication alarms

LimitAct	One or more limits are active in the control block
LoadOverl	An over current alarm has become active in one or more Network blocks.
PrcValTfr	Process value transfer is active in the control block.

System alarms

ChopOff	The 'Chop-off' alarm has been detected.
FuseBlown	There is no internal fuse, but it is possible to use DI2 as a 'fuse-blown' input wired to the alarm block in iTools.
MainsFreq	Mains Frequency is outside the acceptable range.
Missmains	Supply power is missing.
NetwDip	The 'network dip' alarm has been detected.
Thyr SC	Thyristor short circuit. It is not possible to detect a thyristor short circuit when the unit is delivering 100% output power.

Process alarms

ClosedLp	The Control block 'Closed Loop' alarm has been detected.
Ana_In Over C	Over current in shunt. If this alarm is detected, firing is stopped by default and Analog Input type is automatically switched to 0-10V mode to avoid damage.
Under Volt	Line under voltage (configurable between 2 and 30% of nominal voltage).
Over Volt	Line over voltage (configurable between 2 and 10% of nominal voltage)
PLF	The 'Partial Load Failure' alarm has been detected.
TLF	The 'Total Load failure' alarm has been detected.

Quickcode

At first switch-on, the E-Pack unit enters the 'QuickCode' menu which allows the user to configure the major parameters without having to enter the full configuration menu structure of the unit. Figure 14 shows an overview of a typical QuickCode menu. The actual displayed menu items will vary according to the number of software features purchased. When 'Finish' is selected to 'Yes', the instrument cold starts after confirmation (Enter key); when set to 'Cancel' the instrument discards any changes and restarts with the previous configuration.

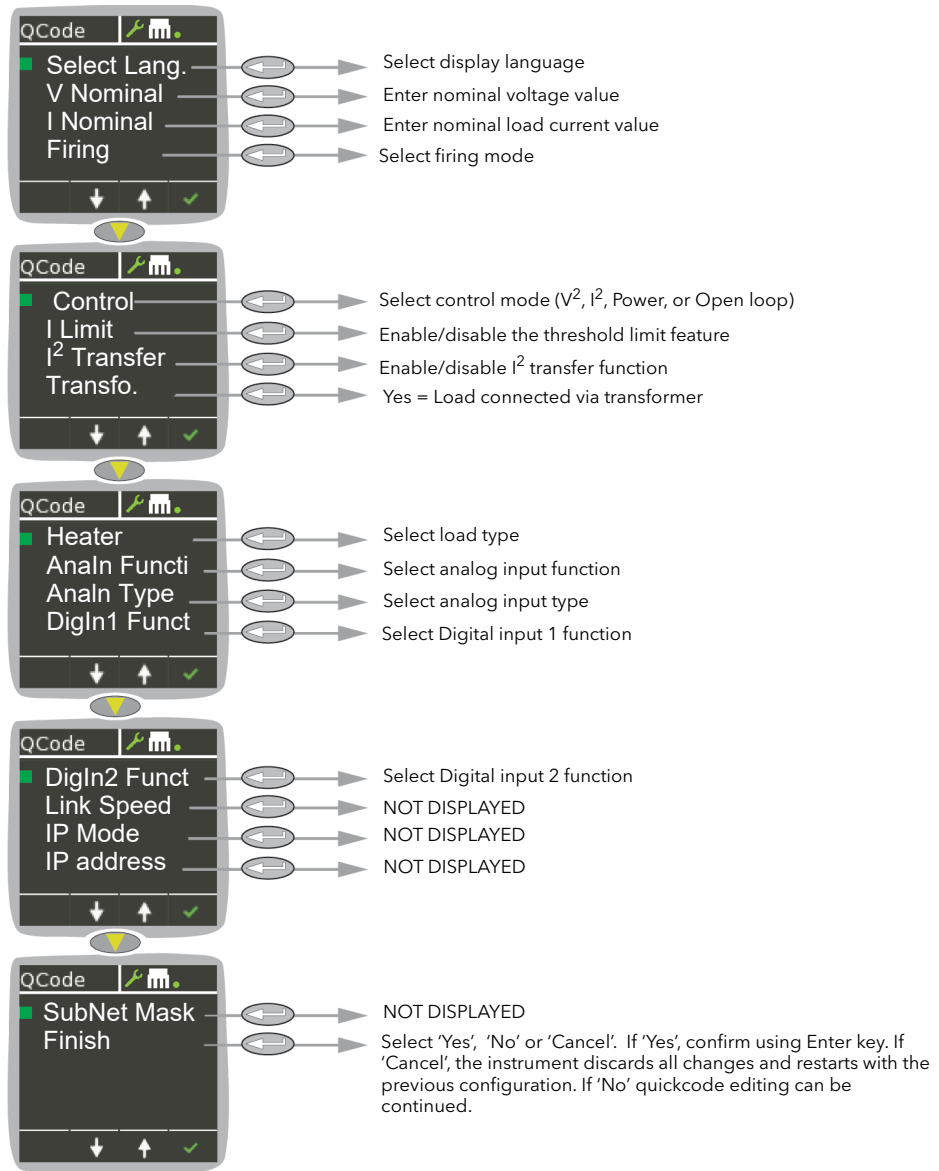


Figure 14 Typical QuickCode menu

Notes:

1. If the unit has been fully configured at the factory, the Quickcode menu will be skipped, and the unit will go into operation mode at first switch on.
2. The Ethernet icon is NOT displayed if the EtherCAT option is fitted.
3. Once quit, the Quickcode menu can be returned to at any time from the Access menu (described later in this document ([Configuration using iTools \(page 125\)](#))). Returning to the Quickcode menu cold-starts the unit.

Quickcode Menu Parameters Description

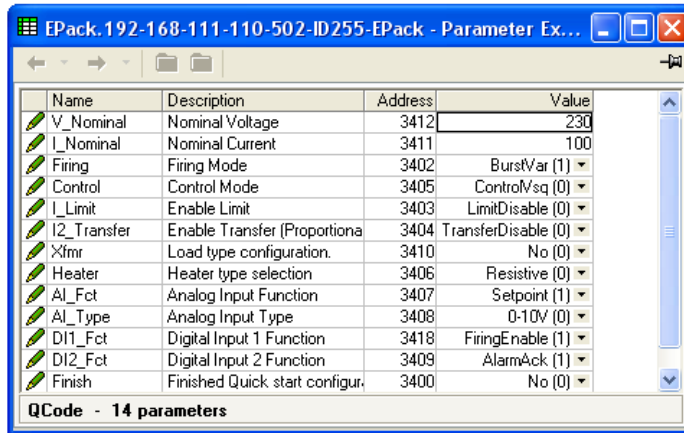


Figure 15 iTools Qcode page

- Language Select English, French, German, Italian or Spanish. Once confirmed all further displays appear in the selected language.
- V Nominal The nominal value of the supply voltage (valid entries are 20V to 500V). Default value appears. Use the up/down arrow buttons to edit.
- I Nominal The current flowing through the load according to the nominal load power. This current must not exceed the maximum current the unit has been designed for. Lower values are not recommended as in such cases, the resulting accuracy and linearity may not be within specification. Default value appears. Use up/down arrow buttons to edit.
- Firing Mode Select from IHC (Intelligent Half Cycle), Burst Var (Burst Variable), Burst Fix (Burst Fixed), Logic or Phase Angle.
- Control Select VSq (V²), Isq (I²), Power (P) or Open Loop
- ILimit This is used to enable/disable threshold limit. (By default the current limit function is enabled).

DANGER

HAZARD OF FIRE

- The current limit function by phase angle reduction is not available with Intelligent Half Cycle (IHC), The product rating must be selected to cope with inrush current.

Failure to follow these instructions will result in death or serious injury.

- I²Transfer This is used to enable/disable the transfer feature. Quick code configures squared current as the transfer process value.
- XFMR (Transfo.) No = Resistive load type; Yes = Transformer primary.
- Heater Select from Resistive, (Short wave) Infra red, CSi (Silicon carbide) or MOSi2 (Molybdenum disilicide)
- AnaIn Functi Select SP (setpoint), HR (setpoint limit), CL (current limit), TS (transfer limit) or None (no function) as Analog Input function

Note: Setpoint is only available for AnaIn Functi if DI1 or DI2 Fct are not set to 'Setpoint' while Firing Mode is set to 'Logic'.

AnalN Type	Select 0 to 10V, 1 to 5V, 2 to 10V, 0 to 5V, 0 to 20mA or 4 to 20 mA as analog input type.
DI1 Fct	Select 'Firing Enable', Alarm ack(nowledge), RemSP sel (select remote setpoint), Fuse Blown, Setpoint (in logic mode) or none.

Notes:

1. The function is available if not set in DI2.
2. Setpoint is only available for DigIn1 Function if AnalN or DI2 Fct is not set to 'Setpoint' whilst Firing Mode is set to 'Logic'

DI2 Fct	Select Firing Enable, Alarm ack(nowledge), RemSP sel (select remote setpoint), Fuse Blown, Setpoint, 10V user output, Firing Enable or none.
---------	--

Notes:

1. Setpoint is only available for DI1 Fct or DI2 Fct if AnalN Functi is not set to 'Setpoint' while Firing Mode is set to 'Logic'.
2. DI1 Fct and DI2 Fct are mutually exclusive.

Finish	If 'Yes' is selected (and confirmed using the enter key), quick code exits and the instrument restarts with the new configuration. If 'No' is selected then no action is taken and the user can continue to edit the quick code parameters. If 'Cancel' is selected then all changes are discarded, quick code exits and the instrument restarts with the previous (i.e. unedited) configuration.
--------	---

Firing modes definitions

Logic

Power switches on, two or three zero crossings of the supply voltage after the logic input switches on. Power switches off, two or three zero crossings of current after the logic input switches off. For resistive loads, voltage and current cross zero simultaneously. With inductive loads, a phase difference exists between the voltage and current, meaning that they cross zero at different times. The size of the phase difference increases with increasing inductance.

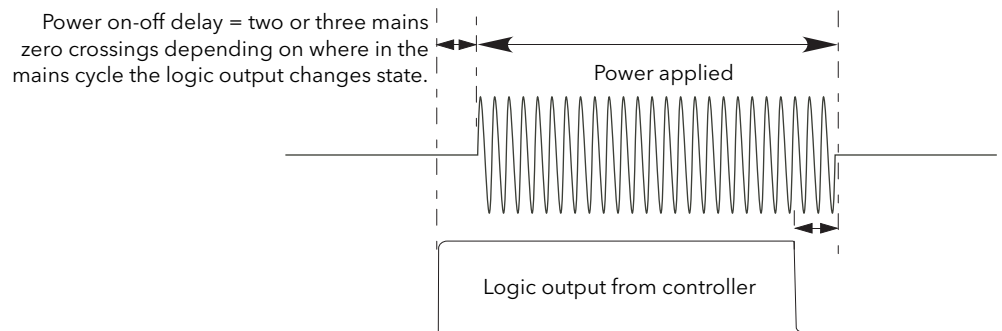


Figure 16 Logic firing mode

Burst Fixed Firing

This means that there is a fixed 'cycle time' equal to an integer number of supply voltage cycles as set up in the Modulator menu. Power is controlled by varying the ratio between the ON period and the OFF period within this cycle time (Figure 17).

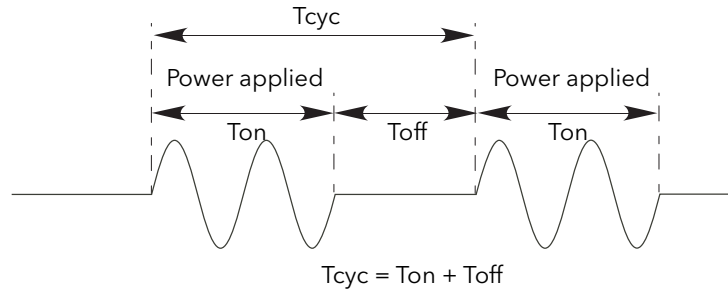


Figure 17 Burst Fixed mode

Burst Variable Firing

Burst Firing Variable is the preferred mode for temperature control. Between 0 and 50% of setpoint, the ON time is the 'Min on' time set in the modulator menu and the OFF time is varied to achieve control. Between 50% and 100%, the OFF time is the value set for 'Min on' and power is controlled by varying the number of ON cycles.

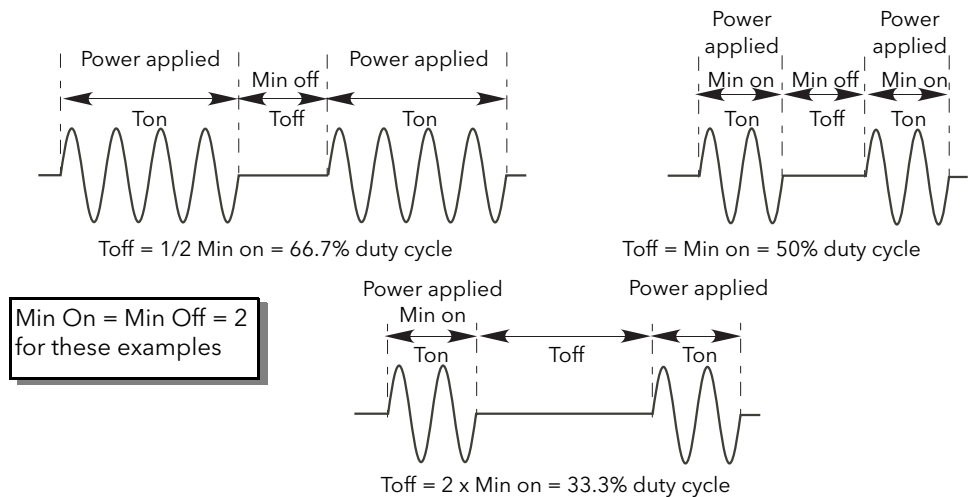


Figure 18 Burst variable firing

Phase Angle Control

This mode of firing controls power by varying the amount of each cycle which is applied to the load, by switching the controlling thyristor on part-way through the cycle. Figure 19 shows an example for 50% power.

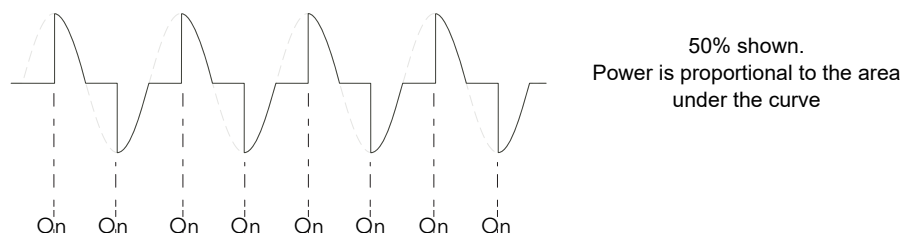


Figure 19 Phase angle mode

Intelligent Half-Cycle (IHC) Mode

Burst mode firing with a single firing (or non-firing) cycle is known as 'Single cycle' mode. In order to reduce power fluctuations during firing time, Intelligent half-cycle mode uses half cycles as firing/non-firing periods. Positive and negative going cycles are evened out, so that no dc component arises. The following examples describe half-cycle mode for 50%, 33% and 66% duty cycles.

50% Duty Cycle

The firing and non-firing time corresponds to a single supply cycle (Figure 20).

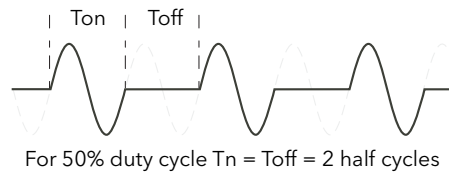


Figure 20 Intelligent half cycle mode: 50% duty cycle

33% Duty Cycle

For duty cycles less than 50%, the firing time is one half-cycle. For a 33% duty cycle, firing time is one half cycle; the non-firing time is two half-cycles (Figure 21).

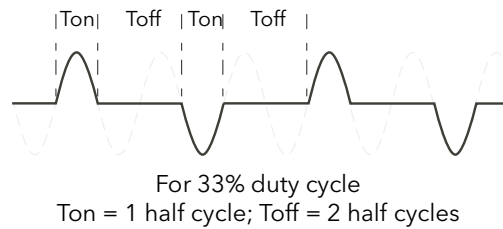


Figure 21 Intelligent half cycle mode: 33% duty cycle

66% Duty Cycle

For duty cycles of greater than 50%, the non-firing time is one half-cycle. For 66% duty cycle, the firing time is two half cycles; the non-firing time is one half cycle (Figure 22).

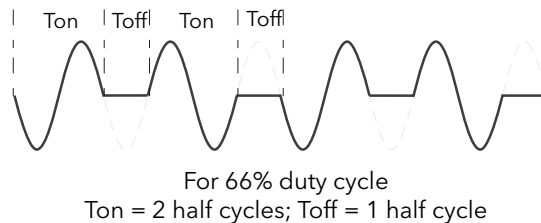


Figure 22 Intelligent half cycle mode: 66% duty cycle

Feedback type

All feedback types (except 'Open Loop') are based on real-time measurement of electrical parameters that are normalized to their equivalent Nominal values.

V^2	Feedback is directly proportional to the square of the RMS voltage measured across the load.
Power	Feedback is directly proportional to the total true power delivered to the load network.
I^2	Feedback is directly proportional to the square of the RMS current through the load. For two- or three-phase systems, feedback is proportional to the average of the squares of the individual RMS load currents.
Open loop	No measurement feedback. The thyristor firing angle in Phase angle mode, or the duty cycle in burst-firing mode, are proportional to the setpoint.

Note: V_{rms} and I_{rms} require a specific wiring in Burst mode. Contact your local distributor.

Transfer Mode

The control system can use automatic transfer of certain feedback parameters. For example with loads with very low cold resistance, I^2 feedback should be used to limit inrush current, but once the load has started to warm up, Power feedback should be used; the control program can be configured to change feedback mode automatically.

The Transfer mode can be selected as I^2 to P as appropriate to the type of load being controlled.

None	No feedback parameter transfer to the control program.
I^2	Selects transfer mode: I^2 to the selected Feedback Mode (above).

Limitation features

This limiting is implemented using phase angle or duty cycle reduction depending on the type of control (e.g. phase angle, burst firing).

To prevent damage on some particular applications the 'chop off' function can be used.

Note: The limiting function 'Chop-Off' is considered an 'Alarm' in EPack.


In order, for example, to prevent potentially damaging inrush currents, it is possible to set a value for power or Current squared which is not to be exceeded during the mains period. For this case, limitation has to be configured to run by phase angle reduction.

For loads exhibiting a low impedance at low temperatures but a higher impedance at working temperature, the current drawn reduces as the load warms, and limiting gradually becomes unnecessary.

[Control limit configuration \(page 132\)](#) describes the configuration parameters which allow the user to enter a Process Variable (PV) and a setpoint (SP), where the PV is the value to be limited (e.g. I^2) and the SP is the value that the PV must not exceed.

Firing Angle Limiting (in Phase Angle mode)


For phase angle control, limiting is achieved by reducing the firing angle on each half mains cycle such that the limit value of the relevant parameter is not exceeded. Limiting is reduced, by the firing angle gradually increasing, until the target setting is achieved.

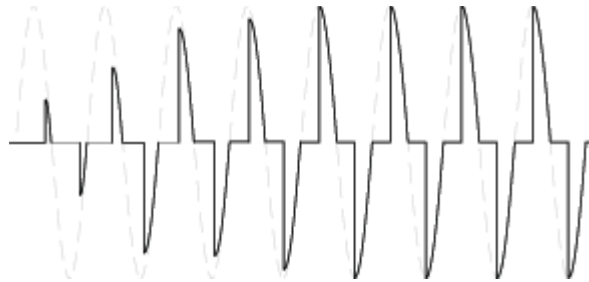

Firing Angle Limiting (in Burst mode)



In Burst Mode limiting can also be achieved by reducing firing Angle during the ON time such that the limit value of the relevant parameter is not exceeded.

In this way the PV must not exceed the limit SP during the ON time. We get 'Burst of Phase Angle'. See following figure.

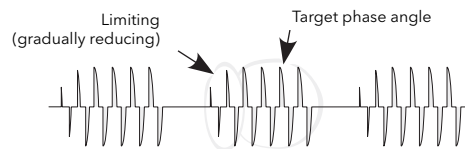

Duty Cycle Limiting (in Burst mode)

For Burst Firing only, limiting reduces the ON state of the burst firing driving the load. Load current, voltage and active power are calculated over the period of each (Ton + Toff) period.

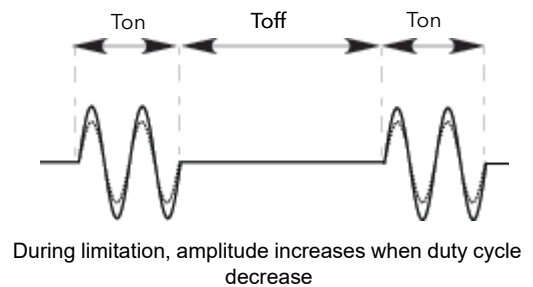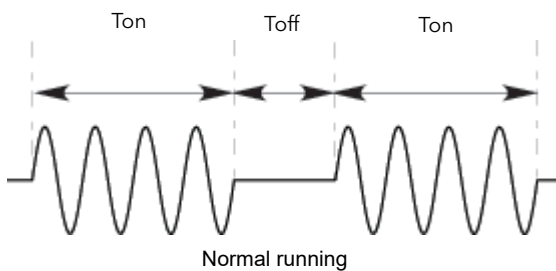

⚠ **DANGER**

HAZARD OF FIRE

- Product current rating must be greater than or equal to the maximum current of the load.

Failure to follow these instructions will result in death or serious injury.

Calculate the maximum current of the load by taking account of load resistive tolerance (tolerance and variation due to temperature) and voltage tolerance.

Current limit function by phase angle reduction may be selected to limit the inrush current of the load and reduce the current rating of the product.

DANGER

HAZARD OF FIRE

- With Current limit function by phase angle reduction the product rating must be upper or equal to the nominal current of the load and to Current limit function by phase angle reduction setting.
- The current limit function by phase angle reduction is not available with Intelligent Half Cycle (IHC), The product rating must be selected to cope with inrush current.
- Duty cycle current limiting features (in burst mode), does not limit the peak current value. The product rating must be selected to cope with the peak current value.

Failure to follow these instructions will result in death or serious injury.

Chop Off Definition

This is a technique which detects an over-current alarm state and stops further thyristor firing for the duration of that alarm state. All the relevant parameters are to be found in the "Network Setup configuration" on page 170.

The conditions that trigger a Chop Off alarm are:

1. When the ChopOff Threshold exceeds the number of times specified in NumberChop Off parameter. (NumberChop Off can be specified to any value between 1 and 255 inclusive). See [page 170](#) for further details. The ChopOff Threshold is adjustable between 100% and 350% inclusive of INominal.


When the alarm is triggered the unit stops firing and raises a chop off alarm. Firing is not resumed until the operator acknowledges the Chop Off alarm, to restart.

Communications

Field Device Tool (FDT) and Device Type Manager (DTM) Support


EPack supports FDT/DTM feature. Therefore the unit can be managed by any FDT container:

1. Install the latest version of iTools, which will include the latest iTools DTMs.
2. Install a FDT container e.g. PACTware (<http://www.schneider-electric.com/en/download/document/FD-SOFT-M-026/>).
3. Install a ModbusTCP CommDTM (<http://www.schneider-electric.com/en/download/document/Modbus+Communication+DTM+Library/>).
4. Run FDT container and update DTM catalog to make latest products available:

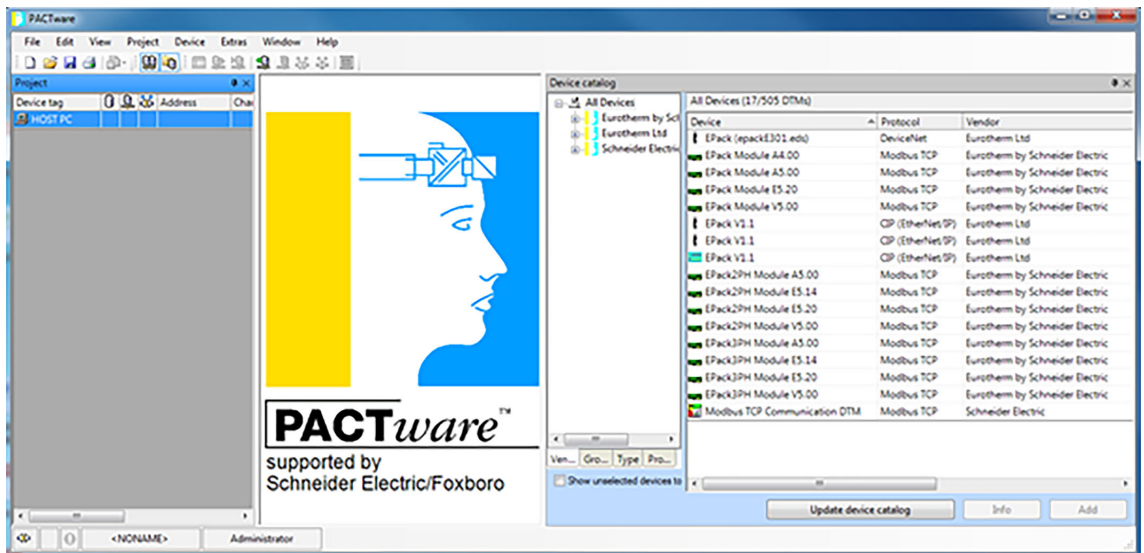


Note: For more information about installation of your FDT container refer to the user manual.


5. Drag and drop both ModbusTCP Communication DTM and the product you want to connect, EPack, from the product catalog to the Project window.

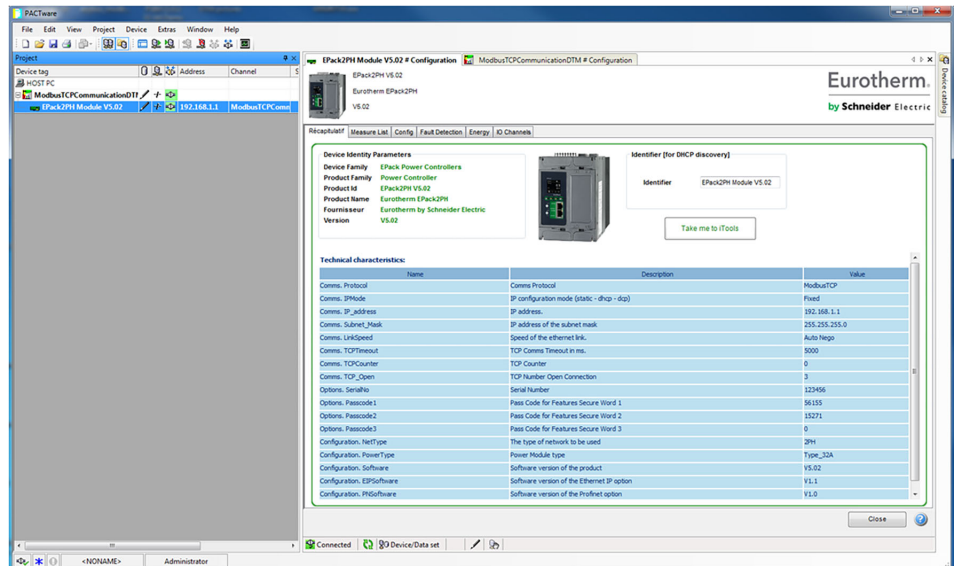

6. Set the IP address of your product in ModbusTCP communication DTM.

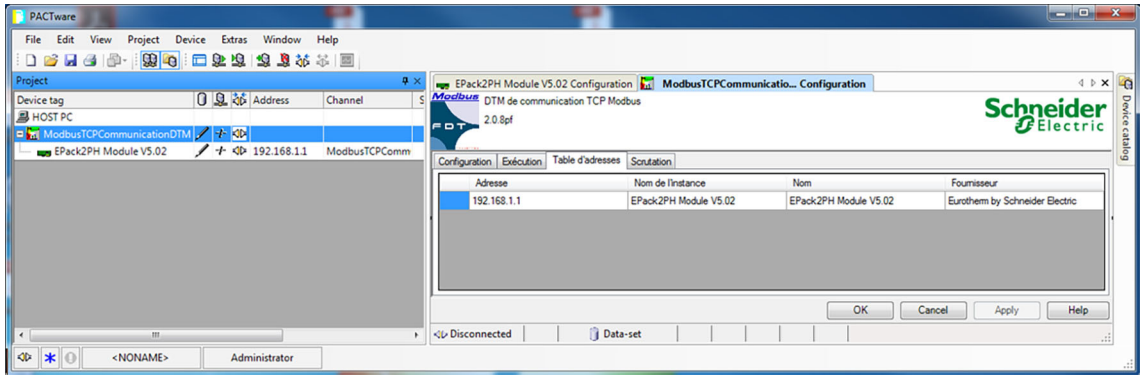

7. Ensure the Project DTM module i.e. (ModbusTCPCommunicationDTM) is selected, select right mouse button and click *Connect*.

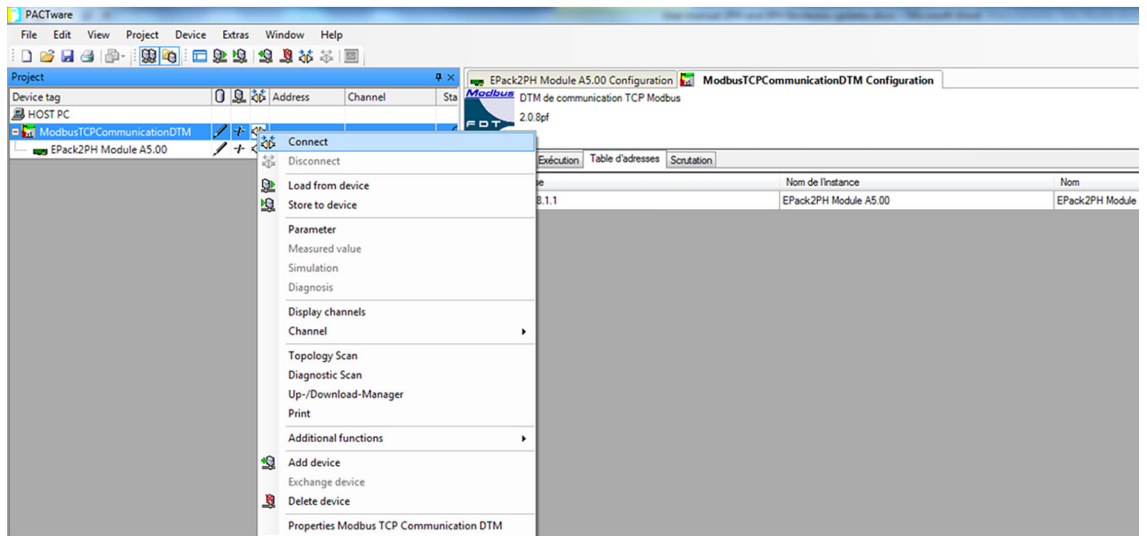

8. A batch of parameters can then be monitored from the FDT container and the *Take me to iTools* button can be used to open and configure parameter values using iTools.

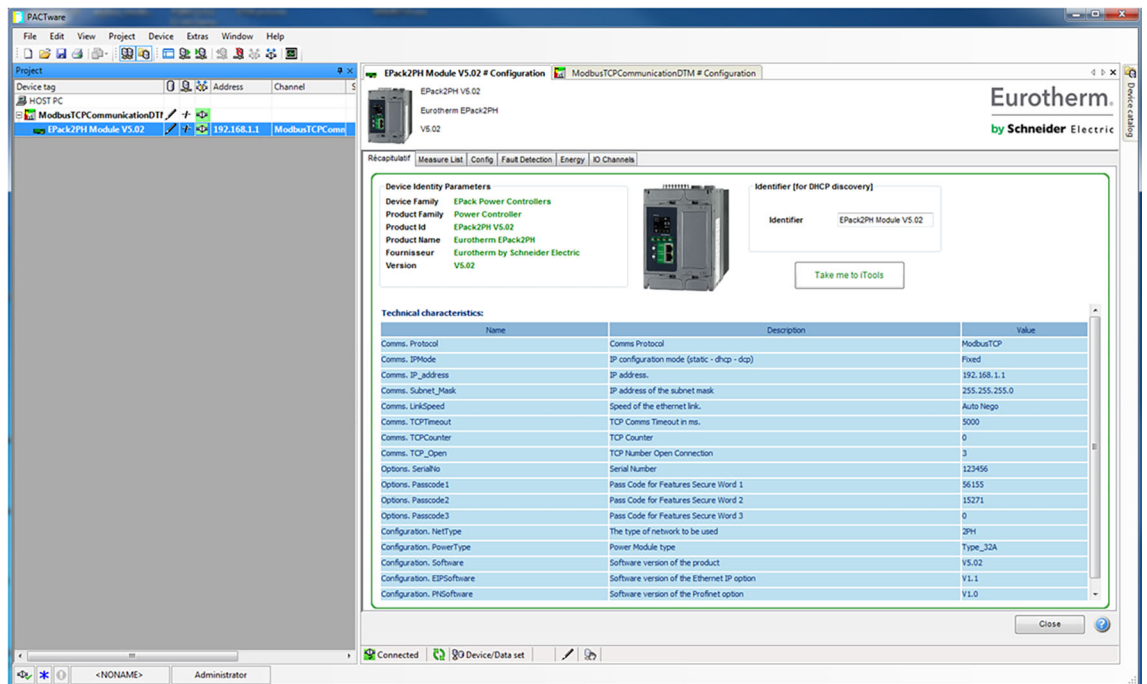


Figure 23 Ethernet/IP User Comms configuration parameters

Modbus

It is not within the scope of this manual to describe the MODBUS/TCP network and for this, refer to the information which may be found at <http://www.modbus.org/>.

Also refer to HA179770 EPower Communication Manual.

Overview

EPack controller units support the Modbus/TCP protocol using Ethernet over EtherCAT (EoE). This protocol embeds the standard Modbus protocol within an Ethernet TCP layer.

As most parameters are saved in the EPack controller unit's memory, the interface board must retrieve these values before it can start communicating onEoE.

Protocol Basics

A data communication protocol defines the rules and structure of messages used by all devices on a network for data exchange. This protocol also defines the orderly exchange of messages, and error detection.

Modbus requires a digital communication network to have only one MASTER and one or more SLAVE devices. Either a single or multi-drop network is possible. The two types of communications networks are illustrated in the diagram below;

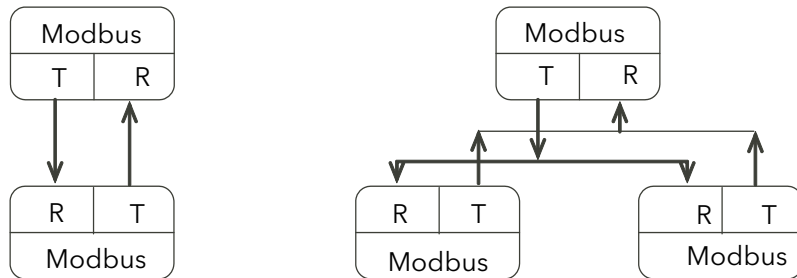


Figure 24 Single Serial Link and Multi Drop Serial Link

A typical transaction will consist of a request sent from the master followed by a response from the slave.

The message in either direction will consist of the following information;

Device Address	Function Code	Data	Checksum	End of Transmission
----------------	---------------	------	----------	---------------------

On a network of instruments this address is used to specify a particular instrument. Each instrument on a network must be set to a unique address, the available address range depending upon the network protocol.

As EPack supports only Modbus/TCP protocol and discrimination on the network is carried out using the IP addresses of the connected instruments, the Modbus addresses of the devices are not used.

Each slave has a unique 'device address':

- The device address 0 is a special case and is used for messages broadcast to all slaves. This is restricted to parameter write operations.
- EPack controller supports a subset of Modbus function codes.
- The data will include instrument parameters referenced by a 'parameter address'
- The Device Address is a single byte (8-bits) unique to each device on the network.
- Function Codes are a single byte instruction to the slave describing the action to perform.
- The Data segment of a message will depend on the function code and the number of bytes will vary accordingly.
- Typically the data segment will contain a parameter address and the number of parameters to read or write.
- The Cyclic Redundancy Check, (CRC) is a checksum and is two bytes, (16 bits) long.
- The End of Transmission segment, (EOT) is a period of inactivity 3.5 times the single character transmission time. The EOT segment at the end of a message indicates to the listening device that the next transmission will be a new message and therefore a device address character.

Parameter Resolution

Modbus protocol limits data to 16 bits per parameter. This reduces the active range of parameters to 65536 counts. In EPack controller units this is implemented as -32767 (8001h) to +32767 (7FFFh).

The protocol is also limited to integer communication only. EPack controller units allow full resolution. In full resolution mode the decimal point position will be implied so that 100.01 would be transmitted as 10001. From this, and the 16 bit resolution limitation, the maximum value communicable with two decimal place resolution is 327.67. The parameter resolution will be taken from the slave user interface, and the conversion factor must be known to both master and slave when the network is initiated.

EPack controller units provide a special sub-protocol for accessing full resolution floating point data. This is described in "Access to Full Resolution Floating Point and Timing Data" on page 70.

Reading of Large Numbers

Large numbers being read over digital communications are scaled. For example, Setpoint can have the maximum value of 99,999 and is read as nnn.nK or 100,000 = 100.0K and 1,000,000 = 1000.0K.

EPack implements a dedicated scale parameter for each large parameter, allowing users to do specific scaling to suit their type of application.

Wait Period

There are several scenarios for which the slave devices on the network are unable to make a response:

- If the master attempts to use an invalid address then no slave device will receive the message.
- For a message corrupted by interference, the transmitted CRC will not be the same as the internally calculated CRC. The slave device will reject the command and will not reply to the master.

After a wait period, the master will re-transmit the command.

The wait period should exceed the instrument latency plus the message transmission time. A typical wait period, for a single parameter read, is 100ms.

Latency

The time taken for an EPack controller unit to process a message and start the transmission of a reply is called the latency. This does not include the time taken to transmit the request or reply.

The parameter functions read 1 word (function 03h), write 1 word (function 06h), and loopback (function 08h) are processed within a latency of between 20 and 120ms (typically 90).

For the parameter functions read n words (function 03h) and write n words (function 16h) the latency is indeterminate. The latency will depend on the instrument activity and the number of parameters being transferred and will take from 20 to 500ms.

Configuration Mode Parameters (EtherCAT)

To write parameters in this group, it is first necessary to set the EtherCAT State Machine to PREOP via EtherCAT Master to set the controller into configuration mode.

To exit from configuration mode, set the EtherCAT State Machine SAFEOP or OP via EtherCAT master.

Modbus Advanced Topics

Access to Full Resolution Floating Point and Timing Data

One of the main limitations of Modbus is that only 16 bit integer representations of data can normally be transferred. In most cases, this does not cause a problem, since appropriate scaling can be applied to the values without losing precision. Indeed all values displayable on the four-digit EPack controller front panel may be transferred in this way. However, this has the significant drawback that the scaling factor to be applied needs to be known at both ends of the communications link.

One further problem is that certain 'time' parameters, are always returned over the communications link in either 10th of seconds or 10th of minutes, configured via `Instrument.Configuration.TimerRes`. It is possible for long durations to overflow the 16 bit Modbus limit.

To overcome these problems, a sub protocol has been defined, using the upper portion of the Modbus address space (8000h and upwards), allowing full 32 bit resolution floating point and timer parameters. The upper area is known as the IEEE region.

This sub-protocol provides two consecutive Modbus addresses for all parameters. The base address for any given parameter in the IEEE region can easily be calculated by taking its normal Modbus address, doubling it, and adding 8000h. For example, the address in the IEEE region of the Target Setpoint (Modbus address 2) is simply:

$$2 \times 2 + 8000h = 8004h = 32772 \text{ decimal}$$

This calculation applies to any parameter that has a Modbus address.

Access to the IEEE area is made via block reads (Functions 3 & 4) and writes (Function 16). Attempts to use the 'Write a Word' (Function 6) operation will be rejected with a response. Furthermore, block reads and writes using the IEEE region should only be performed at even addresses, although no damage to the instrument will result in attempting access at odd addresses. In general, the 'number of words' field, in the Modbus frame, should be set to twice the value that it would have been for 'normal' Modbus.

The rules governing how the data in the two consecutive Modbus addresses are organized depending on the 'data type' of the parameter.

Data Types Used In EPack Power Controller Units

- Enumerated parameters are parameters which have a textual representation for their value on the user interface, for example, 'Parameter Status' – 'Good/Bad', 'Analog Operator Type' – 'Add', 'Subtract', 'Multiply', etc.
- Booleans are parameters which can have either a value '0' or a value '1'. Generally these parameters are enumerated. These are denoted as 'bool' in the table.
- Status words are generally only available over communications, and are used to group binary status information.
- Integer parameters are those that never include a decimal point however the instrument is configured, and do not refer to a time period or duration. These include such values as the instrument communications address and values used to set passwords, but not Process Variable and Setpoint related parameters, even if the display resolution of the instrument is set to no decimal places. These may be 8 or 16 bit and are denoted by 'uint8' or 'uint16' unsigned integers or 'int8' or 'int16' signed (+ or -) integers.
- Floating point parameters are those having a decimal point (or those which may be configured to have a decimal point), with the exception of parameters relating to time periods and duration. This includes Process Variable, Setpoints, Alarm Setpoints, etc and are denoted as type 'Float32' (IEEE 32-bit floating point parameters).
- Time Type parameters measure durations, for example, Alarm time above threshold, Timer elapsed time, etc. These are denoted by 'time32' in the parameter table.

Enumerated, Status Word, and Integer parameters

These use only the first word of the two Modbus addresses assigned to them in the IEEE area. The second word is padded with a value of 8000 hex.


Although 'Write a Word' (Function 6) is not permitted, this type of parameter may be written as a single 16 bit word using a Modbus 'Block Write' (Function 16). It is not necessary to add a padding value in the second address. Similarly, such parameters may be read using a Modbus 'Block Read' (Function 3 & 4) as single words, in which case the padding word will be omitted.

It is, however, necessary to pad the unused word when writing this sort of data types as part of a block containing other parameter values.

Floating Point Parameters

These use the IEEE format for floating point numbers, which is a 32 bit quantity. This is stored in consecutive Modbus addresses. When reading and writing to floats, it is necessary to read or write both words in a single block read or write. It is not possible, for example, to combine the results of two single word reads.

This format is used by most high level programming languages such as 'C' and BASIC, and many SCADA and instrumentation systems allow numbers stored in this format to be decoded automatically. The format is as follows:

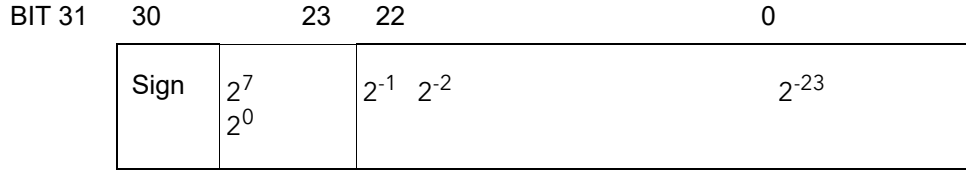

{--- -EXPONENT--- -}{----- -- - - - -----FRACTION----- ---- -- -----}

Where value = (-1) Sign x 1.F x 2 E-127

Note: That in practice, when using C, IEEE floats may usually be decoded by placing the values returned over comms into memory and 'casting' the region as a float, although some compilers may require that the area be byte swapped high to low before casting. Details of this operation are beyond the scope of this manual.

The format used to transfer the IEEE number is as follows.

Lower Modbus Address		Higher Modbus Address	
MSB	LSB	MSB	LSB
Bits 31 - 24	Bits 16 - 23	Bits 15 - 8	Bits 7 - 0

For example, to transfer the value 1.001, the following values are transmitted (hexadecimal).

Lower Modbus Address		Higher Modbus Address	
MSB	LSB	MSB	LSB
3F	80	20	C5

Time Type Parameters

Time type values are returned over comms in 1/10 seconds or minutes. This can be changed in the SCADA table. Time durations are represented as a 32 bit integer number of milliseconds in the IEEE area. When reading and writing to time types, it is necessary to read or write both words in a single block read or write. It is not possible, for example, to combine the results of two single word reads.

The data representation is as follows.

Lower Modbus Address		Higher Modbus Address	
MSB	LSB	MSB	LSB
Bits 31 - 24	Bits 16 - 23	Bits 15 - 8	Bits 7 - 0

To create a 32 bit integer value from the two Modbus values, simply multiply the value at the lower Modbus address by 65536, and add the value at the Higher address. Then divide by 1000 to obtain a value in seconds, 60000 for a value in minutes, etc.

For example, the value of 2 minutes (120000 ms) is represented as follows:

Lower Modbus Address		Higher Modbus Address	
MSB	LSB	MSB	LSB
00	01	D4	C0

EtherCAT®

Description

EtherCAT is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

EtherCAT (Ethernet for Control Automation Technology) is an open real-time technology that realizes the specific transfer of data. It offers real-time performance and is aimed to maximize the utilization of high-speed full-duplex Ethernet data transfer through twisted pair or fibre optic cable for industrial process control needs.

EtherCAT is based on the Ethernet technology and possesses advantages such as ease of implementation, lower cost of ownership and standardization. This makes it an ideal solution for industrial applications, to maximize the performance of control systems.

Medium access control employs the Master/Slave principle, where the Master node (typically the control system) sends the Ethernet frames to the slave nodes, which extract data from, and insert data into, these frames on the fly. A complete range of topologies can be used for EtherCAT applications.

From an Ethernet point of view, an EtherCAT segment is a single Ethernet device which receives and sends standard ISO/IEC 802-3 Ethernet frames. This Ethernet device may consist of many EtherCAT slave devices, which process the incoming frames directly and extract the relevant user data, or insert data and transfer the frame to the next EtherCAT slave device. The last EtherCAT slave device within the segment sends the fully processed frame back, so that it is returned by the first slave device to the Master as a response frame.

This procedure utilizes the full duplex mode of Ethernet, which allows communication in both directions independently. Direct communication without a switch between a Master device and an EtherCAT segment consisting of one or more slave devices may be established. See ETG.1600 EtherCAT Installation Guidelines for more information.

NOTICE

UNINTENDED EQUIPMENT OPERATION

- EtherCAT slave controllers will reflect any frame back onto the network, therefore, it should not be connected to an office network as this may result in a broadcast storm.
- EtherCAT communication is not available as software upgrade option. If EtherCAT is required, order EtherCAT communication together with the product.
- PROFINET protocol and the Ethernet/IP protocol are not available as software upgrade option on product with EtherCAT communication. Do not order EtherCAT communication if PROFINET protocol or Ethernet/IP protocol are required.

Failure to follow these instructions can result in non-functional equipment.

EPack supports the Modbus/TCP protocol. whatever the communication protocol is.

EPack with EtherCAT communication protocol supports the Modbus/TCP protocol by using Ethernet over EtherCAT (EoE).

Product Handling from EtherCAT Configuration Tool

EPack is an EtherCAT slave that can be used in any EtherCAT network that includes an EtherCAT master. Network configuration can be managed by any EtherCAT configuration tool such as TwinCAT® (see "TwinCAT Project Configuration" on page 108).

TwinCAT 3.1 is used as example in following sections but some images may vary depending on TwinCat version.

EtherCAT object dictionary of EPack is described in ESI (EtherCAT Slave Information) file "Eurotherm_EPackECAT.xml" available on Eurotherm website <https://www.eurotherm.com/downloads>.

Out-of-the-box Startup

Before connecting ePack to any EtherCAT master, it can be manually configured using Quick Start menu which is the default menu on display screen after initial power up out-of-the-box.

If an EtherCAT master is connected at initial power up, Quick Start default values will be automatically loaded on PREOP to SAFEOP state transition and the instrument will run this default configuration.

Product configuration can then be managed at any time using:

- iTools (see "Ethernet over EtherCAT (EoE)" on page 75).
- Configuration file upload/download feature (see "File Access over EtherCAT (FoE)" on page 78).
- Adjust menu on front fascia (only available in INIT or PREOP state).
- Device Factory Reset CoE command (see "Object area of the device" on page 91).


Ethernet over EtherCAT (EoE)

E-Pack is EoE capable. This enables the use of iTools to configure and monitor instrument execution for any member of the ePack product range. iTools features such as graphical wiring, configuration cloning, OPC scope, and so on, remain available (see "iTools Interface with EoE" on page 78).

To enable EoE communication, IP settings of instruments must be configured from an EtherCAT configuration tool (e.g. TwinCAT).


Note: Master must be connected to EtherCAT IN port for EoE to work correctly.

Access E-Pack from a Master Platform

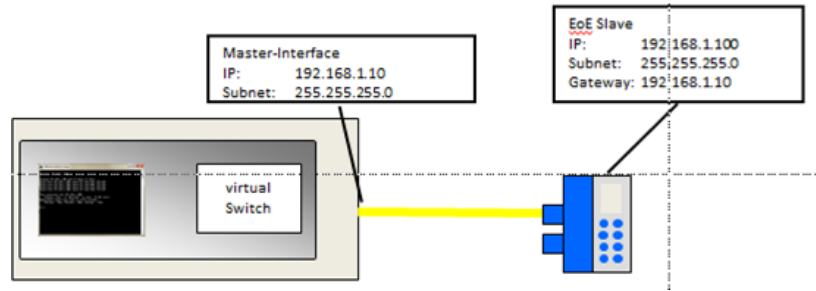


To access ePack from a master platform:

1. Restart device and restart TwinCAT
2. Configure Network Card NIC:
 - a. Open network adapter setting.
 - b. Open the settings of the Network Card that is used for EtherCAT.
 - c. Set IP Address of the card to the value you want to use, for example:
 - IP Address: 192.168.1.10
 - Subnet Mask: 255.255.255.0
 - d. Leave all other fields blank (DNS, WINS, Gateway).

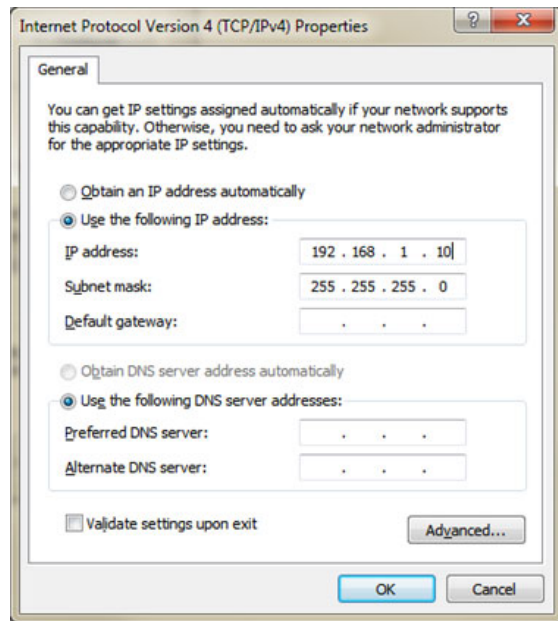


3. Save settings
 - a. Configure device
 - b. Open TwinCAT

- c. Scan Network
- d. Select EPACKECAT device
- e. Select EtherCAT tab and click Advanced Settings

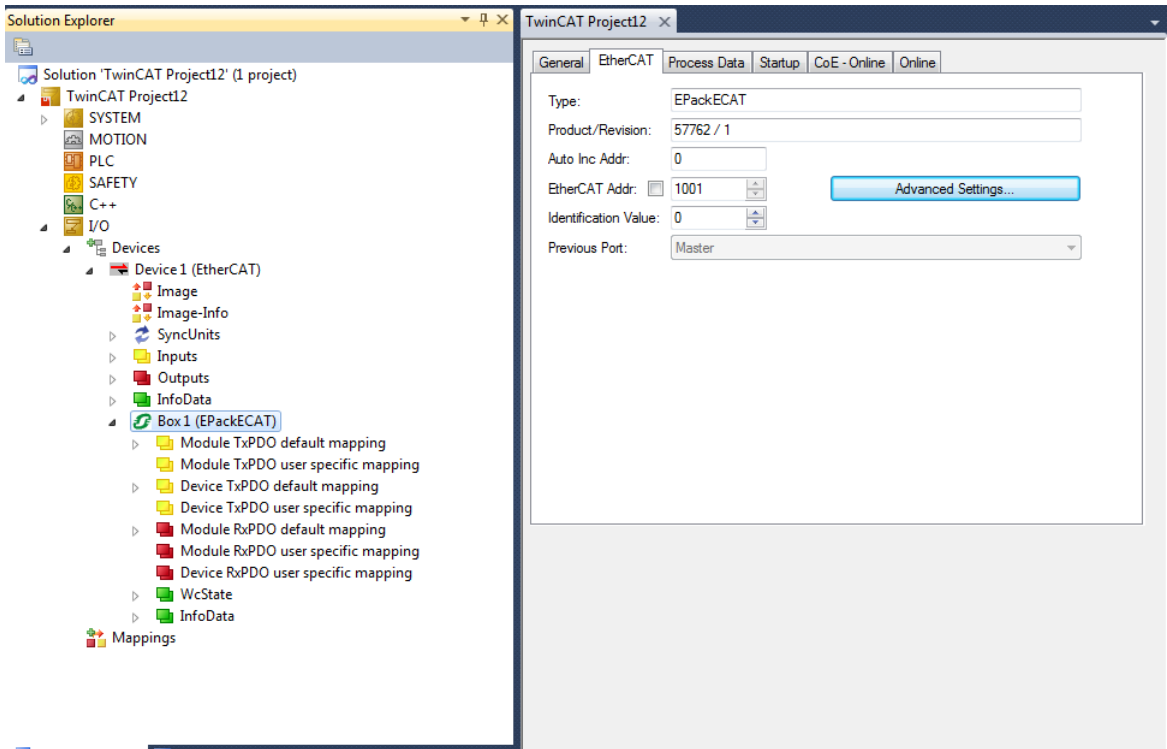


- f. Configure an IP address in the same subnet
- g. Set the IP address of the NIC as gateway

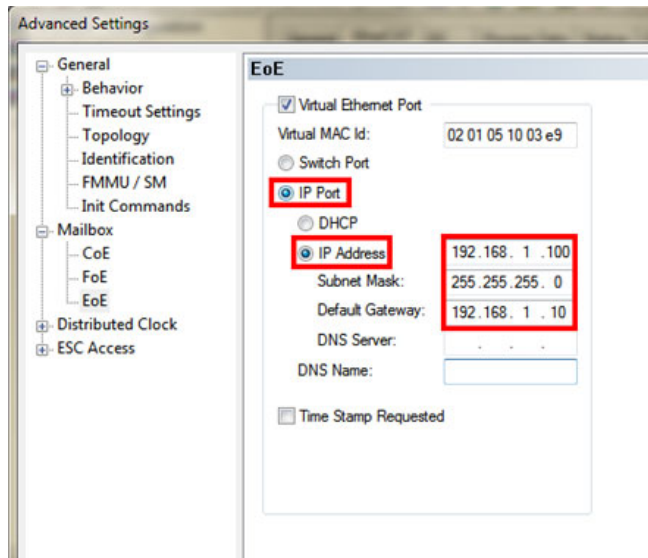

- 4. Set network at least to PRE-OP (mailbox communication needed)


Note: If IP settings are changed from a master where EoE was already running, the ePack instrument must be rebooted (by toggling the power supply OFF and back ON).

5. Open iTools and click Add

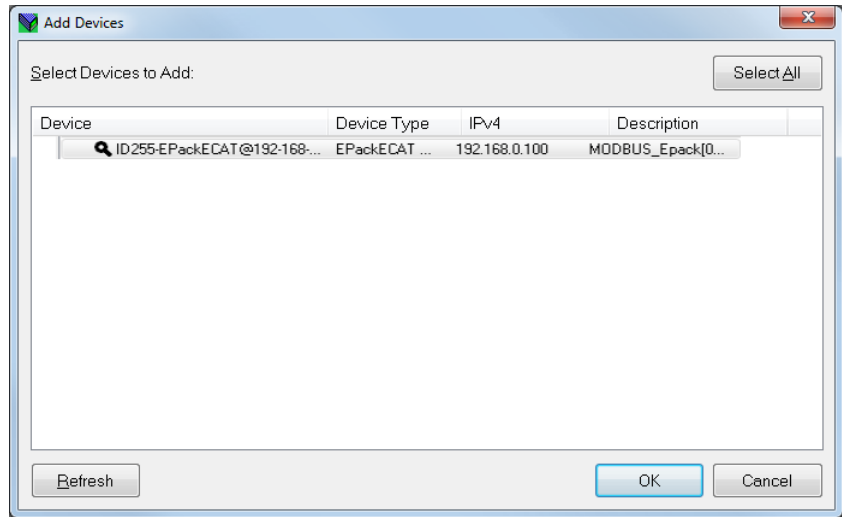


6. Alternatively, DHCP can be used: select “Obtain an IP address automatically” in NIC (step 2.) and Select DHCP in TwinCAT (step 3.f.).

Access EPack from a Remote PC

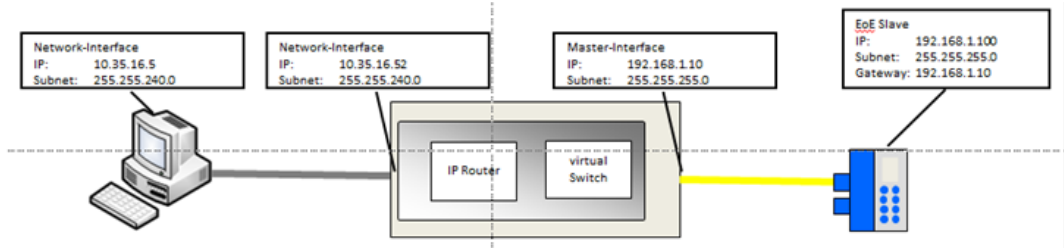

Steps 1 to 3 are the same as those in the previous section (Access EPack from a Master Platform).

- 4. Enable IP Routing on the EtherCAT Master platform. The following steps depend on the operating system.
 - a. Open the Advanced EtherCAT settings of the Master interface and select “IP Enable Router”.

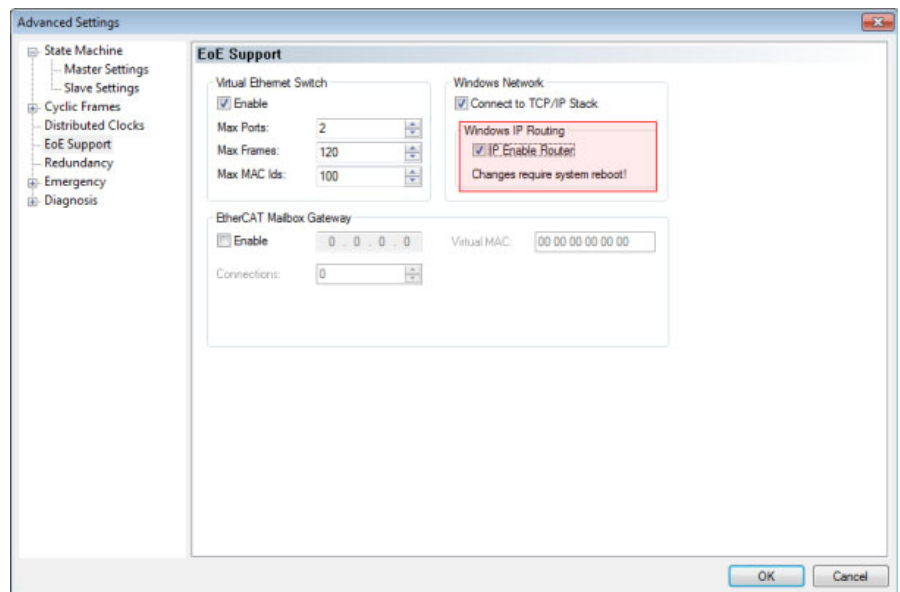


5. Restart the PC.

6. Add Route on the external PC (e.g. Command: route ADD 192.168.1.0 MASK 255.255.255.0 10.35.16.52).
7. Open iTools and click Add.


iTools Interface with EoE

According to EtherCAT specification, EoE is disabled if EtherCAT state is INIT. Therefore, iTools can detect an instrument only if EtherCAT state is higher than INIT.

For some iTools parameters, writing access is restricted to Config Mode. Those parameters are flagged with this symbol  in the Parameter Explorer.

Product Mode (Config or Operator) is based on EtherCAT state machine as defined below:

ECAT state	Product Mode
PREOP	Config
SAFEOP	Operator (but Control in Standby)
OP	Operator

To write a parameter flagged with  from iTools, EtherCAT master must first set the EtherCAT state to PREOP. To transfer a graphical wiring update or load a clone to a device, EtherCAT state must also be PREOP.

Note: As Control.Setup.Standby parameter is used to manage SAFEOP vs OP EtherCAT state transition, it must never be wired as an input in Graphical Wiring Editor.

File Access over EtherCAT (FoE)

Overview to FoE

FoE can be used to upgrade instrument firmware. It can also be used to upload/download instrument configuration, typical use is for instrument replacement.

Firmware file "Eurotherm_EPackECAT_VXXX_cfgVYY.efw" is available on Eurotherm website <https://www.eurotherm.com/downloads>. XXX represents firmware version (e.g. V506) and YY represents version of configuration file compatible with this firmware.

Configuration file version supported by the device can be checked in object 0xF9FF (see "" on page 98). If configuration file version (YY) in Firmware filename is different from the 0xF9FF value, instrument configuration will be erased after firmware has been upgraded. Otherwise, it will remain unchanged.

Notes:

1. To avoid losing configuration in the case that the configuration file version (YY) in Firmware filename is different from 0xF9FF value, iTools can be used to save instrument configuration within a clone file (.uic) before Firmware Upgrade and restore it after.

2. FoE Configuration file can be re-uploaded at any time after a clone restore to get an up-to-date configuration file for future use.


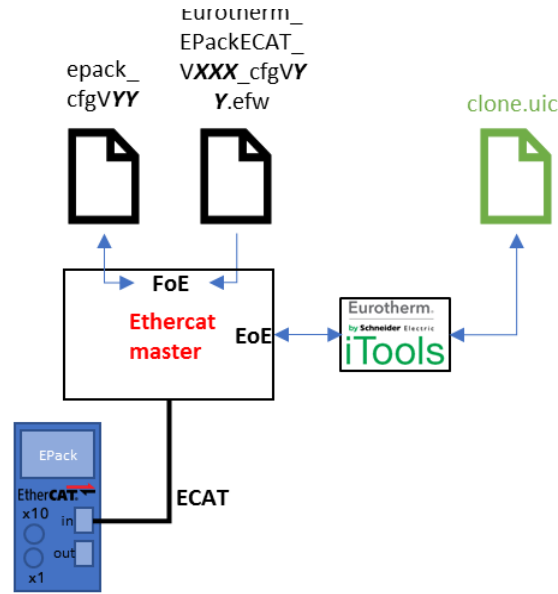


Figure 25 File system


Firmware Upgrade

Firmware upgrade through FoE is supported according to ETG.5003-2.

1. Check Configuration file version in object 0xF9FF and make sure it matches the configuration file version in filename (see "Overview to FoE" on page 78).
2. Set EtherCAT state machine to BOOTSTRAP.
3. On Online Tab of E-Pack device, click Download and select "Eurotherm_EPackECAT_VXXX_cfgVYY.efw" file

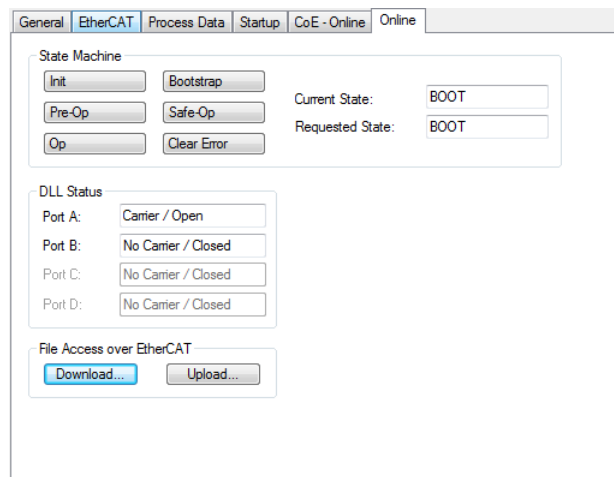

4. On the popup window, make sure String field starts with "Eurotherm_EPackECAT" and Password field is set to "46775570" in hexadecimal format.

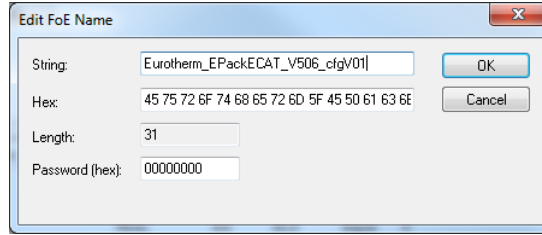

5. Click OK, firmware download starts.


Configuration Upload/Download

Product configuration (including non-volatile parameters values) can be uploaded and stored in a file for backup purposes to be subsequently downloaded back to the same (or a different) instrument.


Upload

To upload a configuration:

1. Set EtherCAT state machine to PREOP.
2. Record Configured Station Alias value of the instrument.
3. Use Store Command (0xFBF2) to make sure any recent change is stored to non-volatile memory.
4. Use Calculate Checksum Command (0xFBF3) to calculate checksum of Configuration currently stored in non-volatile memory. Record this checksum.
5. On Online Tab of EPack device, click Upload and save file with name "epack_cfg" (all lower case) plus any suffix if necessary and with any file extension. It is recommended to include configuration file version (available from object 0xF9FF) within the suffix to easily identify it for future use.

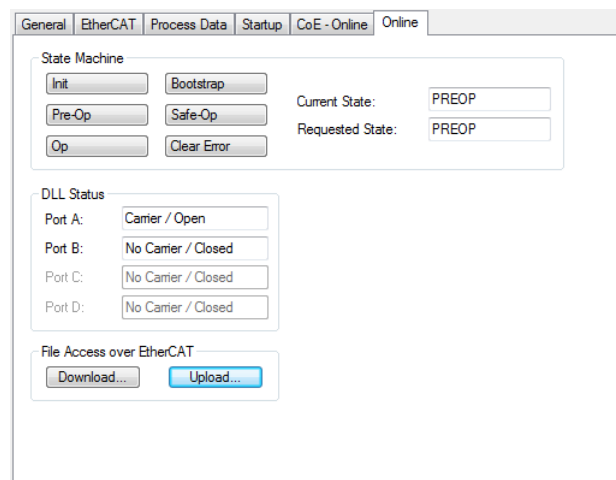

- On the popup window, make sure String field starts with “epack_cfg” and Password field is set to “436F6E66” in hexadecimal format.

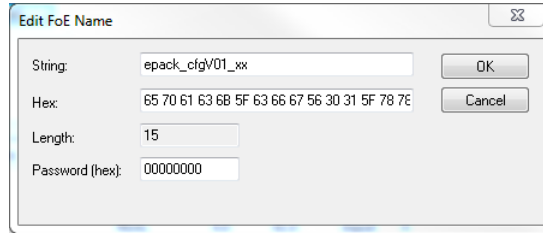

- Click OK, configuration upload starts.

Download

NOTICE

UNINTENDED EQUIPMENT OPERATION


- Non-volatile memory must not be accessed in write mode more than 10,000 times during the whole lifetime of the product.

Failure to follow these instructions can result in non-functional equipment.


Configuration Download via FoE accesses non-volatile memory in write mode.

To download a configuration:

- Set EtherCAT state machine to PREOP.
- Make sure Configured Station Alias value of the instrument is identical to the one from which the file has been uploaded.
- On Online Tab of ePack device, click Download and select a previously stored file

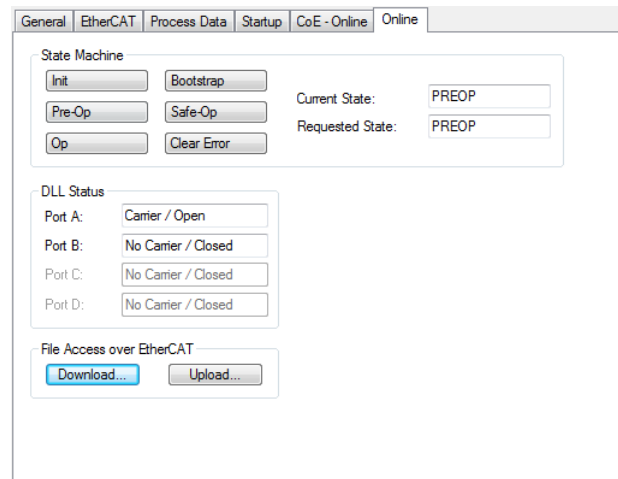

- On the popup window, make sure String field starts by “epack_cfg” and Password field is set to “436F6E66” in hexadecimal format.

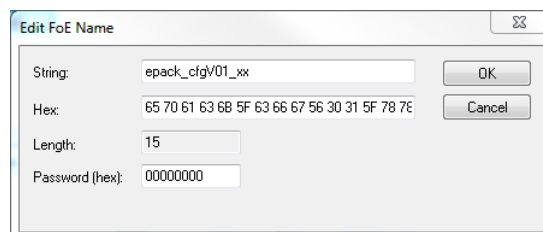

- Click OK, configuration download starts.

6. Use Calculate Checksum Command (0xFBF3) to calculate checksum of the configuration just downloaded in non-volatile memory and make sure it matches the checksum value recorded before Upload operation.

Note: If the configuration file version of file to be downloaded doesn't match current instrument configuration file version (available from object 0xF9FF), download will fail.

EPack Object Dictionary

EPack object dictionary is described in EPack ESI (EtherCAT Slave Information) file "Eurotherm_EPackECAT.xml" available on Eurotherm website <https://www.eurotherm.com/downloads>.

EPack object dictionary is compliant with Semiconductor Common Device Profile ETG.5003-1.

Communication Area

Table 4: Communication Area parameters

Index	SI	Data Type	Name	Default	Description
0x1000		UINT32	Device Type	0x0001138B	Semiconductor Common Device Profile
0x1001		UINT8	Error Register		Reserved for future use
0x1008		STRING	Manufacturer Device Name	EPackECAT	Name of the device
0x1009		STRING	Manufacturer Hardware Version		Hardware version corresponding to PSL (Product Status Level) also written on instrument label
0x100A		STRING	Manufacturer Software Version		Software version of the device
0x100B		STRING	Manufacturer Bootloader Version		Software version of the Bootloader
0x1018			Identity Object		
	1	UINT32	Vendor ID	0x1BC	Eurotherm Limited
	2	UINT32	Product Code	0xE1A2	EPackECAT
	3	UINT32	Revision Number		Revision Number of the device
	4	UINT32	Serial Number		Serial Number of the device
0x10F1			Error Settings		Reserved for future use
	1		Local Error Reaction		
	2		Sync Error Counter Limit		
0x10F8		UINT64	Timestamp Object		Local Timestamp of the device in ns

Process Data Object Mapping Area

Table 5: RxPDO Mapping (0x1600 - 0x17FF)

Index	SI	Data Type	Name	Default	Description
0x1600			Module RxPDO default mapping		
	1	UINT32		0x70010920	Setpoint provider Remote 2
0x1601			Module RxPDO user specific mapping		
	1	UINT32		0x00000010	flexible mapping
	2	UINT32		0x00000010	flexible mapping
	3	UINT32		0x00000010	flexible mapping
	4	UINT32		0x00000010	flexible mapping
	5	UINT32		0x00000010	flexible mapping
	6	UINT32		0x00000010	flexible mapping
	7	UINT32		0x00000010	flexible mapping
0x17FF			Device RxPDO user specific mapping		
	1	UINT32		0x00000010	flexible mapping
	2	UINT32		0x00000010	flexible mapping
	3	UINT32		0x00000010	flexible mapping
	4	UINT32		0x00000010	flexible mapping
	5	UINT32		0x00000010	flexible mapping
	6	UINT32		0x00000010	flexible mapping
	7	UINT32		0x00000010	flexible mapping

Table 6: RxPDO Mapping (0x1600 - 0x17FF)

Index	SI	Data Type	Name	Default	Description
0x1600			Module RxPDO default mapping		
	1	UINT32		0x70010920	Setpoint provider Remote 2
0x1601			Module RxPDO user specific mapping		
	1	UINT32		0x00000010	flexible mapping
	2	UINT32		0x00000010	flexible mapping
	3	UINT32		0x00000010	flexible mapping
	4	UINT32		0x00000010	flexible mapping
	5	UINT32		0x00000010	flexible mapping
	6	UINT32		0x00000010	flexible mapping
	7	UINT32		0x00000010	flexible mapping

Table 6: RxPDO Mapping (0x1600 - 0x17FF)

Index	SI	Data Type	Name	Default	Description
0x17FF			Device RxPDO user specific mapping		
	1	UINT32		0x00000010	flexible mapping
	2	UINT32		0x00000010	flexible mapping
	3	UINT32		0x00000010	flexible mapping
	4	UINT32		0x00000010	flexible mapping
	5	UINT32		0x00000010	flexible mapping
	6	UINT32		0x00000010	flexible mapping
	7	UINT32		0x00000010	flexible mapping

Table 7: TxPDO Mapping (0x1A00 - 0x1BFF)

Index	SI	Data Type	Name	Default	Description
0x1A00			Module TxPDO default mapping		
	1	UINT32		0xF3900008	Latched Exception Status
	2	UINT32		0xF3800008	Active Exception Status
	3	UINT32		0x60020120	Control Process Value
	4	UINT32		0x60020220	Control Main Setpoint
	5	UINT32		0x60000520	Network Current
	6	UINT32		0x60000A20	Network Load Voltage
	7	UINT32		0xF3910120	Latched Device Warning Details
	8	UINT32		0xF3930120	Latched Device Error Details
0x1A01			Module TxPDO user specific mapping		
	1	UINT32		0x00000010	flexible mapping
	2	UINT32		0x00000010	flexible mapping
	3	UINT32		0x00000010	flexible mapping
	4	UINT32		0x00000010	flexible mapping
	5	UINT32		0x00000010	flexible mapping
	6	UINT32		0x00000010	flexible mapping
	7	UINT32		0x00000010	flexible mapping
	8	UINT32		0x00000010	flexible mapping
0x1BFE			Device TxPDO default mapping		
	1	UINT32		0xF3970120	Latched Global Device Error Details
0x1BFF			Device TxPDO user specific mapping		
	1	UINT32		0x00000010	flexible mapping
	2	UINT32		0x00000010	flexible mapping

Table 7: TxPDO Mapping (0x1A00 - 0x1BFF)

Index	SI	Data Type	Name	Default	Description
	3	UINT32		0x00000010	flexible mapping
	4	UINT32		0x00000010	flexible mapping
	5	UINT32		0x00000010	flexible mapping
	6	UINT32		0x00000010	flexible mapping
	7	UINT32		0x00000010	flexible mapping
	8	UINT32		0x00000010	flexible mapping

Synchronization Object Area

Table 8: Sync Manager Communication Type

Index	SI	Data Type	Name	Default	Description
0x1C00					
	1	UINT8	Communication Type Sync Manager 0	0x01	Mailbox Receive (Master to Slave)
	2	UINT8	Communication Type Sync Manager 1	0x02	Mailbox Send (Slave to Master)
	3	UINT8	Communication Type Sync Manager 2	0x03	Process Data Out (Master to Slave)
	4	UINT8	Communication Type Sync Manager 3	0x04	Process data In (Slave to Master)

Table 9: SyncManager 2 Assignment

Index	SI	Data Type	Name	Default	Description
0x1C12					
	1	UINT16		0x1600	Module RxPDO default mapping
	2	UINT16		0x1601	Module RxPDO user specific mapping
	3	UINT16		0x17FF	Device RxPDO user specific mapping

Table 10: SyncManager 3 Assignment

Index	SI	Data Type	Name	Default	Description
0x1C13					
	1	UINT16		0x1A00	Module TxPDO default mapping
	2	UINT16		0x1A01	Module TxPDO user specific mapping
	3	UINT16		0x1BFE	Device TxPDO default mapping
	4	UINT16		0x1BFF	Device TxPDO user specific mapping

Note: See "Synchronization" on page 106 for more information on object entry meaning.

Table 11: SyncManager 2 Configuration

Index	SI	Data Type	Name	Default	Description
0x1C32					
1		UINT16	Synchronization Type	0x0000	Free Run
2		UINT32	Cycle Time		Current Cycle time (Need 0x1C32.8 Get Cycle Time = 1)
4		UINT16	Synchronization Types supported	0x0001	Free Run only supported
5		UINT32	Minimum Cycle Time		Current Minimum Cycle Time (Need 0x1C32.8 Get Cycle Time = 1)
6		UINT32	Calc and Copy Time		Current Calc and Copy Time (Need 0x1C32.8 Get Cycle Time = 1)
8		UINT16	Get Cycle Time	0x0000	Write 1 to start Cycle Time Measurements
9		<i>UINT32</i>	<i>Delay Time</i>		<i>Not used</i>
10		<i>UINT32</i>	<i>Sync0 Cycle Time</i>		<i>Not used</i>
11		<i>UINT16</i>	<i>SM-Event Missed</i>		<i>Not used</i>
12		<i>UINT16</i>	<i>Cycle Time Too Small</i>		<i>Not used</i>
32		<i>UINT8</i>	<i>Sync Error</i>		<i>Not used</i>

Note: See "Synchronization" on page 106 for more information on object entry meaning.

Table 12: SyncManager 3 Configuration

Index	SI	Data Type	Name	Default	Description
0x1C33					
1		UINT16	Synchronization Type	0x0000	Free Run
2		UINT32	Cycle Time		Current Cycle time (Need 0x1C33.8 Get Cycle Time = 1)
4		UINT16	Synchronization Types supported	0x0001	Free Run only supported
5		UINT32	Minimum Cycle Time		Current Minimum Cycle Time (Need 0x1C33.8 Get Cycle Time = 1)
6		UINT32	Calc and Copy Time		Current Calc and Copy Time (Need 0x1C33.8 Get Cycle Time = 1)
8		UINT16	Get Cycle Time	0x0000	Write 1 to start Cycle Time Measurements
9		<i>UINT32</i>	<i>Delay Time</i>		<i>Not used</i>
10		<i>UINT32</i>	<i>Sync0 Cycle Time</i>		<i>Not used</i>
11		<i>UINT16</i>	<i>SM-Event Missed</i>		<i>Not used</i>
12		<i>UINT16</i>	<i>Cycle Time Too Small</i>		<i>Not used</i>
32		<i>UINT8</i>	<i>Sync Error</i>		<i>Not used</i>

Object Area of the Module

Input Data

Any input data object can be mapped in TxPDO.

Table 13: Network Data (real)

Index	SI	Data Type	Name
0x6000			Network (real)
	0x01	REAL	Network Frequency
	0x02	REAL	Network Line Voltage
	0x05	REAL	Network Current
	0x0A	REAL	Network Load Voltage
	0x0F	REAL	Network Power per modulation period
	0x10	REAL	Network Power per main cycle
	0x11	REAL	Network Apparent Power
	0x12	REAL	Network Power Factor
	0x13	REAL	Network Load Impedance
	0x16	REAL	Network Z reference
	0x19	BOOL	Network PLF Adjusted

Table 14: Setpoint Provider Data (real)

Index	SI	Data Type	Name
0x6001			Setpoint Provider (real)
	0x01	REAL	Setpoint provider Working Setpoint
	0x02	REAL	Setpoint provider Working Setpoint in Engineering Units
	0x03	BOOL	Setpoint provider Ramp rate Status

Table 15: Control Data (real)

Index	SI	Data Type	Name
0x6002			Control (real)
	0x01	REAL	Control Process Value
	0x02	REAL	Control Main Setpoint
	0x03	REAL	Control Transfer Process Value
	0x04	REAL	Control Limit PV1
	0x05	REAL	Control Limit PV2
	0x06	REAL	Control Limit PV3
	0x07	BIT3	Control Status
	0x0A	REAL	Control Output Power
	0x0B	REAL	Control Phase Angle Output for PA reduction

Table 16: Modulator Data (real)

Index	SI	Data Type	Name
0x6003			Modulator (real)
	0x01	REAL	Modulator Output

Table 17: Firing Data

Index	SI	Data Type	Name
0x6004			Firing
	0x01	BOOL	Firing Output Safety Ramp Status

Table 18: Network Data (integer)

Index	SI	Data Type	Name
0x6005			Network (integer)
	0x01	UINT	Network Frequency
	0x02	UINT	Network Line Voltage
	0x05	UINT	Network Current
	0x0A	UINT	Network Load Voltage
	0x0F	UINT	Network Power per modulation period
	0x10	UINT	Network Power per main cycle
	0x11	UINT	Network Apparent Power
	0x12	UINT	Network Power Factor
	0x13	UINT	Network Load Impedance
	0x16	UINT	Network Z reference
	0x19	BOOL	Network PLF Adjusted

Table 19: Setpoint Provider Data (integer)

Index	SI	Data Type	Name
0x6006			Setpoint Provider (integer)
	0x01	UINT	Setpoint provider Working Setpoint
	0x02	UINT	Setpoint provider Working Setpoint in Engineering Units
	0x03	BOOL	Setpoint provider Ramp rate Status

Table 20: Control Data (integer)

Index	SI	Data Type	Name
0x6007			Control (integer)
	0x01	UINT	Control Process Value
	0x02	UINT	Control Main Setpoint
	0x03	UINT	Control Transfer Process Value
	0x04	UINT	Control Limit PV1

Table 20: Control Data (integer)

Index	SI	Data Type	Name
	0x05	UINT	Control Limit PV2
	0x06	UINT	Control Limit PV3
	0x07	BIT3	Control Status
	0x0A	UINT	Control Output Power
	0x0B	UINT	Control Phase Angle Output for PA reduction

Table 21: Modulator Data (integer)

Index	SI	Data Type	Name
0x6008			Modulator (integer)
	0x01	UINT	Modulator Output

Output Data

Any output data object can be mapped in RxPDO.

Table 22: Network Data

Index	SI	Data Type	Name
0x7000			Network
	0x01	BIT3	Network PLF Adjust request

Table 23: Setpoint Provider Data (real)

Index	SI	Data Type	Name
0x7001			Setpoint Provider (real)
	0x01	BOOL	Setpoint provider Setpoint Selection
	0x02	BOOL	Setpoint provider Remote Setpoint selection
	0x03	BOOL	Setpoint provider Disable ramp
	0x04	BOOL	Operator access to Setpoint
	0x07	REAL	Setpoint provider Local Setpoint
	0x08	REAL	Setpoint provider Remote 1
	0x09	REAL	Setpoint provider Remote 2

Table 24: Control Data (real)

Index	SI	Data Type	Name
0x7002			Control (real)
	0x05	REAL	Control Limit setpoint 1
	0x06	REAL	Control Limit setpoint 2
	0x07	REAL	Control Limit setpoint 3

Table 25: Modulator Data

Index	SI	DataType	Name
0x7003			Modulator
	0x01	USINT	Modulator Minimum On Time
	0x02	BOOL	Modulator Switch Burst to PA

Table 26: Firing Data

Index	SI	DataType	Name
0x7004			Firing
	0x01	BOOL	Firing Output Enable
	0x02	pad_7	
	0x03	USINT	Firing Soft Start Duration
	0x04	USINT	Firing Soft End Duration
	0x05	USINT	Firing Delay Triggering

Table 27: Setpoint Provider Data (integer)

Index	SI	DataType	Name
0x7006			Setpoint Provider (integer)
	0x01	BOOL	Setpoint provider Setpoint Selection
	0x02	BOOL	Setpoint provider Remote Setpoint selection
	0x03	BOOL	Setpoint provider Disable Ramp
	0x04	BOOL	Operator access to Setpoint
	0x07	UINT	Setpoint provider Local Setpoint
	0x08	UINT	Setpoint provider Remote 1
	0x09	UINT	Setpoint provider Remote 2

Table 28: Control Data (integer)

Index	SI	DataType	Name
0x7007			Control (integer)
	0x05	UINT	Control Limit setpoint 1
	0x06	UINT	Control Limit setpoint 2
	0x07	UINT	Control Limit setpoint 3

Object area of the device

Table 29: Semiconductor Device Profile Data

Index	SI	Data Type	Name	Default	Description
0xF000			Semiconductor Device Profile		
	1	UINT16	Index distance	0x10	Index offset between PDO entries of two consecutive modules (for ETG.5003 = 0x10) This is not relevant for ePack as it supports only one module
	2	UINT16	Maximum number of modules	0x01	ePack supports only one module.
0xF010		UINT32	Module Profile List	0x00000001	0x00000001 = Common device profile

Table 30: Exception Handling Data

Index	SI	Data Type	Name	Default	Description
0xF380		UINT8	Active Exception Status		A condensed summary byte describing the collection of active device exceptions after corresponding masks (0xF3Ax) were applied. Bit 0: Device Warning Bit 1: Manufacturer Warning Bit 2: Device Error Bit 3: Manufacturer Error Bit 4...7: Reserved
0xF381			Active Device Warning Details		

Table 30: Exception Handling Data

Index	SI	Data Type	Name	Default	Description
	1	UINT32	Active Device Warning Details		Bit 0-4 : Reserved Bit 5 : Network TLF (Total Load Failure) Bit 6 : Reserved Bit 7 : Network PLF (Partial Load Failure) Bit 8 : Reserved Bit 9 : Network Over Volt Bit 10 : Network Under Volt Bit 11 : Network Pre Temp: Reserved Bit 12 : Network Over Current Bit 13-14 : Reserved Bit 15 : Alarm External Input Bit 16 : Control Closed Loop Bit 17 : Control Transfer active Bit 18 : Control Limit active Bit 19-31 : Reserved
0xF383			Active Device Error Details		
	1	UINT32	Active Device Error Details		Bit 0 : Network Missing mains Bit 1 : Network Thyristor Shot Circuit Bit 2 : Network Over Temp: Reserved Bit 3 : Network Dips Bit 4 : Network Frequency Fault Bit 5 : Reserved Bit 6 : Network Chop Off Bit 7-13 : Reserved Bit 14 : AnalogIP Over Current Bit 15-31 : Reserved
0xF387			Active Global Device Error Details		
	1	UINT32	Active Global Device Error Details		Bit 0-23 : Reserved Bit 24 : Any bit in Global Status word 0 (FAF0.1) Bit 25 : Any bit in Global Status word 1 (FAF0.2) Bit 26 : Any bit in Global Status word 2 (FAF0.3) Bit 27 : Any bit in Global Status word 3 (FAF0.4) Bit 28-31 : Reserved

Table 30: Exception Handling Data

Index	SI	Data Type	Name	Default	Description
0xF390		UINT8	Latched Exception Status		A condensed summary byte describing the collection of device exceptions after corresponding masks (0xF3Ax) were applied. Bit 0 : Device Warning Bit 1 : Manufacturer Warning Bit 2 : Device Error Bit 3 : Manufacturer Error Bit 4...7 : Reserved
0xF391			Latched Device Warning Details		
	1	UINT32	Latched Device Warning Details		Bit 0-4 : Reserved Bit 5 : Network TLF (Total Load Failure) Bit 6 : Reserved Bit 7 : Network PLF (Partial Load Failure) Bit 8 : Reserved Bit 9 : Network Over Volt Bit 10 : Network Under Volt Bit 11 : Network Pre Temp: Reserved Bit 12 : Network Over Current Bit 13-14 : Reserved Bit 15 : Alarm External Input Bit 16 : Control Closed Loop Bit 17 : Control Transfer active Bit 18 : Control Limit active Bit 19-31 : Reserved
0xF393			Latched Device Error Details		

Table 30: Exception Handling Data

Index	SI	Data Type	Name	Default	Description
	1	UINT32	Latched Device Error Details		Bit 0 : Network Missing mains Bit 1 : Network Thyristor Short Circuit Bit 2 : Network Over Temp: Reserved Bit 3 : Network Dips Bit 4 : Network Frequency Fault Bit 5 : Reserved Bit 6 : Network Chop Off Bit 7-13 : Reserved Bit 14 : AnalogIP Over Current Bit 15-31 : Reserved
0xF397			Latched Global Device Error Details		
	1	UINT32	Latched Global Device Error Details		Bit 0-23 : Reserved Bit 24 : Any bit in Global Status word 0 (FAF0.1) Bit 25 : Any bit in Global Status word 1 (FAF0.2) Bit 26 : Any bit in Global Status word 2 (FAF0.3) Bit 27 : Any bit in Global Status word 3 (FAF0.4) Bit 28-31 : Reserved
0xF3A1			Device Warning Mask		

Table 30: Exception Handling Data

Index	SI	Data Type	Name	Default	Description
	1	UINT32	Device Warning Mask	0x000796A0	<p>Bitmask to include the corresponding device warning exception bits in the active and latched exception status objects (0xF380 bit 0 and 0xF390 bit 0), if the corresponding bit is TRUE.</p> <p>Bit 0-4 : Reserved</p> <p>Bit 5 : Network TLF (Total Load Failure)</p> <p>Bit 6 : Reserved</p> <p>Bit 7 : Network PLF (Partial Load Failure)</p> <p>Bit 8 : Reserved</p> <p>Bit 9 : Network Over Volt</p> <p>Bit 10 : Network Under Volt</p> <p>Bit 11 : Network Pre Temp: Reserved</p> <p>Bit 12 : Network Over Current</p> <p>Bit 13-14 : Reserved</p> <p>Bit 15 : Alarm External Input</p> <p>Bit 16 : Control Closed Loop</p> <p>Bit 17 : Control Transfer active</p> <p>Bit 18 : Control Limit active</p> <p>Bit 19-31 : Reserved</p>
0xF3A3			Device Error Mask		
	1	UINT32	Device Error Mask	0x0000405F	<p>Bitmask to include the corresponding device error exception bits in the active and latched exception status objects (0xF380 bit 2 and 0xF390 bit 2), if the corresponding bit is TRUE.</p> <p>Bit 0 : Network Missing mains</p> <p>Bit 1 : Network Thyristor Short Circuit</p> <p>Bit 2 : Network Over Temp: Reserved</p> <p>Bit 3 : Network Dips</p> <p>Bit 4 : Network Frequency Fault</p> <p>Bit 5 : Reserved</p> <p>Bit 6 : Network Chop Off</p> <p>Bit 7-13 : Reserved</p> <p>Bit 14 : AnalogIP Over Current</p> <p>Bit 15-31 : Reserved</p> <p>Note: Modifying this mask can lead to unexpected behavior of Power Controller.</p>

Table 30: Exception Handling Data

Index	SI	Data Type	Name	Default	Description
0xF3A7			Global Device Error Mask		
	1	UINT32	Global Device Error Mask	0x0F000000	Bitmask to include the corresponding device error exception bits in the active and latched exception status objects (0xF380 bit 2 and 0xF390 bit 2), always TRUE (non-maskable). Bit 0-23 : Reserved Bit 24 : Config Error, i.e. any bit in Global Status word 0 (FAF0.1) Bit 25 : Hardware Error, i.e. any bit in Global Status word 1 (FAF0.2) Bit 26 : Data Error, i.e. any bit in Global Status word 2 (FAF0.3) Bit 27 : Internal Error, i.e. any bit in Global Status word 3 (FAF0.4) Bit 28-31 : Reserved

Table 31: Manufacturer Specific Device Data

Index	SI	Data Type	Name
0xF500			User Value (real)
	0x01	REAL	UserVal1 value
	0x02	REAL	UserVal2 value
	0x03	REAL	UserVal3 value
	0x04	REAL	UserVal4 value
0xF501			User Value (integer)
	0x01	UINT16	UserVal1 value
	0x02	UINT16	UserVal2 value
	0x03	UINT16	UserVal3 value
	0x04	UINT16	UserVal4 value

0xF500 and 0xF501 Objects can be used as an interface to any custom configuration designed through graphical wiring. Internal parameters to be reached out must be wired to UserVal function block in Graphical Wiring Editor and can then be accessed from cyclic exchange (Process Data) or CoE access. This can be done in both input (master to slave) or output (slave to master) direction.

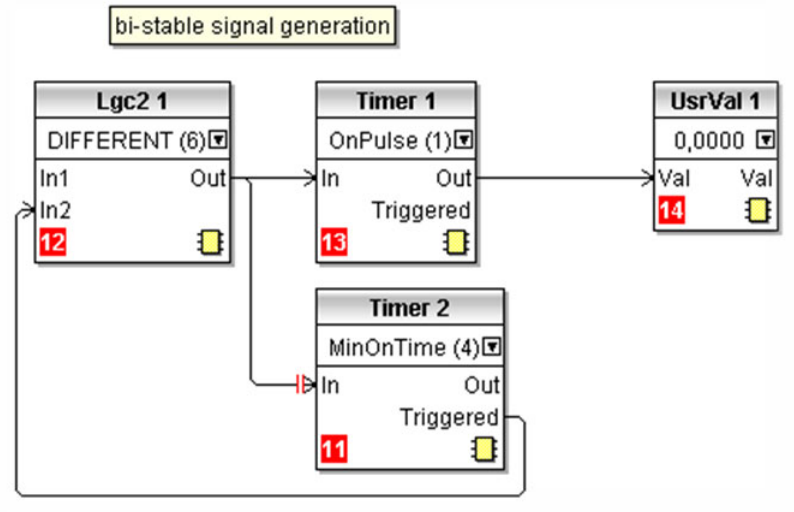


Figure 26 UserVal wiring example

Table 32: Device Specific Inputs Data

Index	SI	DataType	Name	Description
0xF6F0			Input Latch Local Timestamp	
	1	UINT32	Input Latch Local Timestamp	Local controller time corresponding to the input latch time in microseconds. It starts at zero on device power-up.
0xF6EA			Analog Interface	Analog input of the device
	0x01	UINT16	Analog Input Measured value in true units	
	0x02	UINT16	Analog Input Scaled output value in process units	
0xF6EB			Digital Interface	Digital input of the device
	0x01	BOOL	Digital Input 1 Measured value	
	0x02	BOOL	Digital Input 1 Current state (after inversion if any)	
	0x03	BOOL	Digital Input 2 Measured value	
	0x04	BOOL	Digital Input 2 current state (after inversion if any)	
0xF6EC			Relay	
	0x01	BOOL	Relay Measured value	The measured value reflects the state of the relay coil, as follows: 0 = not energized 1 = energized

Table 33: Device Specific Outputs Data

Index	SI	Data Type	Name	Description
0xF7EC			Relay	
	0x01	BOOL	Relay Process value	This is the desired value. The relay is configured as a fail-safe output. This means that the relay is energized when the PV is set to zero.

Table 34: Device Specific Information Data

Index	SI	Data Type	Name	Description
0xF9F0		STRING(10)	Manufacturer Serial Number	A string representing the manufacturer's serial number for the device. Note: This has the same value as 0x1018:04.
0xF9F1	1	UINT32	CDP Functional Generation Number	Common Device Profile Functional Generation Number: 2
0xF9F2	1	UINT32	SDP Functional Generation Number	Not used as ePack doesn't comply with any SDP.
0xF9F3		STRING(17)	Vendor Name	This string identifies the supplier of the device: "Eurotherm Limited"
0xF9F4		STRING(3)	Semiconductor SDP Device Name	String identifying the device type: "N/A"
0xF9F5	1	UINT8	Output Identifier	Output identifier of the module, This value can be mapped to both the RxPDO and TxPDO. EPack stores the value in memory as written by the host. The master can then read this value back through the TxPDO to ensure the RxPDO was received.
0xF9F6		UINT32	Time since power on	The time the device has been currently powered on, in seconds, regardless of communication presence.
0xF9F8		UINT32	Firmware Update Functional Generation Number	Firmware Update Functional Generation Number supported by the device: 0x00000001
0xF9ED			Device features	

Table 34: Device Specific Information Data

Index	SI	Data Type	Name	Description
	1	UINT8	Power Module Type	Power Module Type identification: 0: 32A 1: 63A 2: 100A 3: 125A
	2	UINT8	Maximum Current Rating Option	Factory configured to indicate the maximum current (physical rating) of the modules: 0: 16A 1: 25A 2: 32A 3: 40A 4: 50A 5: 63A 6: 80A 7: 100A 8: 125A 9: 160A
	3	UINT8	Feature Option	A bitmap parameter that indicates the feature option available: Bit 0: Current Limit Bit 1: Transfer Bit 2: Power Control Bit 3: Energy Bit 4: Graphical Wiring Editor Bit 5: Reserved Bit 6: OEM Security Bit 7: Reserved
0xF9EF		STRING(3)	FoE Configuration File Version	Version of configuration file compatible for this device (see "File Access over EtherCAT (FoE)" on page 78)

Table 35: Device Specific Diagnosis Data

Index	SI	Data Type	Name	Description
0xFAE8			Global Status	
	1	UINT32	Global Status Word 0	Config Global Status
	2	UINT32	Global Status Word 1	Hardware Global Status

Table 35: Device Specific Diagnosis Data

Index	SI	DataType	Name	Description
	3	UINT32	Global Status Word 2	Data Global Status
	4	UINT32	Global Status Word 3	Internal Global Status
	5	UINT16	Strategy Status Word	<p>A bitmap parameter that indicates the status of the strategy. The description of each bit and its meaning when it is set is as follows:</p> <p>Bit 0: Network is not firing</p> <p>Bit 1: Network is not synchronized</p> <p>Bit 2-7: Reserved</p> <p>Bit 8: Strategy is in Standby Mode</p> <p>Bit 9: Strategy is in Telemetry Mode</p> <p>Bit 10: Strategy is in Calibration Mode</p> <p>Bit 11-15: Reserved</p>

Table 36: Command Objects

Index	SI	DataType	Name	Description
0xFBF0			Device Reset Command	<p>Execution of this command causes the device to emulate a complete power cycle. This includes an ESC reset.</p> <p>There are two versions of this command:</p> <p>Device Reset: Product Configuration will not change as a result of this reset. All volatile parameters will revert to power-on defaults as a result of the reset.</p> <p>Factory Reset: Product Configuration will be changed to out-of-the-box default. All volatile parameters will revert to power-on defaults as a result of the reset.</p> <p>Note: After a Factory Reset, Quick Start default menu will appear on the display screen as long as EtherCAT state remains INIT or PREOP. Quick Start default values will be automatically loaded on PREOP to SAFEOP state transition and the instrument will run this default configuration.</p>
	1	ARRAY [0..5] OF BYTE	Command	<p>A device reset is initiated when the following byte sequence is sent:</p> <p>Byte 0: 0x74</p> <p>Byte 1: 0x65</p> <p>Byte 2: 0x73</p> <p>Byte 3: 0x65</p> <p>Byte 4: 0x72</p> <p>Byte 5: Device Standard Reset = 0x00, Factory Reset = 0x66</p>

Table 36: Command Objects

Index	SI	Data Type	Name	Description
0xFBF1	2	UINT8	Status	Supported values: 0: Default value if the command has not been initiated. Not a supported value otherwise. 1: Reserved 2: Last command completed, error, no response 3-254: Reserved 255: Command is executing
	4	ARRAY [0..1] OF BYTE	Response	Byte 0: see 0xFBF0.2 Byte 1: Unused
			Exception Reset Command	Execution of this command clears the latched exceptions.
	1	ARRAY [0..4] OF BYTE	Command	A Latched Exception Reset is initiated when the following byte sequence is sent: Byte 0: 0x74 Byte 1: 0x65 Byte 2: 0x73 Byte 3: 0x65 Byte 4: 0x72
	2	UINT8	Status	Supported values: 0: Last command completed, no error, no response 1: Reserved 2: Last command completed, error, no response 3-255: Reserved
	3	ARRAY [0..1] OF BYTE	Response	Byte 0: see 0xFBF1.2 Byte 1: Unused

NOTICE

UNINTENDED EQUIPMENT OPERATION

- Non-volatile memory must not be accessed in write mode more than 10,000 times during the whole lifetime of the product.

Failure to follow these instructions can result in non-functional equipment.

- Store parameter command execution accesses non-volatile memory in write mode.
- All non-volatile parameter changes are automatically stored at power down in a special part of memory called “smart flash” and restored at power-up without any action needed by user. Therefore, Store parameters command should only be used before configuration upload (see configuration upload chapter) in order to copy “smart flash” changes into non-volatile memory.

Table 36: Command Objects

Index	SI	Data Type	Name	Description
0xFBF2			Store Parameters Command	Execution of this command will store any configuration change made from iTools after entering PREOP to non-volatile memory. It will also copy non-volatile parameter changes from "smart flash" to non-volatile memory. This command is restricted to PREOP or lower state.
	1	ARRAY [0..3] OF BYTE	Command	<p>Read:</p> <p>Bit 0 = 1: slave saves the non-volatile parameters when writing 0xFBF2:01 with 0x65766173</p> <p>Bit 1-31: reserved</p> <p>Write:</p> <p>Will store any configuration change made from iTools after entering PREOP and copy non-volatile parameter changes from "smart flash" to non-volatile memory when the following is sent:</p> <p>Byte 0: 0x73</p> <p>Byte 1: 0x61</p> <p>Byte 2: 0x76</p> <p>Byte 3: 0x65</p>
	2	UINT8	Status	<p>Supported values:</p> <p>0: Last command completed, no error, no response</p> <p>1: Reserved</p> <p>2: Last command completed, error, no response</p> <p>3-255: Reserved</p>
	4	ARRAY [0..1] OF BYTE	Response	<p>Byte 0: see 0xFBF2.2</p> <p>Byte 1: Unused</p>
0xFBF3			Calculate Checksum Command	Execution of this command will calculate checksum of non-volatile memory content. This command is restricted to PREOP or lower state.

Table 36: Command Objects

Index	SI	Data Type	Name	Description
	1	ARRAY [0..3] OF BYTE	Command	<p>Read: Returns information about the supported checksum type:</p> <p>Bit 0 = 1: Non-volatile parameters supported</p> <p>Bit 1 = 1: CRC-32</p> <p>Bit 2-31: Reserved</p> <p>Write: Checksum Type Selection and Start Calculation</p> <p>A write access to this subindex must only set Bit 1 to true. If other values are written, the Abort Code "0x06040043 Parameter is incompatible" is returned.</p> <p>Bit 0: Reserved, must be 0</p> <p>Bit 1 = 1: CRC-32</p> <p>Bit 2...31: Reserved, must be 0</p>
	2	UINT8	Status	<p>Supported values:</p> <p>0: Default value if the command has not been initiated. Not a supported value otherwise.</p> <p>1: Last command completed, no error, reply there</p> <p>2: Last command completed, error, no response</p> <p>3-255: Reserved</p>
0xFBF4	4	ARRAY [0..5] OF BYTE	Response	<p>Byte 0: see 0xFBF3.2</p> <p>Byte 1: Unused</p> <p>Byte 2-5: Checksum return value.</p>
			Load Parameters Command	<p>Execution of this command will load currently stored configuration (including non-volatile parameter values) from non-volatile memory. Any configuration change made from iTools after entering PREOP will therefore be overwritten. This command is restricted to PREOP or lower state.</p>
	1	ARRAY [0..3] OF BYTE	Command	<p>Read:</p> <p>Bit 0 = 1: Slave loads configuration when writing 0xFBF4:01 with 0x64616F6C</p> <p>Bit 1-31: Reserved</p> <p>Write:</p> <p>Configuration will be loaded from non-volatile memory when the following is sent:</p> <p>Byte 0: 0x6C</p> <p>Byte 1: 0x6F</p> <p>Byte 2: 0x61</p> <p>Byte 3: 0x64</p>

Table 36: Command Objects

Index	SI	Data Type	Name	Description
	2	UINT8	Status	Supported values: 0: Last command completed, no error, no response 1: Reserved 2: Last command completed, error, no response 3-255: Reserved
	4	ARRAY [0..1] OF BYTE	Response	Byte 0: see 0xFBF4.2 Byte 1: Unused

Process Data

Mapping

Process Data objects content are defined in "Process Data Object Mapping Area" on page 83.

There are up to three objects for Outputs mapping and up to four objects for Inputs mapping. Some objects are mandatory in PDO assignment to established cyclic exchange between master and EPack slave and some of them can be removed from PDO assignment:

Table 37: Outputs:


Index	Name	PDO assignment
0x1600	Module RxPDO default mapping	Mandatory
0x1601	Module RxPDO user specific mapping	Optional
0x17FF	Device RxPDO user specific mapping	Optional

Table 38: Inputs:


Index	Name	PDO assignment
0x1A00	Module TxPDO default mapping	Mandatory
0x1A01	Module TxPDO user specific mapping	Optional
0x1BFE	Device TxPDO default mapping	Mandatory
0x1BFF	Device TxPDO user specific mapping	Optional

For all objects, PDO content can be customized. With TwinCAT, right-click on PDO content list in Process Data tab and select:

- Insert... to add a PDO entry
- Delete... to remove a PDO entry
- Edit... to modify a PDO entry
- Move Up... / Move Down... to change PDO entry position

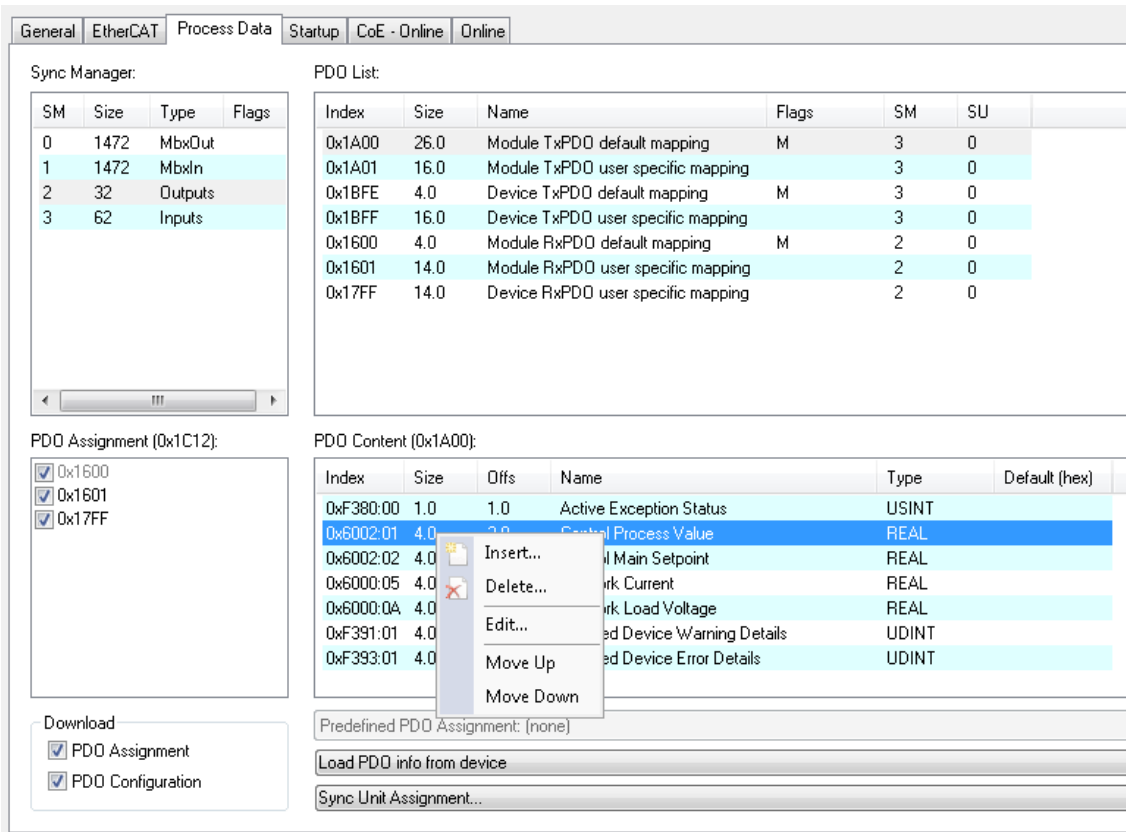


When selecting Insert or Edit, PDO entry can be selected from the list of all mappable inputs or outputs (depending whether PDO is Tx or Rx).

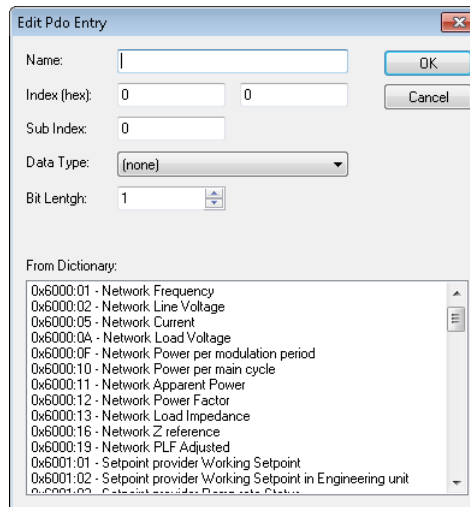

Note: For flexible PDO assignment/configuration, all the following rules must be complied with:

- Same PDO entry can't be mapped twice as an Output (SM2).
- Number of PDO entries in a PDO can be changed but must remain less than or equal to the default number of PDO entries.

- Size of a PDO entry can be changed but overall size of SM2 (Outputs) must remain less than or equal to 32 and overall size of SM3 (Inputs) must remain less than or equal to 64.

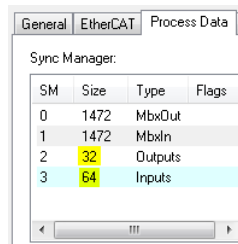

- Structure/Alignment Rules:
 - Any PDO entry greater than 8 bits must always start at an exact WORD offset from the starting address of the PDO itself.
 - Any PDO entry with less than or equal to 8 bits must be contained in 16-bit blocks each allocated at an exact WORD offset from the starting address of the PDO itself. Moreover, within each of these 16-bit blocks, the transition between the first and the second byte must be also the transition between two different PDO entries, and the overall 16-bit block must be completely filled using a padding entry (Index value 0, sub Index value 0 and Bit Length equal to the length of padding needed, from 1 to 15).

Synchronization


EPack main application must be synchronized on network main to be able to perform all RMS measurement on a whole half period and manage firing accurately. Therefore, it can't be synchronized on any EtherCAT communication cycle and EtherCAT process data exchange is performed in Free Run mode.

However, when process data output cyclic exchange is established (OP state), EtherCAT process data execution will be internally synchronized on EPack main application as defined on the following timing diagram.

This guarantees that outputs are processed and inputs updated accordingly within a network half period. (10ms@50Hz or 8ms@63Hz).

Note: If network main is not connected, EPack main application runs cyclically every 18ms and therefore, [output process / input update] can take up to 18ms.

All timings described on the following timing diagram can be measured in the live environment using object 0x1C32 and 0x1C33 (see "" on page 85 and "" on page 86).

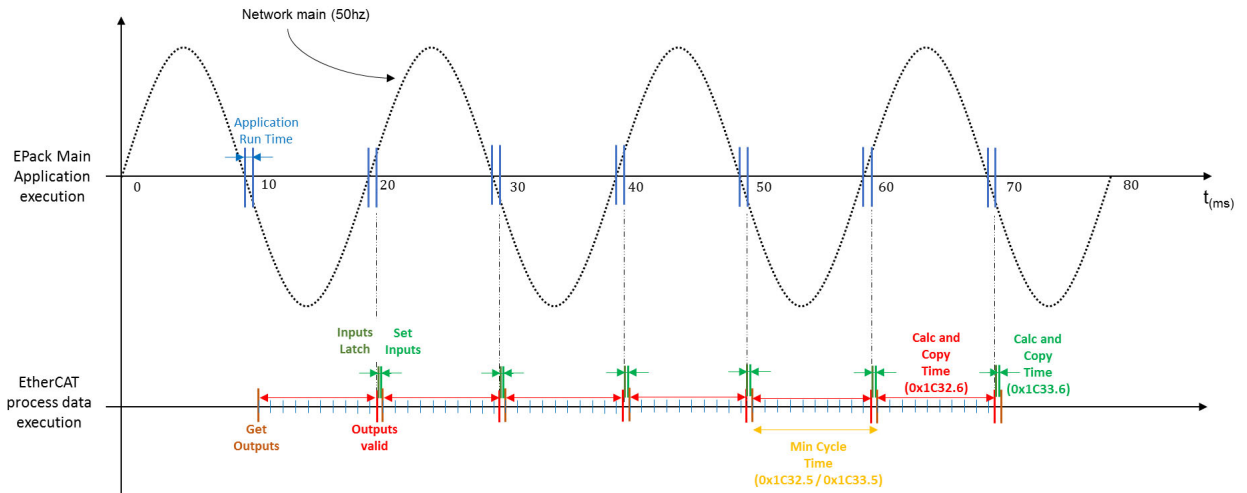

CAN Application Protocol over EtherCAT (CoE)

All objects from the dictionary can be accessed through CoE. Reading can be done in all states. Writing can be allowed, excluded or restricted to PREOP for some objects.


Index	Name	Flags	Value
1C33:0	SM input parameter		> 32 <
1C33:01	Synchronization Type	RO	0x0000 (0)
1C33:02	Cycle Time	RO	0x00000000 (0)
1C33:04	Synchronization Types supported	RO	0x0001 (1)
1C33:05	Minimum Cycle Time	RO	0x00000000 (0)
1C33:06	Calc and Copy Time	RO	0x00000000 (0)
1C33:08	Get Cycle Time	RW	0x0000 (0)
1C33:09	Delay Time	RO	0x00000000 (0)
1C33:0A	Sync0 Cycle Time	RW	0x00000000 (0)
1C33:0B	SM-Event Missed	RO	0x0000 (0)
1C33:0C	Cycle Time Too Small	RO	0x0000 (0)
1C33:20	Sync Error	RO	FALSE
6000:0	Network (real)		> 25 <
6000:01	Network Frequency	RO P	0.000000 (0.000000e+00)
6000:02	Network Line Voltage	RO P	0.000000 (0.000000e+00)
6000:05	Network Current	RO P	0.000000 (0.000000e+00)
6000:0A	Network Load Voltage	RO P	0.000000 (0.000000e+00)
6000:0F	Network Power per modulation period	RO P	0.000000 (0.000000e+00)
6000:10	Network Power per main cycle	RO P	0.000000 (0.000000e+00)
6000:11	Network Apparent Power	RO P	0.000000 (0.000000e+00)
6000:12	Network Power Factor	RO P	0.000000 (0.000000e+00)
6000:13	Network Load Impedance	RO P	0.000000 (0.000000e+00)
6000:16	Network Z reference	RO P	0.000000 (0.000000e+00)
6000:19	Network PLF Adjusted	RO P	FALSE
6001:0	Setpoint Provider (real)		> 3 <

TwinCAT Project Configuration


TwinCAT is an open PC software solution for real-time control with PLC, NC axis control, programming, and operation.

For further information and installation instructions go to:
<https://infosys.beckhoff.com/>



1. Copy EPack ESI (EtherCAT Slave Information) file “Eurotherm_EPackECAT.xml” (available from Eurotherm website <https://www.eurotherm.com/downloads>) to TwinCAT Installation directory C:\TwinCAT\3.1\Config\Io\EtherCAT
2. Connect EPack instrument from its ECAT IN port to the machine running TwinCAT with an RJ45 cable
3. Open TwinCAT and create a new TwinCAT project

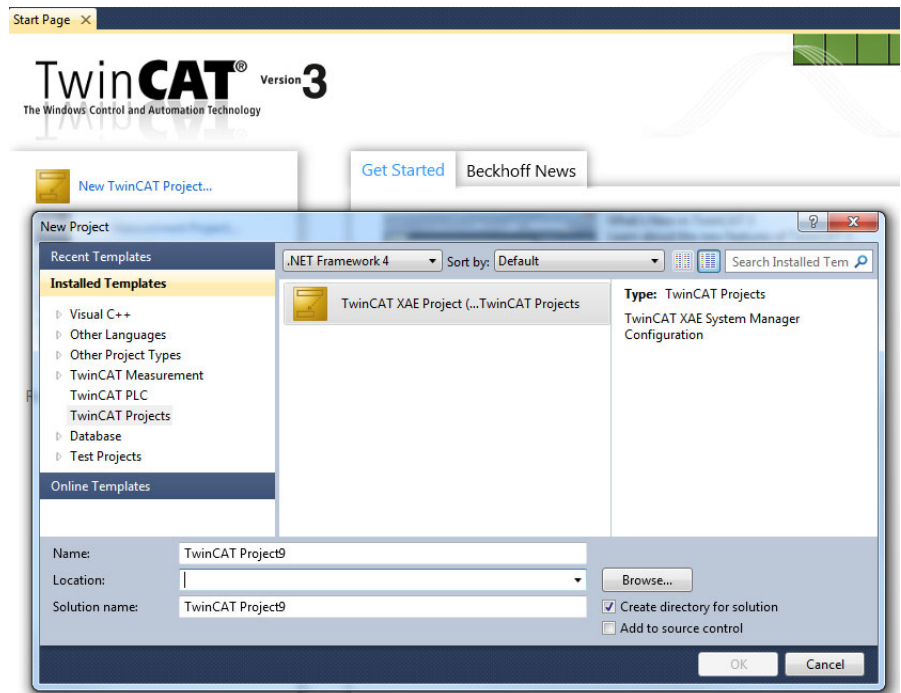

4. Right-click on Devices entry of I/O menu and select “Add New item”, then select EtherCAT Master.

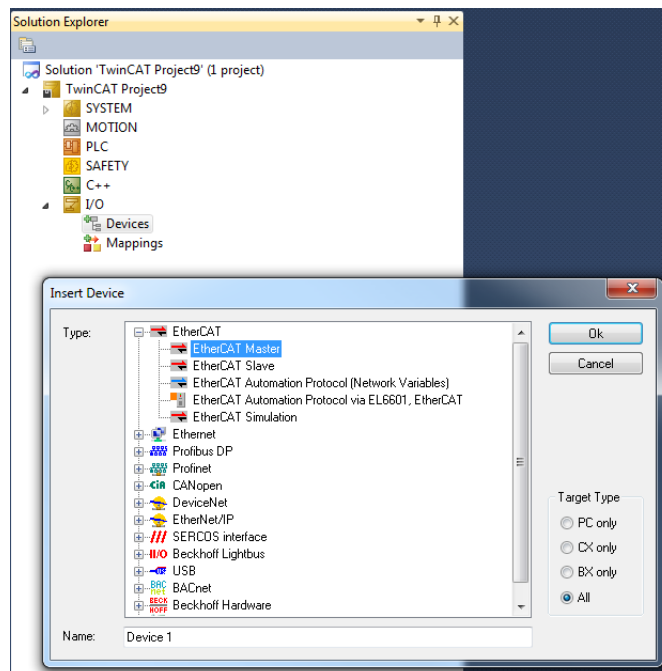


5. Make sure Ethernet Network card of TwinCAT machine is available in the list of compatible devices: TwinCAT -> Show Realtime Ethernet Compatible Devices...

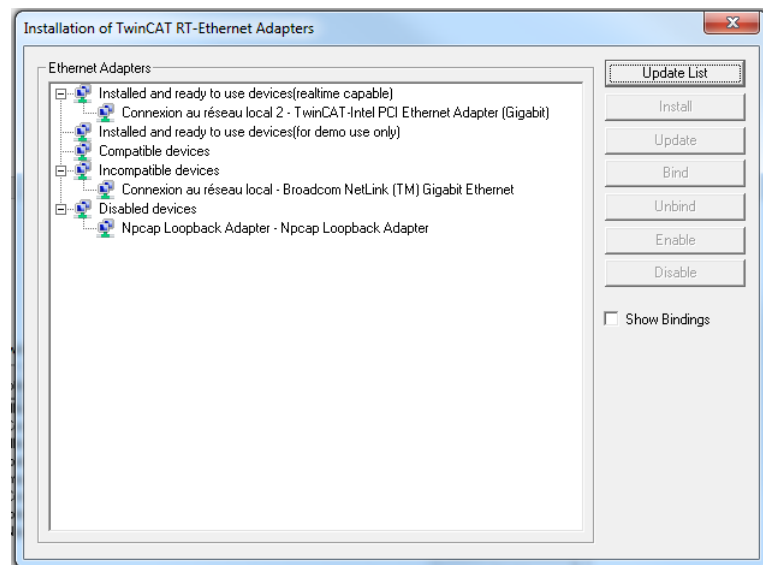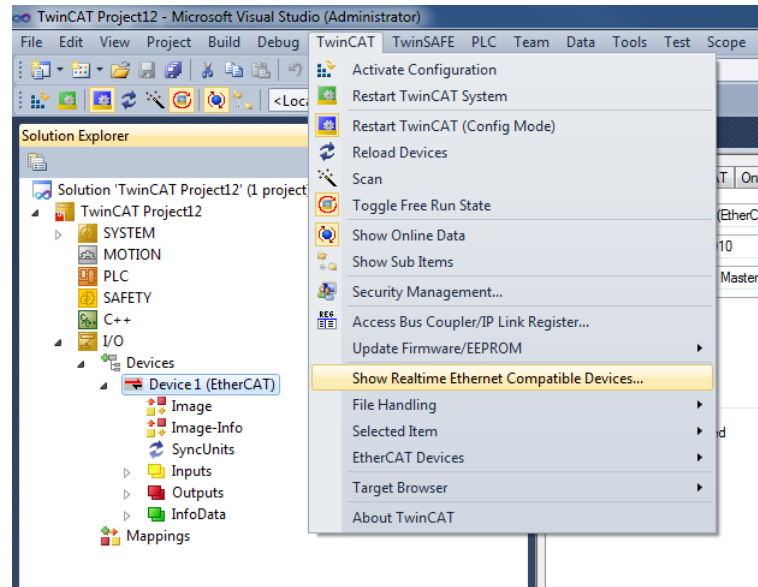


6. If Ethernet Network card is not in the list of installed and ready to use devices (realtime capable), click Install.

7. Back in the TwinCAT project, right-click on master device and select Scan:

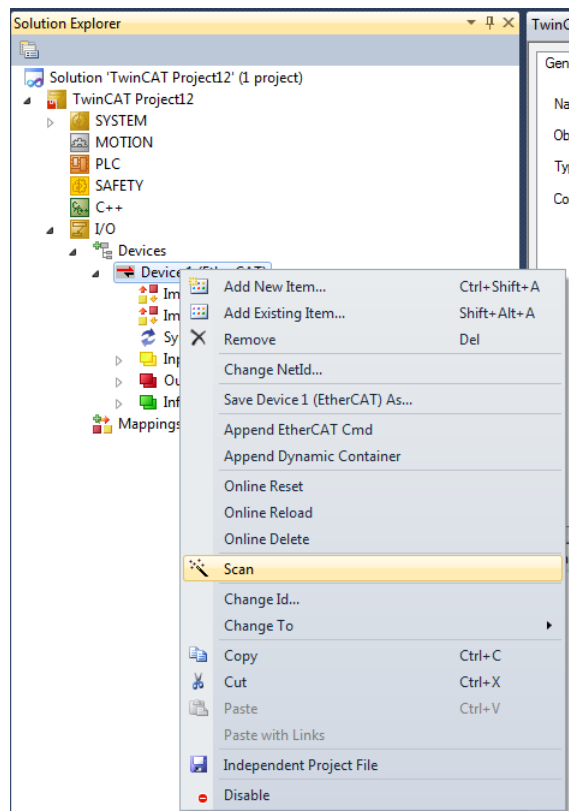

8. Connected instrument is added automatically and can be driven from TwinCAT acting as an EtherCAT master:

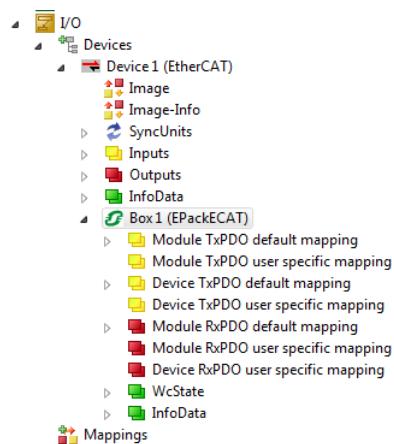

Configuration from the Front Panel

At power up or after quitting the Quickcode menu, the unit initializes and then enters the summary page (Figure 27) showing the real-time values of the two parameters configured, see "Instrument Display configuration" on page 151 for details.

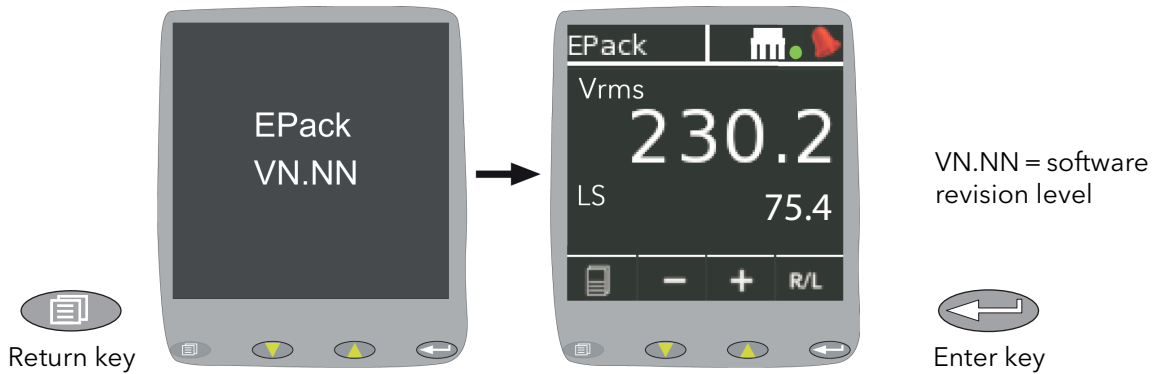


Figure 27 Initialization screens


Notes:

1. If any issues are detected during the initialization (e.g. supply voltage missing), then a message appears on the display screen.
2. Color of first parameter Real-time value in summary page will be orange if any Control alarm is signaled (see Control Alarm signaling parameters). It means Control loop can't currently reach its setpoint.
3. The Ethernet icon is not displayed if the EtherCAT option is fitted.

Menu Pages

Operating the return key opens the first page of the menu, the content of which depends on the current access level and on the number of options enabled.

The descriptions below assume 'Configuration' level access is selected.

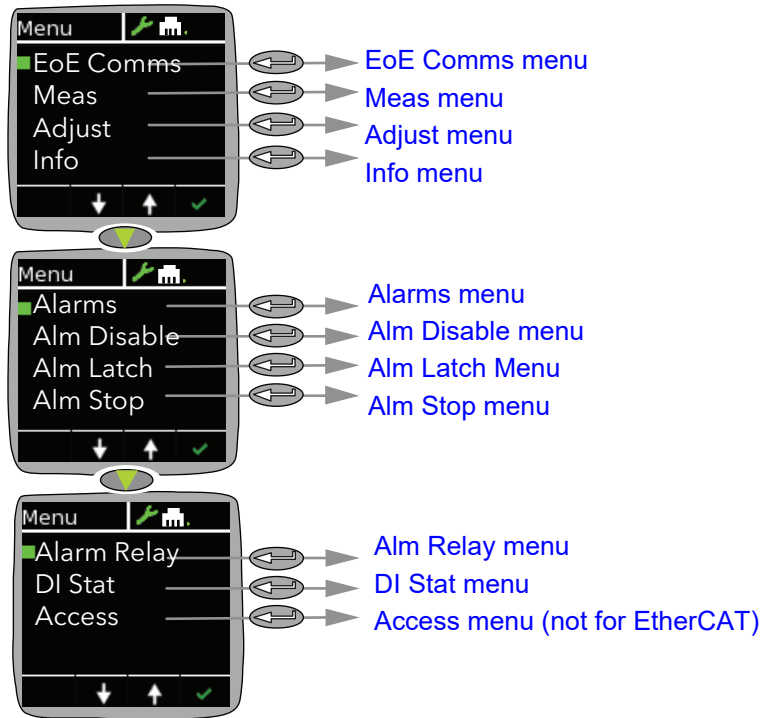

EoE Comms menu

This allows the following communications parameters to be viewed.

Comms

Displays (read only) the current IP and Subnet mask addresses.

Meas menu

This menu allows the user to view a number of measured values in real time. For further details, see 'Network Meas Menu' (see page 168).

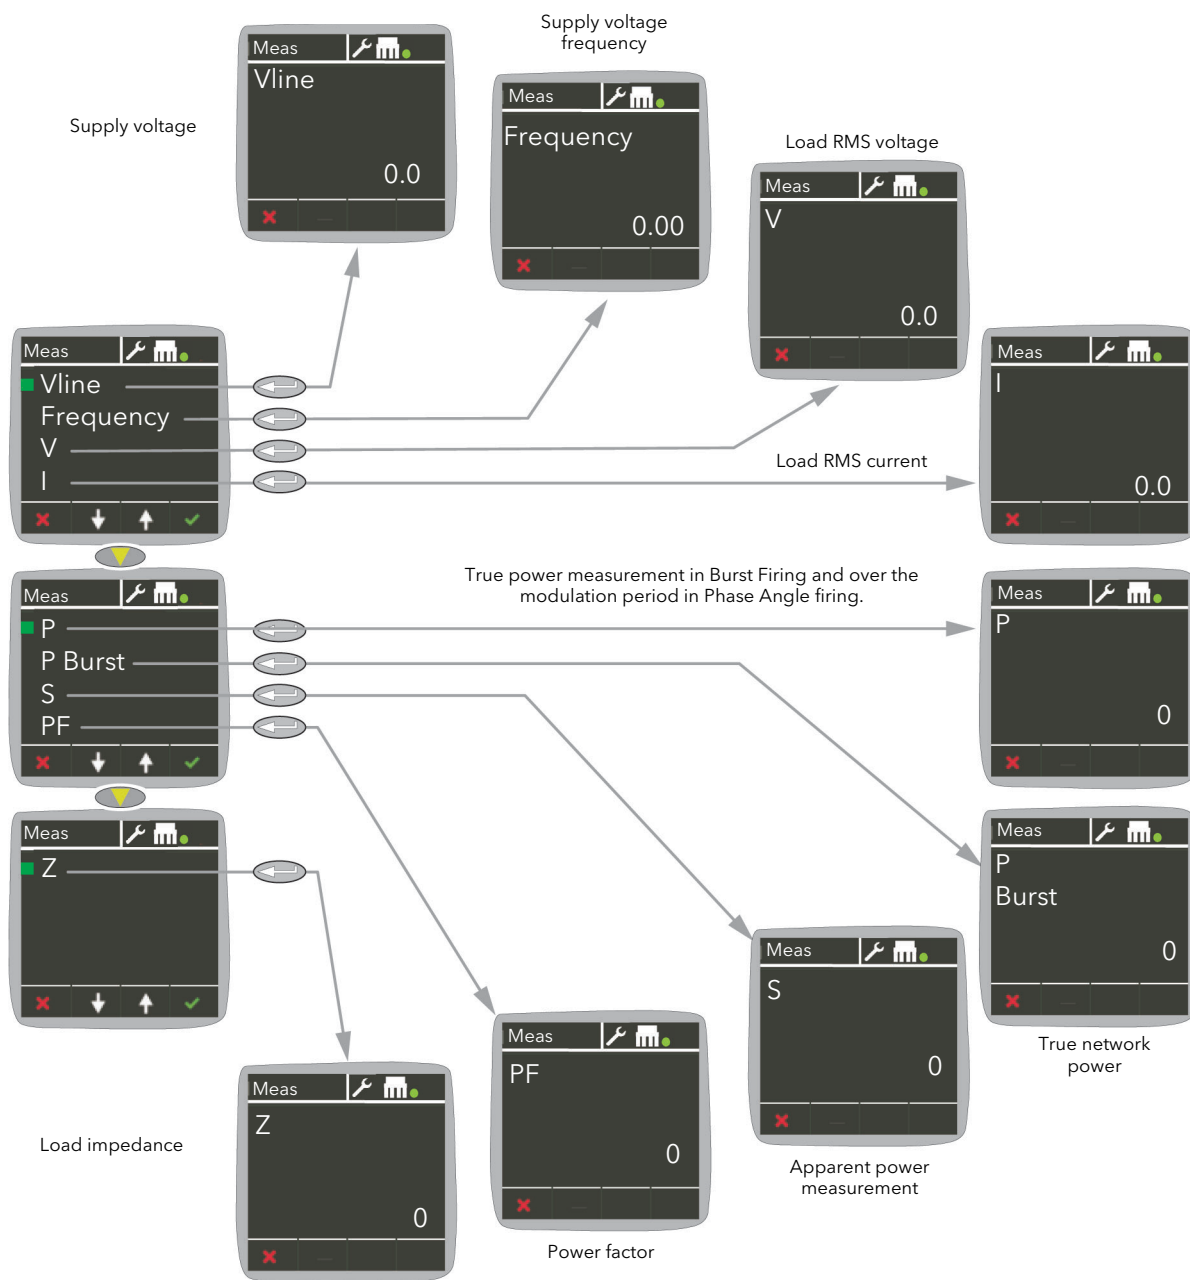


Figure 28 Meas menu

Note: The Ethernet icon is not shown if the EtherCAT option is fitted.

Adjust menu

This menu allows a number of network and firing output parameters to be set up, as well as Analog input type.

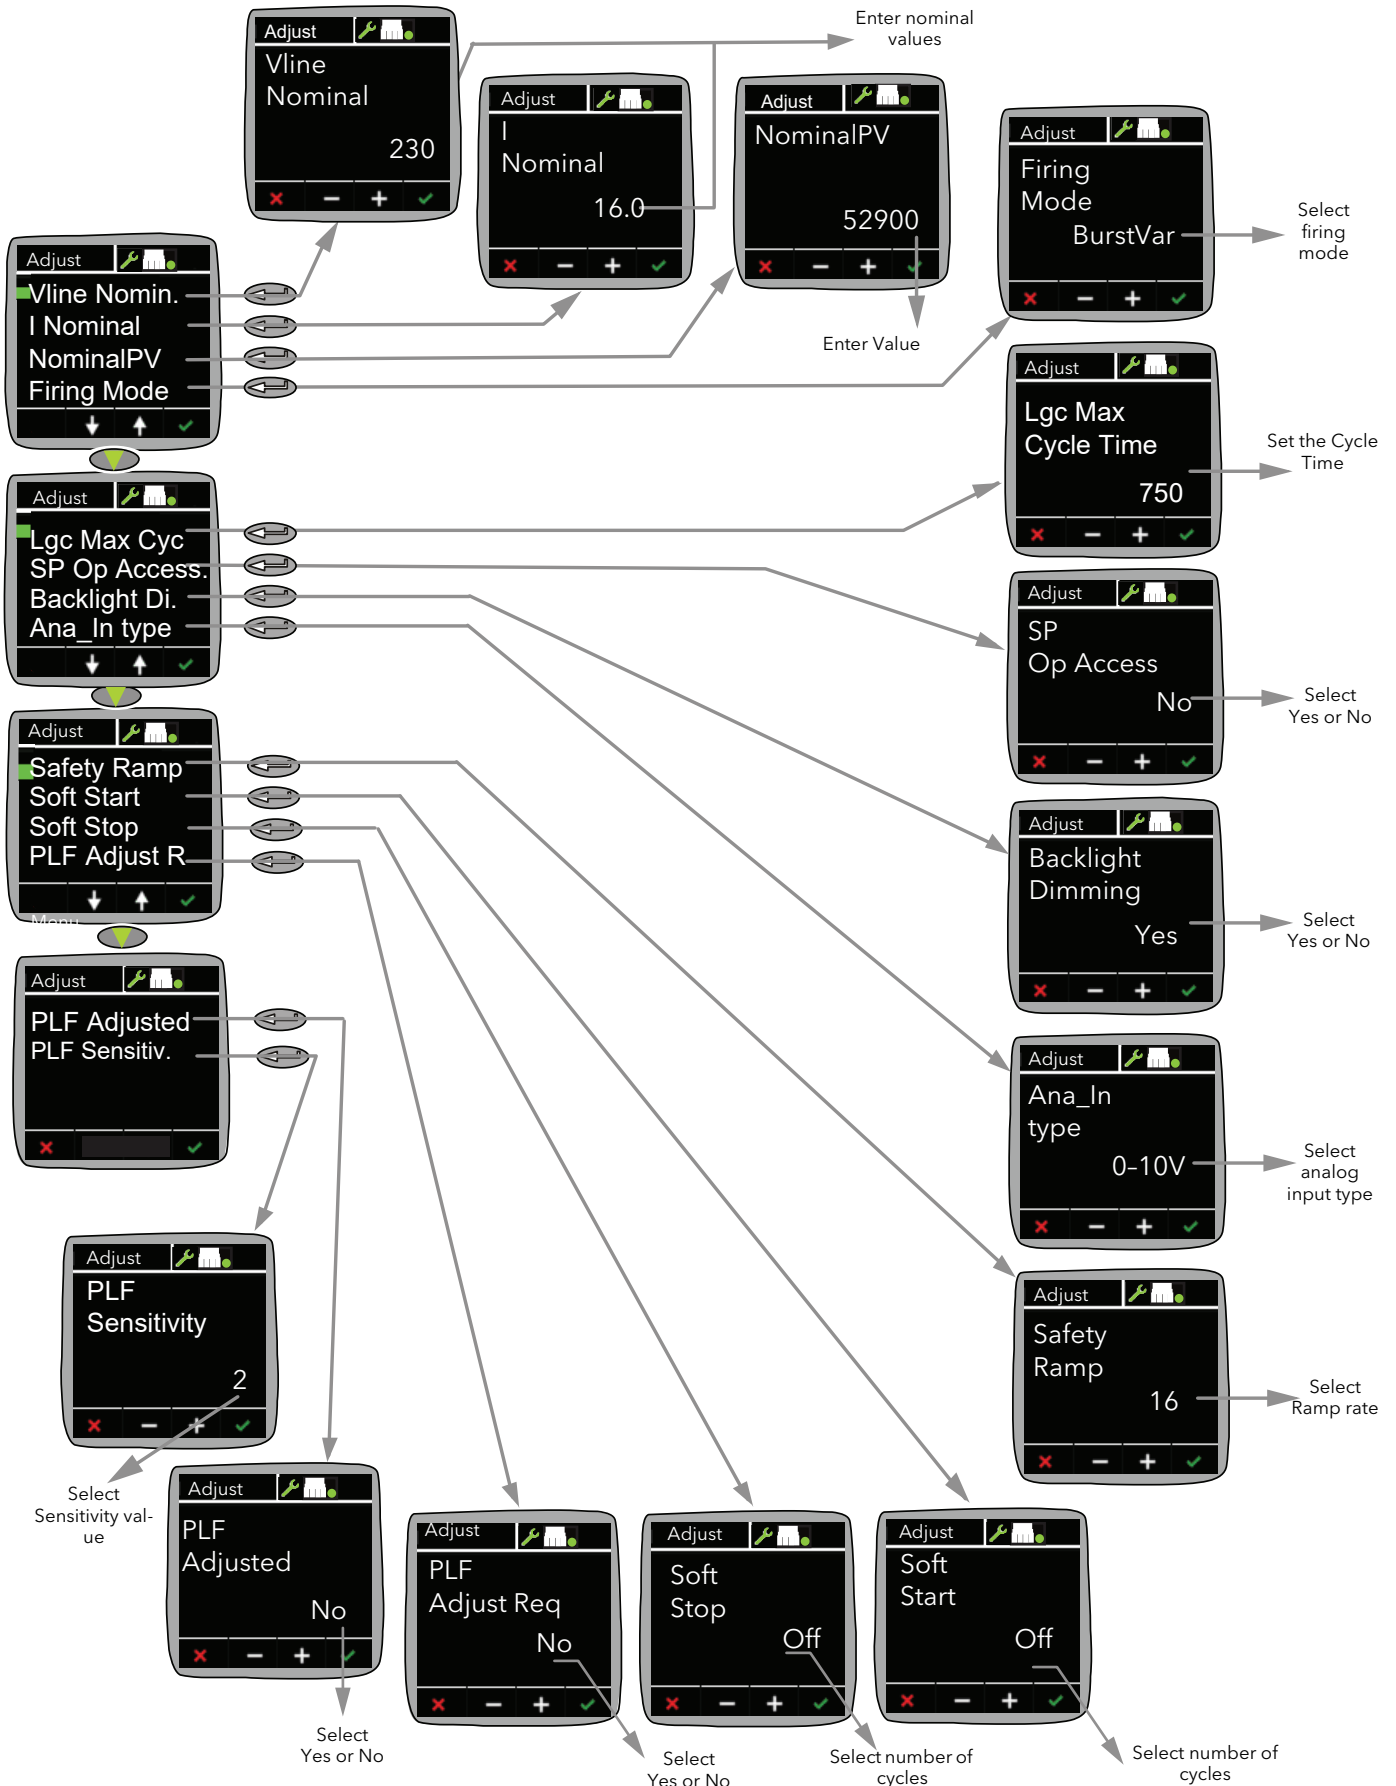


Figure 29 Adjust menu

Note: The Ethernet icon is not displayed if the EtherCAT option is fitted.

Vline Nominal	Line voltage nominal value (Line to neutral) or Line to L2 (phase to phase connection).
I Nominal	Nominal current supplied to the load.
NominalPV	Nominal Process Variable. Defines the nominal value for each control type. For example, for Vsq control, you must wire Vsq from the network block to the MainPV and set NominalPV to the nominal value you expect for Vsq—typically this could be VloadNominal * VloadNominal.
Lgc Max Cyc	Max cycle time for Logic mode. This is set in mains periods. This is the equivalent to the modulation period and it is used to compute Network electrical quantities when there is no modulation shift. It is only available in Logic Mode.
Firing Mode	Firing Mode allows the firing mode to be selected as Burst Var, Burst Fix, or Logic, Phase Angle (PA) or Intelligent half cycle (IHC). See Firing Output Menu (page 143) for more details.
SP Op Access	Setpoint Operator Access: Allows the user setpoint access via the front panel, in operator configuration when enabled. To enable set to Yes. (The default setting is Yes).
Backlight Di.	Backlight Dimming: By default, the backlight on the EPack's display dims automatically to save power. Set this parameter to No if you want the backlight to always remain on. If set to Yes, the backlight dims 30 seconds after you last operate the buttons on the front panel.
Ana_in type	Select the Analog Input type as 0 to 10V, 1 to 5 V, 2 to 10V, 0 to 5V, 0 to 20mA, 4 to 20mA.
'Safety Ramp'	Displays the startup ramp duration, in supply voltage cycles (0 to 255), to be applied at startup. The ramp is either a phase angle ramp from zero to the requested target phase angle or, for Burst Firing, from 0 to 100%. 'Safety Ramp' is not applicable to Half cycle Mode.
Soft Start	For Burst Firing only, this is the soft start duration, in supply voltage cycles, applying a phase angle ramp at the beginning of each ON period. See Firing Output Menu (page 143) for more details.
Soft Stop	In Burst Firing, the soft stop duration, in supply voltage cycles, applying a phase angle ramp at the end of each ON period. See Firing Output Menu (page 143) for more details.
Delay Triggering	Appears only if Mode is Burst, Soft Start is Off, and Load Type is TxFormer. Delayed Trigger specifies the triggering delay, in phase angle, when delivering power into a transformer load. Used to minimize inrush current, the value is configurable between 0 and 90 degrees, inclusive.
PLF Adjust R	Partial Load Failure Adjustment Request: When the process has achieved a steady state condition the operator must set the PLFAdjustReq. This makes a load impedance measurement to be used as a reference for detecting a partial load failure. If the load impedance measurement is successful 'PLFAdjusted' is set. The measurement cannot be made if the load voltage (V) is below 30% of VNominal or if the current (I) is below 30% of INominal. The input is edge sensitive, so if the request is made from external wiring, and the input remains permanently at a high level, only the first 0 to 1 edge is taken into account.

PLF Adjusted	Partial Load Failure Adjusted: A successful load impedance measurement has been made (see PLF Adjust R above).
PLF Sensitivity	Partial load failure sensitivity. This defines how sensitive the partial load failure detection is to be as the ratio between the load impedance for a PLFadjusted load and the current impedance measurement. For example for a load of N parallel, identical elements, if the PLF Sensitivity (s) is set to 2, then a PLF alarm will occur if N/2, or more elements are broken (i.e. open circuit). If PLF Sensitivity is set to 3, then a PLF alarm occurs if N/3 or more elements are broken. If (N/s) is non-integer, then the sensitivity is rounded up. E.G. if the N = 6 and s= 4, then the alarm is triggered if 2 or more elements are broken.

Info menu

This display gives read only information about the unit.

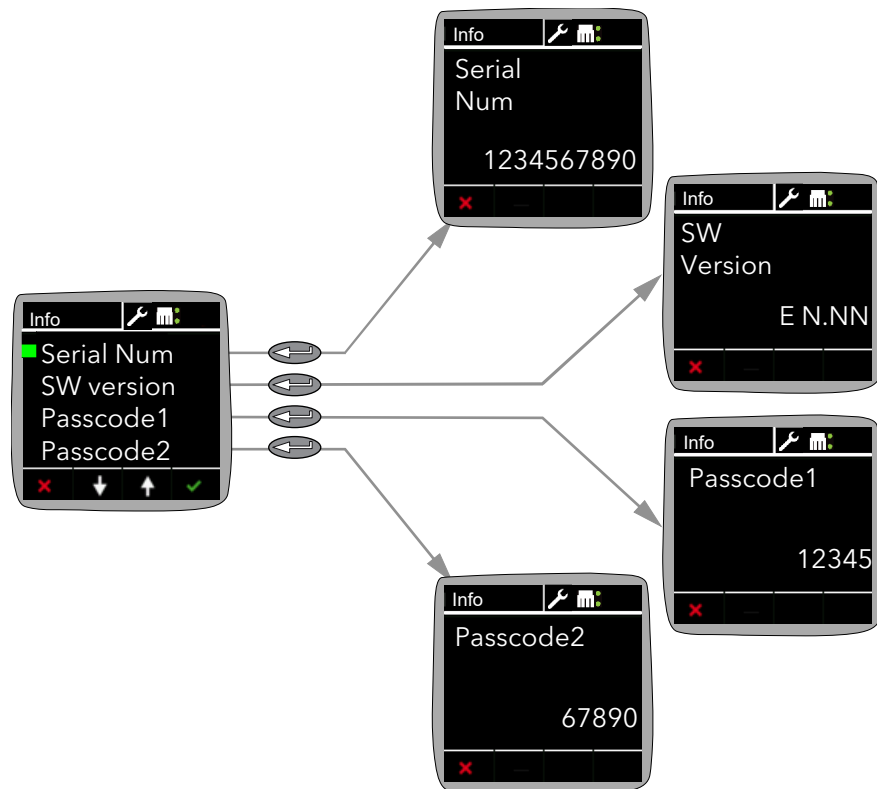


Figure 30 Info menu

Note: The Ethernet icon is not displayed if the EtherCAT option is fitted.

Alarms menu

Allows the user to view Global acknowledgement enable status, and issues with calibration (if any). Any active alarms appear, and details can be found by highlighting the relevant alarm and using the Enter pushbutton.

Active alarms can be acknowledged, if applicable, by a further operation of the Enter button.

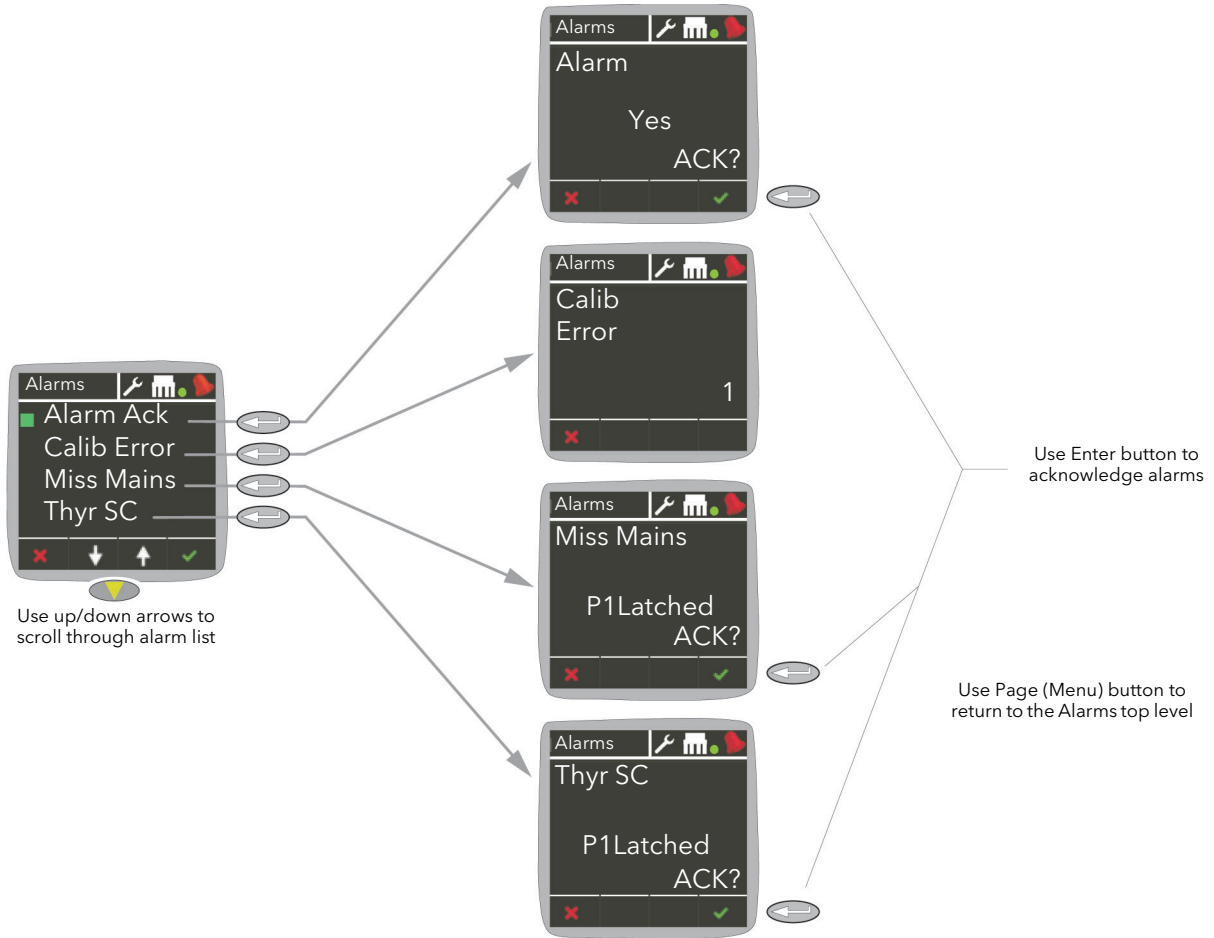


Figure 31 Alarms menu

Note: The Ethernet icon is not displayed if the EtherCAT option is fitted.

Alm Disable menu

This menu allows the user to disable particular alarm types, so that they are no longer detected or acted upon. You can also do this using iTools.

By default all of the alarms are enabled.

To disable or re-enable an alarm, simply scroll through the list and select the alarm you want, then use the arrow keys to toggle its status between Disable and Enable as required.

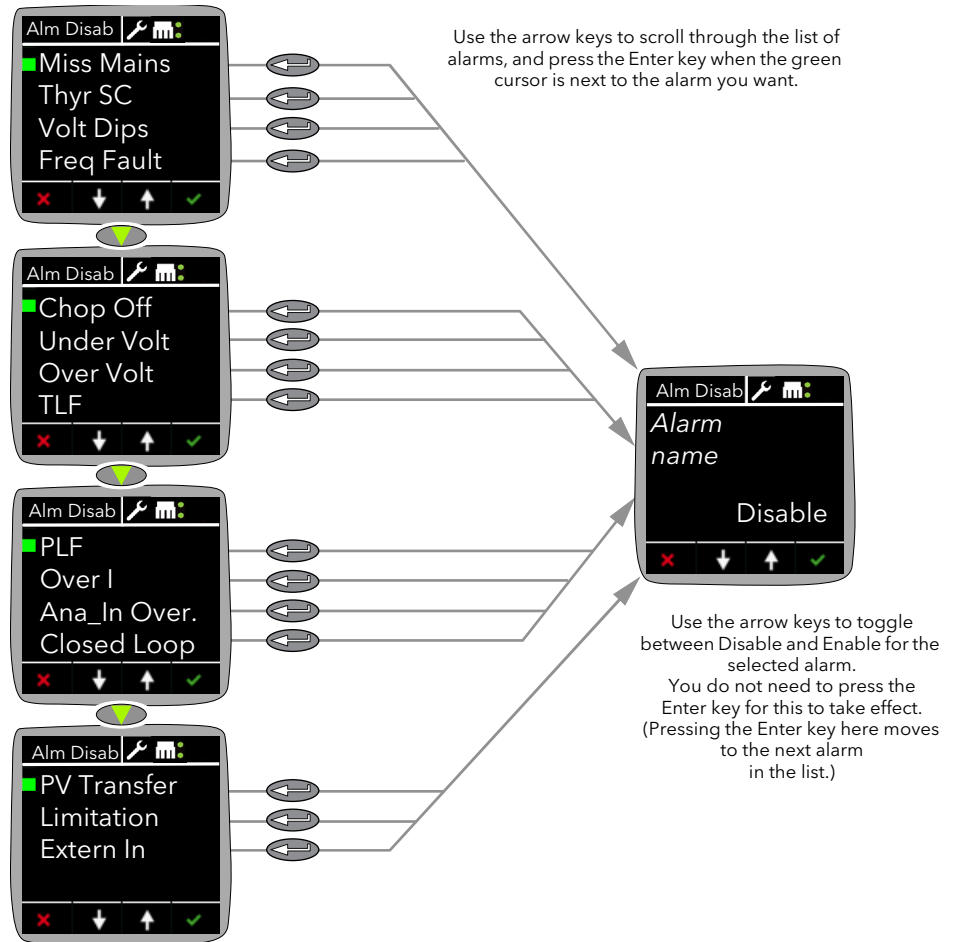


Figure 32 Alarm Disable menu

Note: The Ethernet icon is not displayed if the EtherCAT option is fitted.

Alm Latch Menu

This menu allows the user to set latching or no latching to particular alarm types. To select the latching type, simply scroll through the list and select the alarm you want, then use the arrow keys to toggle its status between Latch and NoLatch as required.

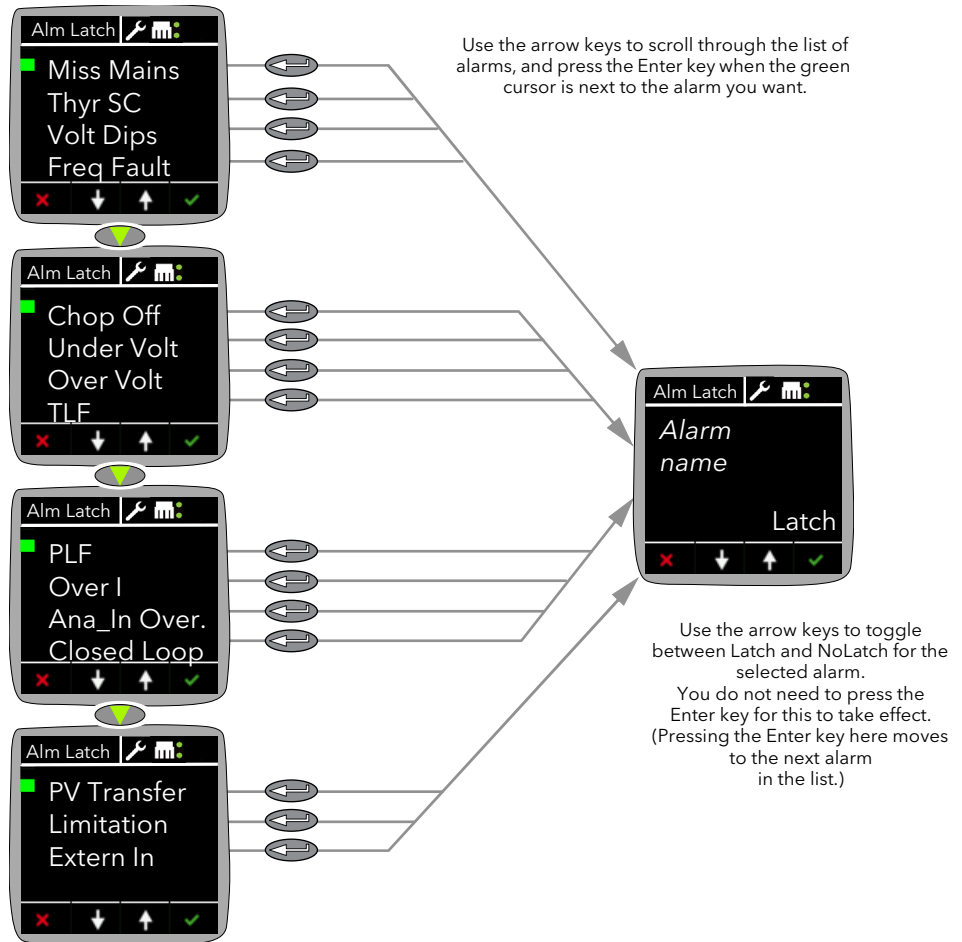


Figure 33 Alarm Latch Menu

Note: The Ethernet icon is not displayed if the EtherCAT option is fitted.

Alm Stop menu

This menu allows the user to set which alarms will cause the EPack to stop firing. You can also do this using iTools.

By default, none of the alarms are set to stop firing.

To change whether an alarm causes the EPack to stop firing, simply scroll through the list and select the alarm you want, then use the arrow keys to toggle its status between Stop and NoStop as required.

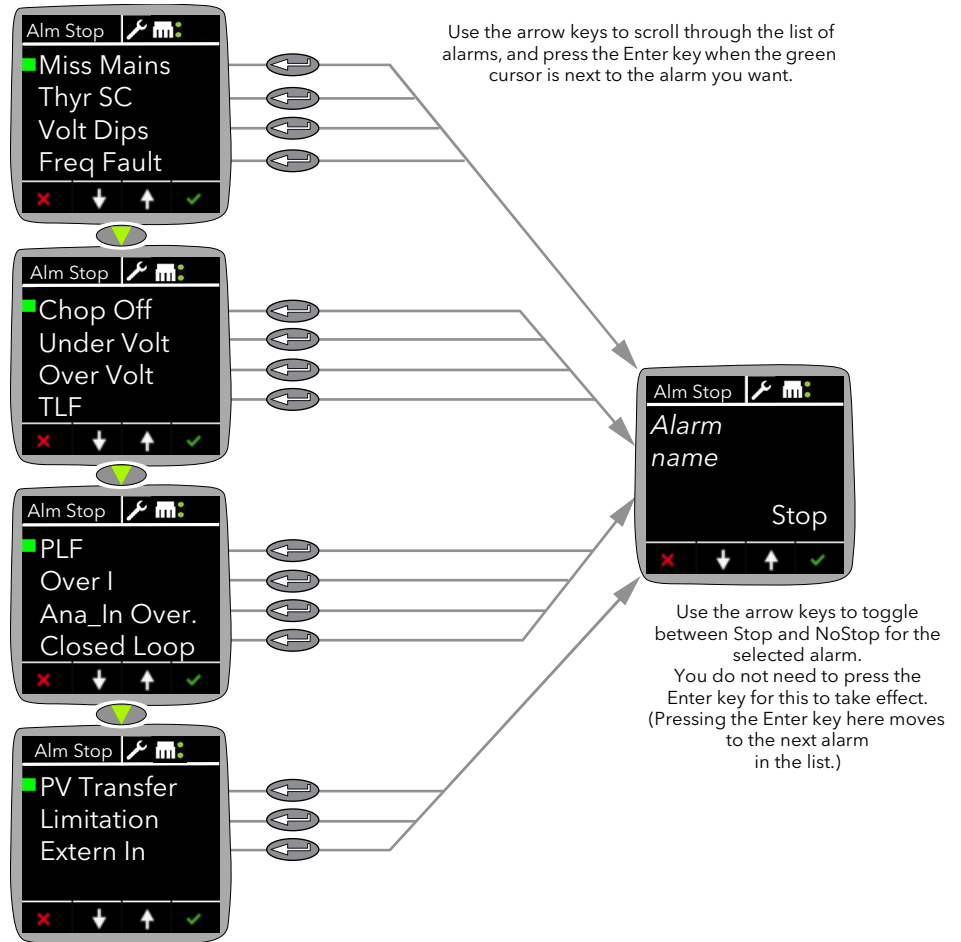


Figure 34 Alarm Stop menu

Note: The Ethernet icon is not displayed if the EtherCAT option is fitted.

Alm Relay menu

This menu allows the user to select which alarms are to operate (de-energize) the EPack's 'watchdog' relay. For each selected alarm, select 'Yes' or 'No'.

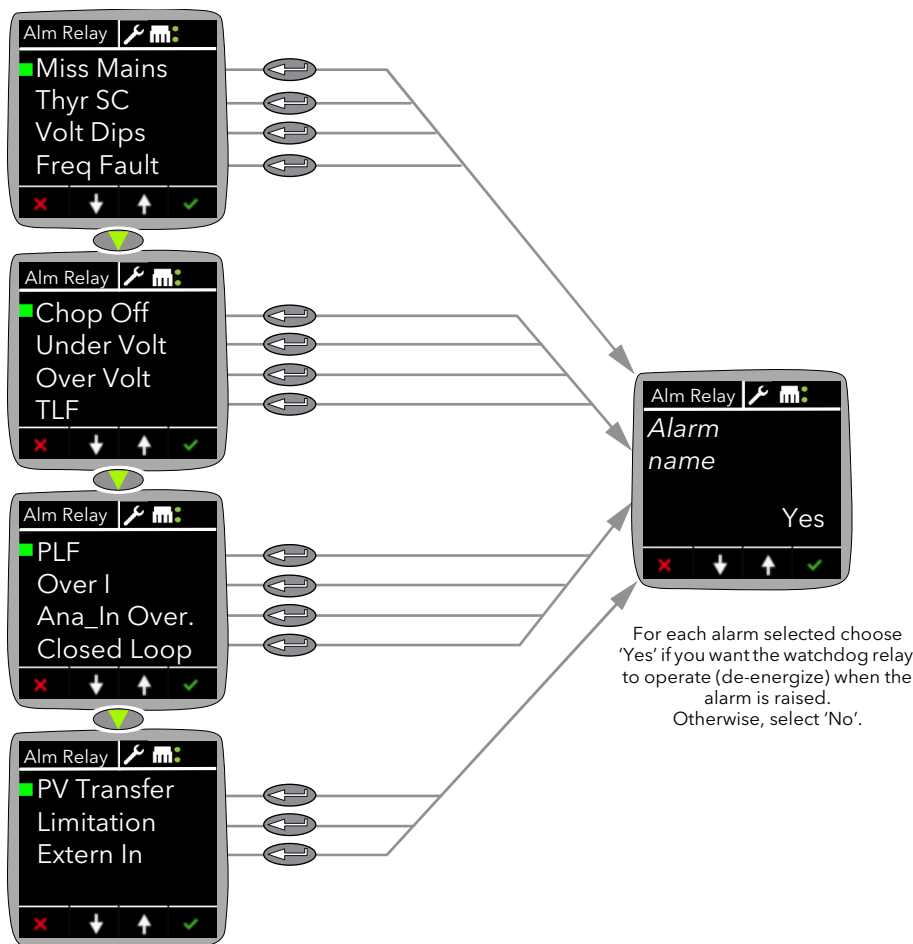


Figure 35 Alarm Relay menu

Note: The Ethernet icon is not displayed if the EtherCAT option is fitted.

DI Stat menu

The DI Stat menu displays the status of the EPack's two digital inputs, DI1 and DI2. '0' means a low level logic signal is being received at the input, '1' means a high level logic signal is being received at the input.

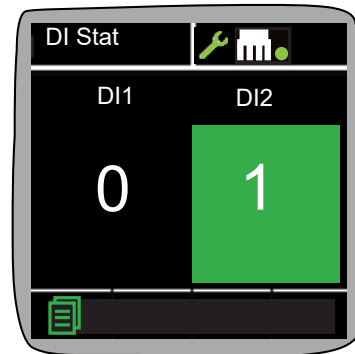


Figure 36 DI Stat menu

ECAT ID menu

ID-Selector DEV ID: is the value set from front panel rotary switches and used with "Requesting Mechanism"

Conf. Station Alias: is either the value loaded during power-on from SII Configured Station Alias (EEPROM) if rotary switches value is 0, or a copy of the rotary switches value if different from 0 (copy performed in INIT state only).

PLF Adjust menu

See "Adjust menu" on page 114.

Access to 'OEM security'

To access OEM security:

1. Open the Access menu item.
2. Select and open the OEM Entry menu item.
3. Enter the OEM security access code (default: 200).
4. The OEM Enable menu automatically appears, exit the menu by pressing the **x** button.

Note: To enable, start OEM security, select 'Yes'; to disable the feature, select 'No'.

5. The Access menu option returns, displaying two additional menu options: OEM Enable and OEM Pass.

Configuration using iTools

Introduction

Note: This chapter contains descriptions of all the menus which can appear. If an option or a feature is not fitted and/or enabled, then it does not appear in the top level menu.

This chapter details how to connect using iTools and gives details of the features available from this instrument.

Overview

The configuration of the unit is divided into a number of separate areas as follows:

- "Access Menu" on page 126
- "Alarm Configuration" on page 127
- "Control Configuration" on page 129
- "Counter Configuration" on page 137
- "Energy Configuration" on page 139
- "Fault Detection Menu" on page 141
- "Firing Output Menu" on page 143
- "Input/Output (IO) Configuration" on page 145
- "Instrument Configuration Menu" on page 151
- "IP Monitor Configuration" on page 155
- "Lgc2 (Two Input Logic Operator) Menu" on page 156
- "Lgc8 (Eight-input Logic Operator) Configuration" on page 158
- "LIN16 Input Linearization" on page 161
- "Math2 Menu" on page 164
- "Modulator Configuration" on page 166
- "Network Configuration" on page 167
- "Qcode" on page 174
- "Setprov Configuration Menu" on page 175
- "Timer Configuration" on page 177
- "Totalizer Configuration" on page 179
- "User Value Configuration Menu" on page 180

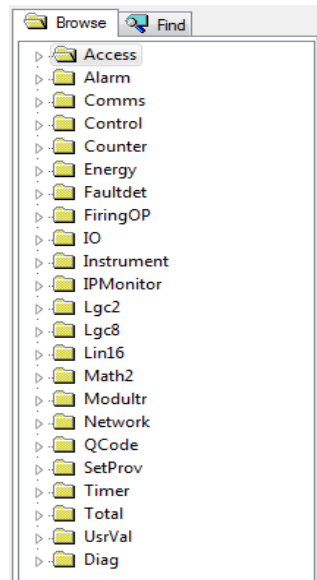


Figure 37 iTools tree

Note: Current rating, limitation, transfer control, power control, energy counter and the graphical wiring editor (GWE) are chargeable options. iTools secure can be used to upgrade units.

Access Menu

The Access menu allows the configuration of the optional 'OEM Security' feature.

'OEM security' helps to provides users, typically OEMs (original equipment manufacturers) the ability to protect their intellectual property by helping to prevent unauthorized access to configuration data.

An 'OEM security' access code can be configured to help prevent iTools from fully communicating with the instrument which helps to prevent specific parameters and their associated values from being copied or overwritten during iTools clone export/import.

In addition, when the OEM security feature is enabled, iTools has restricted access to Modbus addresses between 0x100 and 0x4744, graphical wiring.

Note: The OEM security feature is a chargeable option, either when ordering or via the purchase of a secure feature pass code.

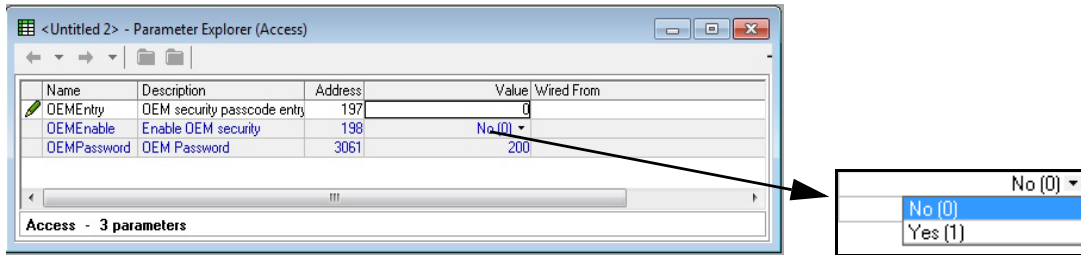


Figure 38 iTools Access menu

OEMEntry

Passcode for OEM security access. Provided the user enters the correct passcode, the OEM security feature will load and display the remaining OEM security parameters (and menus on the instruments front panel). (The OEMEntry passcode entered is compared to the OEMPassword parameter value, when identical access is provided and the OEM security feature loads).

Note: If an incorrect access code is entered the OEMEntry menu will become non-editable for a time period. The time will increase for each incorrect pass code entered.

OEMEnable

OEM security parameter used to switch OEM security feature On (enable) or Off (disable). This parameter is stored in non-volatile memory. The default value is Off (disable), after an initial Quickcode start.

OEMPassword

OEM security password parameter allows the user to edit the access code (to any value between 0001 and 9999). This parameter is stored in non-volatile memory. If the OEMPassword parameter value is updated i.e. a new passcode entered the OEMEnable and OEMPassword parameters (and menus) disappear. Default OEM password is 200.

Alarm Configuration

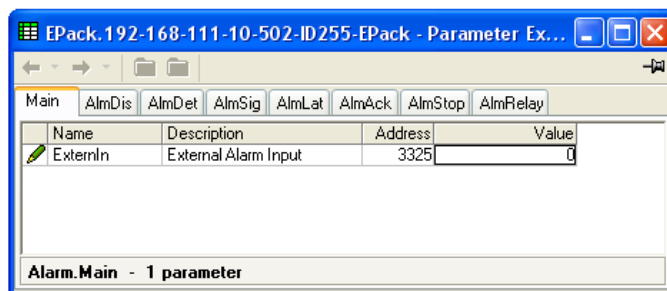


Figure 39 Alarm configuration

Main

'ExternIn' is the input of this block. When connected to digital input 2 (DI2) and DI2 connected to a fuse blown detection contact, this alarm is considered as a 'fuse blown' alarm.

AlarmDis

This allows the listed alarm to be enabled or disabled. 0 = Enable; 1 = Disable.

AlmDet


This parameter indicates whether the alarms has been detected and is currently active. 0 = Inactive; 1 = Active.

AlmSig	Signals that the alarm has occurred and is possibly latched by the Alarm Latch settings. If the user wishes to assign an alarm to, for example, a relay then it is the appropriate AlmSig parameter that should be wired. 0 = Not Latched; 1 = Latched.
AlmLat	The alarm can be configured as latching or non-latching, the latched state being shown in the Alarm Signal (AlmSig) register. 0 = Non-Latching; 1 = Latching.
AlmAck	Allows the alarm to be acknowledged. When an alarm is acknowledged, its related signaling (AlmSig) parameter is cleared. If the alarm is still active (as shown by the detection (AlmDet) parameter) then the alarm cannot be acknowledged. The acknowledge parameters automatically clear after being written. 0 = Do not acknowledge; 1 = Acknowledge.
AlmStop	Allows the alarm to be configured such that it stops the related power channel firing. AlmStop is activated by the signaling parameters and thus may be latching. 0 = Do not stop; 1 = Stop.
AlmRelay	This allows the listed alarm to operate and de-energize the alarm relay when set to active. No (0) = Inactive; Yes (1) = Active. (When utilizing AlmRelay function ensure FaultDet/CustomAlarm parameter remains wired to IO.Relay/PV).

Control Configuration

The control menu provides the control algorithm to perform power control and transfer, threshold limiting and phase angle reduction (in the case of burst firing). [Figure 40](#), below, gives an overview of the menu, which is described in the following sections:

- Setup
- Main
- Limit
- Diag (Diagnostics)
- AlmDis (Alarm disable)
- AlmDet (Alarm detection)
- AlmSig (Alarm Signaling)
- AlmLat (Alarm latching)
- AlmAck (Alarm Acknowledgement)
- AlmStop (Stop firing on alarm)
- AlmRelay, Control Alarm Relay

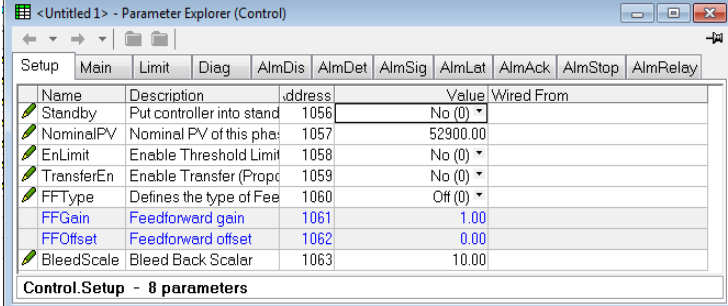

The screenshot shows a window titled "<Untitled 1> - Parameter Explorer (Control)". It has a tabbed interface with tabs for Setup, Main, Limit, Diag, AlmDis, AlmDet, AlmSig, AlmLat, AlmAck, AlmStop, and AlmRelay. The "Setup" tab is active, displaying a table of parameters. The table has columns for Name, Description, Address, Value, and Wired From. The parameters listed are:

Name	Description	Address	Value	Wired From
Standby	Put controller into stand	1056	No (0)	
NominalPV	Nominal PV of this pha	1057	52900.00	
EnLimit	Enable Threshold Limit	1058	No (0)	
TransferEn	Enable Transfer (Propc	1059	No (0)	
FFType	Defines the type of Fee	1060	Off (0)	
FFGain	Feedforward gain	1061	1.00	
FFOffset	Feedforward offset	1062	0.00	
BleedScale	Bleed Back Scalar	1063	10.00	

At the bottom of the window, it says "Control.Setup - 8 parameters".

Figure 40 Control menu overview

Control setup menu

This contains parameters for setting the type of control to be performed.

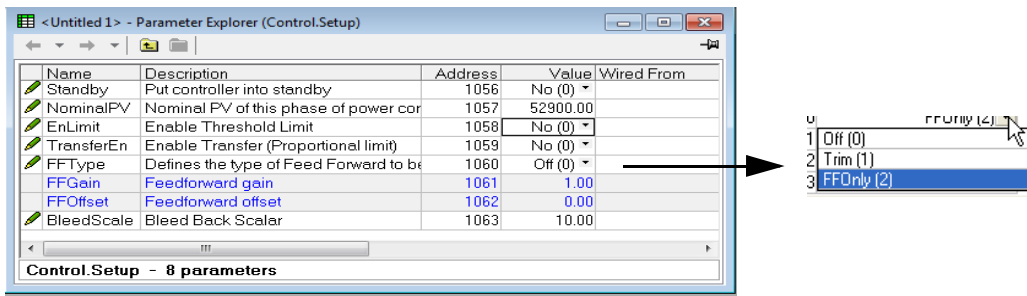


Figure 41 Control setup page

Parameters

- Standby If Yes (1), the controller enters Standby mode and zero % power is demanded. When removed from Standby (0) the unit returns to operating mode in a controlled manner.
- Nominal PV Normally the nominal value for each control type. For example, for feedback mode = V^2 , Vs_q should be wired to the Main PV, and Nominal PV set to the nominal value expected for V^2 (usually $V_{LoadNominal}^2$).
- En Limit This is a chargeable feature. If it is available it is used to enable/disable threshold limit. (By default the current limit function is enabled).
- Transfer En Select Transfer Enable (Proportional limit) as 'Yes' (enabled) or 'No' (not enabled).
- FF Type Feedforward Type.
 Off (0). Feedforward is disabled
 Trim (1). Feedforward value is the dominant element of the output. Trimmed by the control loop based on the Main PV and setpoint.
 FFOnly (2). The feedforward value is the output from the controller. Open loop control may be configured by this means.
- FF Gain The entered gain value is applied to the Feedforward input.
- FF Offset The entered value is applied to the Feedforward input after the Gain value has been applied to it.
- Bleed Scale Internal parameter for use by service personnel

Control Main menu

This menu contains all the parameters associated with the Main control loop.

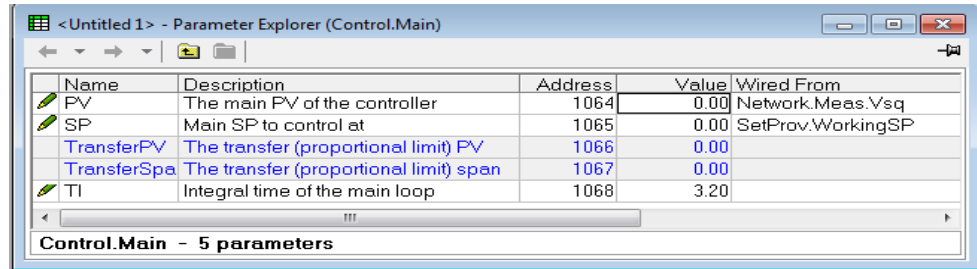


Figure 42 Control 'Main' menu

Parameters

- PV** Displays the main Controller Process Variable (PV). Wired to the measurement which it is to be controlled. For example, to perform V² control. Vs_q should be wired to this (PV) parameter and Nominal PV configured appropriately.
- SP** The Setpoint to control at, as a percentage of Nominal PV (the upper range of the loop in engineering units). For example, if Vs_q = 193600, and SP is set to 20%, the controller attempts to regulate at 193600 x 20/100 = 38720.
- Trans PV** Transfer PV. This is the PV measurement for transfer. For example, if a V₂ to I₂ transfer is required, the Vs_q should be wired to MainPV and Is_q to TransferPV. Appears only if Trans Enable ([Control setup menu](#)) is set to 'Yes'.
- Trans SP** The span of operation for transfer. Appears only if Trans Enable ([Control setup menu](#)) is set to 'Yes'.
- TI** Allows the user to define an integral time for the main PI control loop.

Control limit configuration

This area configures parameters relating to the limit control loop.

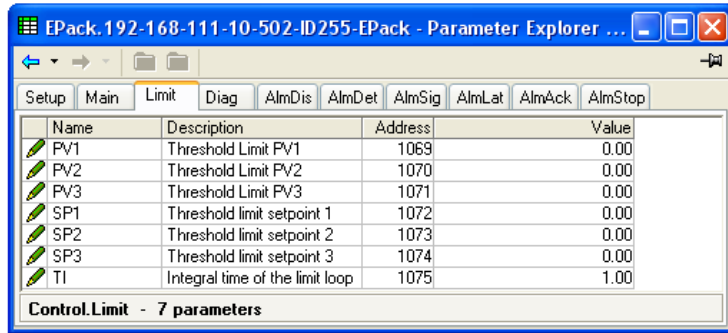


Figure 43 Control limit menu

Parameters

- PV1 to PV3 Process value for limit loops 1 to 3 respectively. This is the value to perform threshold limit control. 'Limit Enable' must be set to 'Yes' in the Setup menu ([Control setup menu](#)).
- SP1 to SP3 The Threshold Setpoint for limit loops 1 to 3 respectively.
- TI The integration time for the limit PI control loop. The default value is firing mode dependent.

Example:

If I² threshold limiting is required, Isq is wired to PV1, and the required threshold value is entered at SP1. In phase angle configuration, the phase angle is reduced to achieve the limit setpoint; in burst firing, the unit continues to fire in bursts, but these bursts are of phase angle in order to achieve the limit setpoint. The modulation continues to attempt to reach the main setpoint.

Also known as phase angle reduction burst firing.

Control diagnostic menu

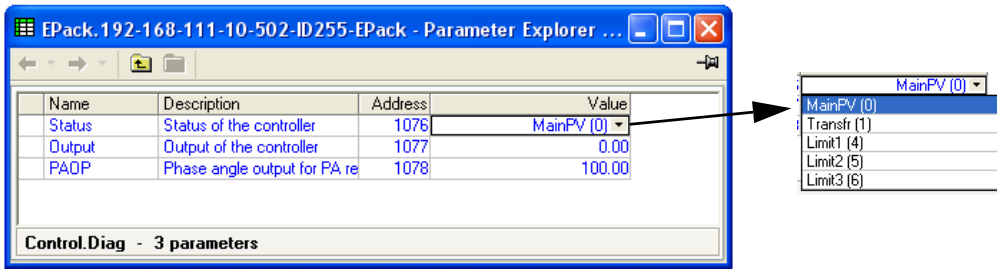


Figure 44 iTools diagnostic menu

Parameters

Status	Indicates the current operating state of the controller:
Main PV	The control strategy is using Main PV as the control input
Transfer	The transfer input is being used as the input to the control strategy.
Limit1(2)(3)	Control limiting is currently active using limit PV1(2)(3) and limit SP 1(2)(3).
Output	The current output demand in percent. Normally wired to Modulator.In or FiringOP.In
PAOP	Applies only to Burst Firing control modes. If this parameter is wired to Firing.limitIn, the power module will deliver bursts of phase angle firing depending both on the Main Setpoint and on the Limit Setpoint.

Control Alarm disable menu

Allows each alarm of the control block to be disabled, individually.

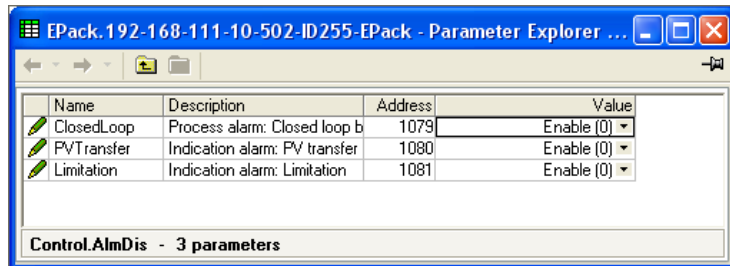


Figure 45 Alarm disable page

Parameters

Closed Loop	Select Enable (0) or Disable (1) for loop break alarm.
PV Transfer	As for Closed Loop, but for the 'Transfer active' alarm.
Limitation	As for Closed Loop, but for the 'Control limit active' alarm.

Control Alarm Detection Parameters

Indicates whether each alarm has been detected and whether or not it is currently active.

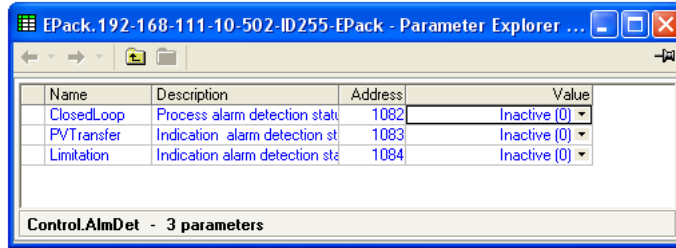


Figure 46 Control Alarm detection page

Parameters

- Closed Loop** Displays whether or not the closed loop alarm is currently active.
- PV Transfer** As for Closed Loop, but for the 'Transfer Active' alarm.
- Limitation** As for Closed Loop, but for the 'Control limit active' alarm.

Control Alarm signaling parameters

Signals that an alarm has occurred and has been latched (if so configured in 'Alarm Latch' (page 135). If it is required that an alarm is to be assigned to a relay (for example), then the appropriate alarm signaling parameter should be used.

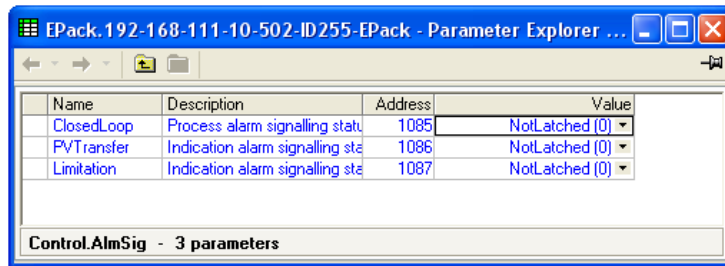


Figure 47 Control Alarm Signaling page

Parameters

- Closed Loop** Indicates whether the closed loop break alarm is currently active.
- PV Transfer** As for Closed Loop, but for the 'Transfer Active' alarm.
- Limitation** As for Closed Loop, but for the 'Control limit active' alarm.

Control Alarm Latch parameters

Allows each alarm to be configured as latching or not latching.

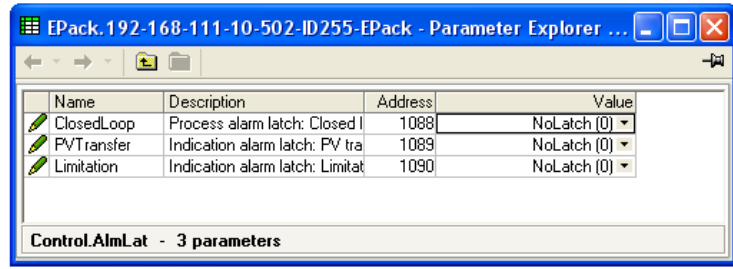


Figure 48 Control Alarm latching page

Parameters

- Closed Loop Set the latching status of the alarm.
- PV Transfer As for Closed Loop, but for the 'Transfer Active' alarm.
- Limitation As for Closed Loop, but for the 'Control limit active' alarm.

Control Alarm Acknowledgement parameters

This menu allows individual alarms to be acknowledged. On acknowledgement, the related signaling parameter is cleared. The Acknowledge parameters automatically clear after being written.

If the alarm is still active (as shown by the Alarm Detection display) it cannot be acknowledged.

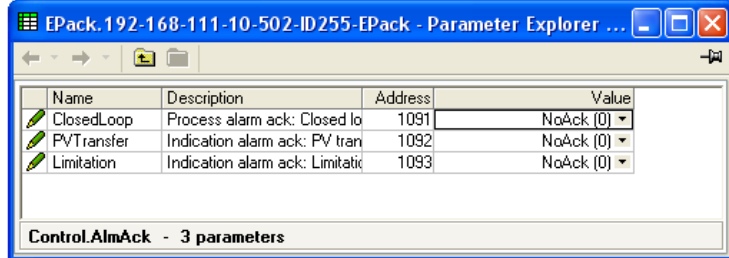


Figure 49 Control Alarm Acknowledge page

Parameters

- Closed Loop Displays whether the closed loop alarm has been acknowledged or not.
- PV Transfer As for Closed Loop, but for the 'Transfer Active' alarm.
- Limitation As for Closed Loop, but for the 'Control limit active' alarm.

Control Alarm Stop parameters

Allows individual channels to be configured such that it will stop the associated power channel from firing whilst the alarm is active. This feature is activated by the signaling parameters, so the alarm stop may be latching.

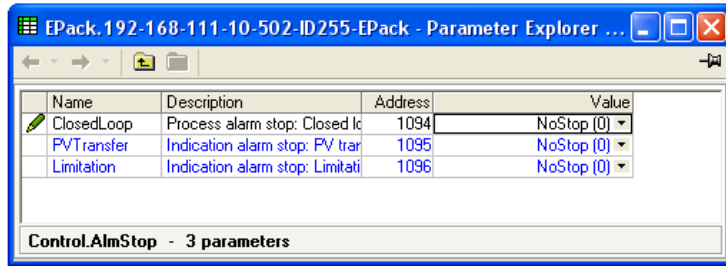


Figure 50 iTools Control Alarm Stop page

Parameters

- Closed Loop Shows whether the closed loop alarm has been configured to disable firing or not.
- PV Transfer As for Closed Loop, but for the 'Transfer Active' alarm.
- Limitation As for Closed Loop, but for the 'Control limit active' alarm.

AlmRelay, Control Alarm Relay

Allows each individual alarm to be configured, so the alarm relay is de-energized (or not), whilst the alarm is active.

Note: When utilizing AlmRelay function ensure FaultDet/CustomAlarm parameter remains wired to IO.Relay/PV.

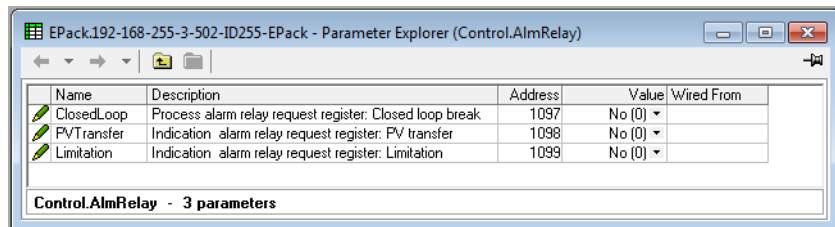


Figure 51 iTools Control Alarm Relay page

Parameters

- Closed Loop Shows whether the closed loop alarm has been configured to de-energize alarm relay firing, or not.
- PV Transfer As for Closed Loop, but for the 'Transfer Active' alarm.
- Limitation As for Closed Loop, but for the 'Control limit active' alarm.

Counter Configuration

The counter output is a 32-bit integer the value of which is recalculated every sample period. When a clock state change from 0 (false) to 1 (true) is detected, the counter value is incremented if the count direction is 'up' or decremented if the direction is 'down'.

At reset, the counter value is set to 0 for count up counters or to the 'Target' value for count down counters.

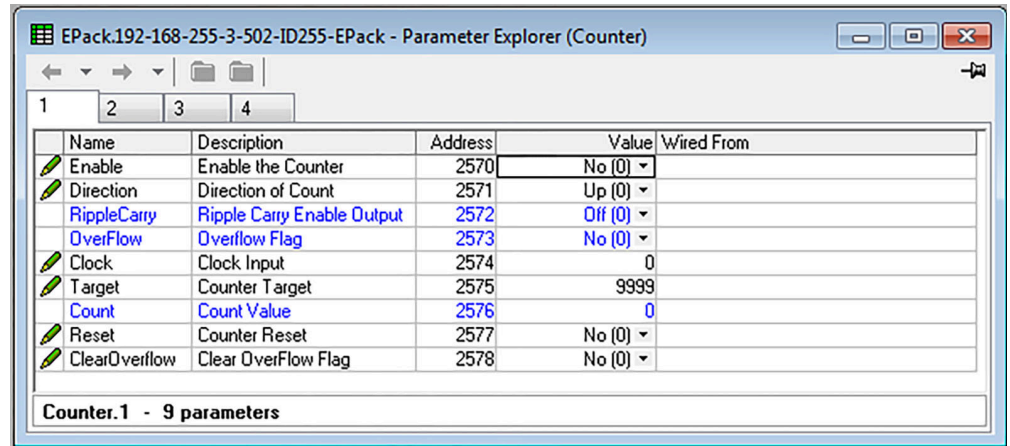




Figure 52 iTools Counter page

Parameters

- Enable** The counter responds to clock transitions when enabled; the count is frozen when disabled.
- Direction** Select up or down as the direction of count. Up counters start at (and are reset to) zero; down counters start from (and are reset to) the Target value (below).
- Ripple Carry** The Ripple carry output of one counter can act as the enabling input for the next counter in a cascade. Ripple carry is set 'true' when the counter is enabled and its value is either zero (for count down timers) or equal to the Target value (count up counters).
- Overflow** Overflow becomes 'true' when the value of the counter is either zero (for count down timers) or equal to the Target value (count up counters).
- Clock** The counter increments or decrements on a positive going edge (0 to 1; False to true).
- Target** Up counters: Start at zero and count towards the Target value. When this value is reached, Overflow and Ripple-carry are set true (value = 1).
Down counters: Start at the Target value and count towards zero. When zero is reached, Overflow and Ripple-carry are set true (value = 1).
- Count** The current value of the counter. This is a 32-bit integer which accumulates clock transitions. Minimum value is zero.
- Reset** Resets up-counters to zero or down-counters to the Target value. Reset also sets Overflow to False (i.e. Overflow = 0)
- Clear Overflow** Sets Overflow to False (i.e. Overflow = 0)

Cascading Counters

As implied above, it is possible to 'wire' counters in cascade mode. Details for an 'up' counter are shown in Figure 53. Down counter configuration is similar.

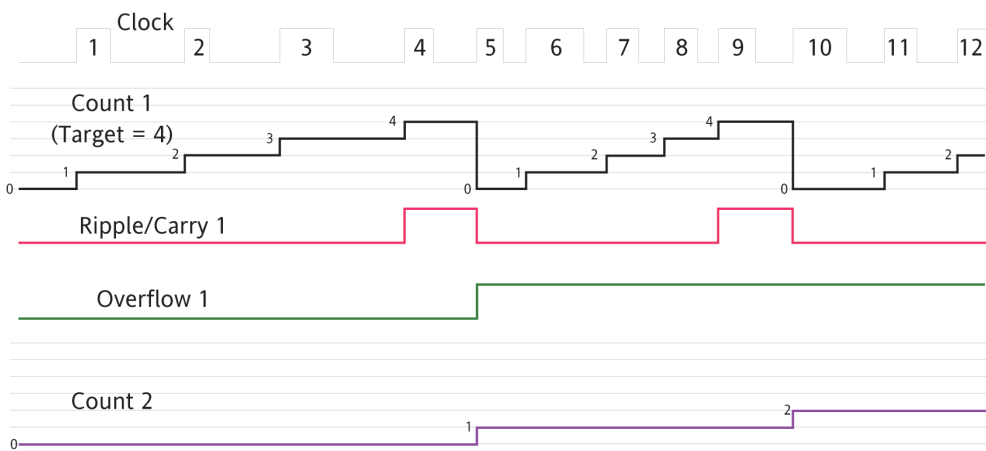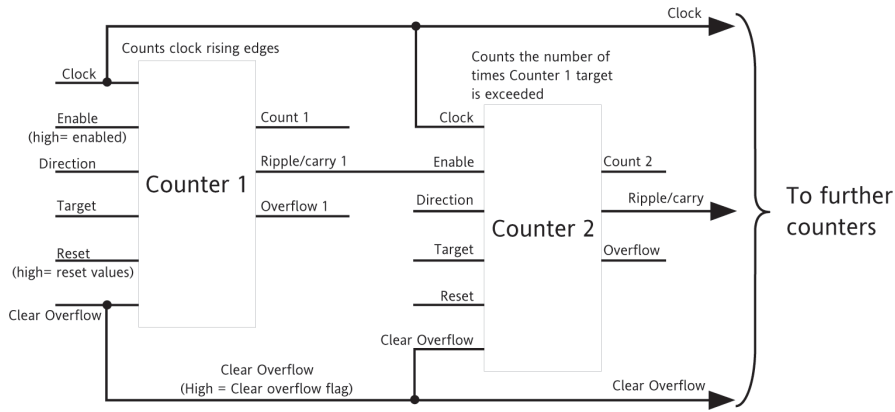

Clock	Count 2	Count 1
0	0	0
1	0	1
2	0	2
3	0	3
4	0	4
5	1	0
6	1	1
7	1	2
8	1	3
9	1	4
10	2	0
11	2	1
12	2	2

Figure 53 Cascading up counters

Note: Counter 2 above counts the number of times that Counter 1 target is exceeded. By permanently enabling counter 2, and wiring counter 1 'Ripple Carry' output to counter 2 'Clock' input (replacing the connection to the clock pulse stream), counter 2 will indicate the number of times counter 1 target is reached, rather than exceeded.

Energy Configuration

Provides a number of energy counters to totalize consumed energy. The power consumed can be displayed in one of a number of units, ranging from Wh to GWh.

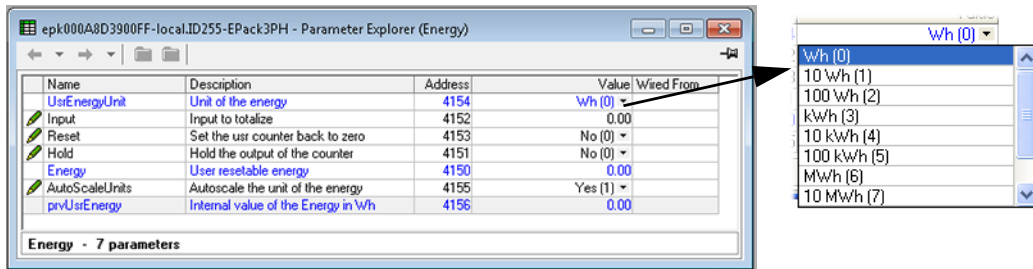


Figure 54 Energy configuration page

Parameters

- UsrEnergyUnit** Allows a scaling units value to be entered for the energy display. Selectable as '1Wh', '10Wh', '100Wh', '1kWh', '10kWh', '100kWh', '1MWh', '10MWh', '100MWh' or '1GWh'.
- Input** Shows the instantaneous power input from the measuring source. Normally wired to the Meas.P output of the block.
- Reset** 1 = Energy counter output goes to zero and immediately starts accumulating.
0 = Energy counter not reset.
- Hold** 1 = Hold output value. This freezes the output value for the block at the current value. The input continues to be totalized, so when the Hold input returns to 0, the output value is instantaneously updated to the new current value.
0 = output value is not held, and represents the current accumulated Energy value.
- Energy** Shows the current value for the selected Energy Counter block.
- Autoscale** No = Use UsrUnit setting.
Yes = Autoscale power value display (Table 39).

Table 39: Scaler values

Power range (Watt-hours)	Scaler value
0 to 65535	1
65,535 to 65,535,000	1k
65,535,000 to 655,350,000	10k
655,350,000 to 6,553,500,000	100k
6,553,500,000 to 65,535,000,000	1M
65,535,000,000 to 655,350,000,000	10M
655,350,000,000 to 6,553,500,000,000	100M
6,553,500,000,000 upwards	1G

Resolution

The resolution of the stored energy value varies according to the totalized value, as shown in Table 40. For example, for stored values between 33,554,432 watt-hours and 67,108,863 watt-hours, the value increases in 4 watt-hour increments.

Table 40: Energy counter resolution

Power range (Watt-hours)	Resolution (Wh)	Power range (Watt-hours)	Resolution (Wh)
0 to 16,777,215	1	17,179,869,184 to 34,359,738,367	2048
16,777,216 to 33,554,431	2	34,359,738,368 to 68,719,476,736	4096
33,554,432 to 67,108,863	4	68,719,476,736 to 137,438,953,471	8192
67,108,864 to 134,217,727	8	137,438,953,472 to 274,877,906,943	16384
134,217,728 to 268,435,455	16	274,877,906,944 to 549,755,813,887	32768
268,435,456 to 536,870,911	32	549,755,813,888 to 1,099,511,627,776	65536
536,870,912 to 1,073,741,823	64	1,099,511,627,776 to 2,199,023,255,551	131072
1,073,741,824 to 2,147,483,647	128	2,199,023,255,552 to 4,398,046,511,103	262144
2,147,483,648 to 4,294,967,295	256	4,398,046,511,104 to 8,796,093,022,207	524288
4,294,967,296 to 8,589,934,591	512	8,796,093,022,208 to 17,592,186,044,415	1048576
8,589,934,592 to 17,179,869,183	1024		

Fault Detection Menu

This manages Alarm logging and provides an interface for the General Alarm Acknowledgement.

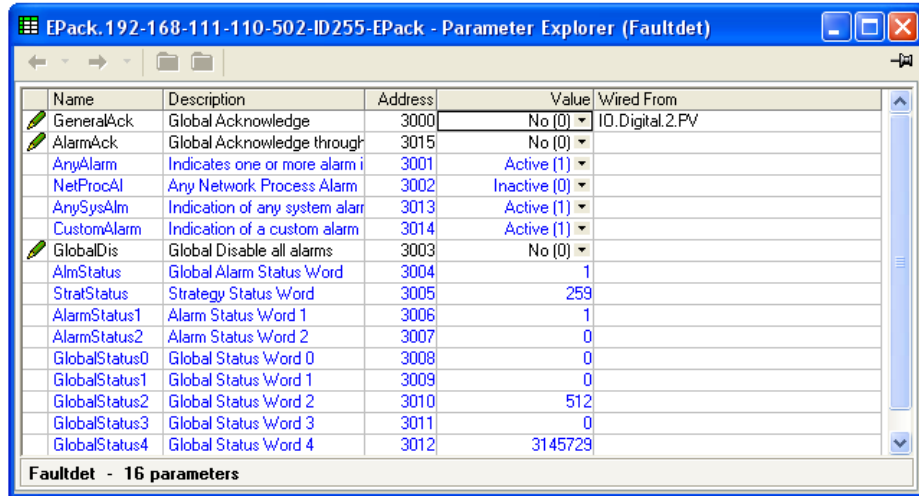


Figure 55 Fault detection menu page

Parameters

General Ack	Performs a global acknowledgement of alarms. Latched alarms are cleared if their trigger sources are no longer in an alarm state. Wired by default from Digital input 2.
AlarmAck	Enables global alarm acknowledgement from front fascia.
Any Alarm	'Active' indicates that there is one or more System, Process or 'Chop Off' alarm active. If the relevant alarms are enabled, System alarms and Chop Off alarms always cause the power module to stop firing. Process alarms can also be configured to prevent firing in 'Alarm stop'.
NetProcAl	Indicates that a process alarm has occurred in the power network.
AnySysAlm	Indicates that a systems alarm is active. By default, this is wired to Custom Alarm, see below.
Custom Alarm	Indicates that an alarm using rules defined by user, is active. By default, this is wired to IO Relay.PV. (See AlmRelay tab in corresponding function block)
Global Disable	Allows the user to disable/enable all alarms.

StratStatus A coded status word giving strategy information as shown in Table 41.

Table 41: Strategy status

Bit	Value	Description
0	1	Not firing
1	2	Not synchronising
2	4	Reserved
3	8	Reserved
4	16	Reserved
5	32	Reserved
6	64	Reserved
7	128	Strategy in standby mode
8	256	Strategy in Telemetry mode
9	512	Reserved
10	1024	Reserved
11	2048	Reserved
12	4096	Reserved
13	8192	Reserved
14	16384	Reserved
15	32768	Reserved

Alarm Status 1(2) Two 16-bit words containing alarm status information as shown in Table 42.

Table 42: Alarm status word 1

Alarm status word 2

Bit	Value	Description	Bit	Value	Description
0	1	Missing mains	0	1	Closed loop
1	2	Thyristor short circuit	1	2	Transfer active
2	4	Over temp*	2	4	Limit active
3	8	Dips	3	8	Reserved
4	16	Frequency out of range	4	16	Reserved
5	32	Total Load Failure	5	32	Reserved
6	64	Chop off	6	64	Reserved
7	128	Partial load failure	7	128	Reserved
8	256	Partial load unbalance	8	256	Any bit in Global Status 0
9	512	Over voltage	9	512	Any bit in Global Status 1
10	1024	Under voltage	10	1024	Any bit in Global Status 2
11	2048	Pre temp*	11	2048	Any bit in Global Status 3
12	4096	Over current	12	4096	Reserved
13	8192	Reserved	13	8192	Reserved
14	16384	Analogue input over C	14	16384	Reserved
15	32768	External input	15	32768	Reserved

Note: * These alarms not applicable at this release but are reserved for future development.

Firing Output Menu

This forms the link between the control strategy and the physical load. This block also supplies Phase-Angle Ramp (Soft start) and Safety Ramp.

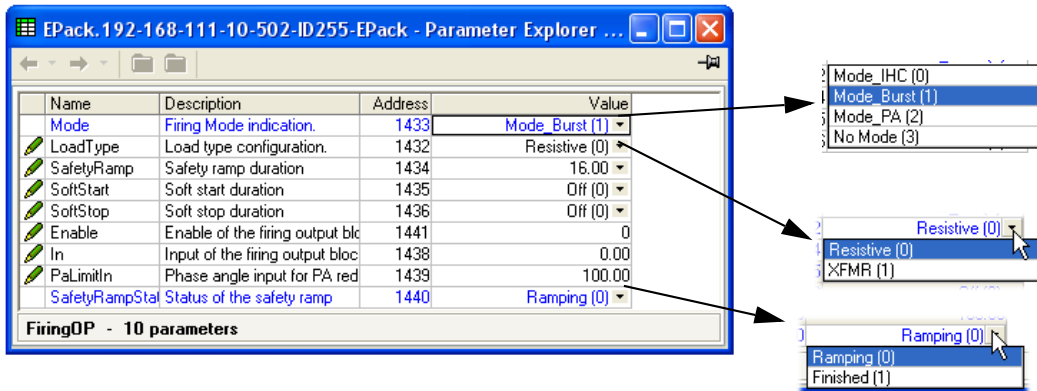


Figure 56 iTools configuration firing output page

Mode	Displays the current firing mode as Intelligent half cycle (IHC), Burst firing, Phase angle firing or No Mode. Configured in the 'Modulator', menu described below.
Load Type	Allows the load type to be selected as 'Resistive' or 'Transformer'. For Load type = Resistive, the load must be connected directly to the power module and only resistive loads may be so connected. For Load Type = Transformer, the load is connected to the power module via a transformer, and may be resistive or reactive.
'Safety Ramp'	Displays the startup ramp duration, in supply voltage cycles (0 to 255), to be applied at startup. The ramp is either a phase angle ramp from zero to the requested target phase angle or, for Burst Firing, ranges from 0 to 100%, see Figure 57. Safety Ramp is not applicable to Intelligent Half cycle (IHC) Mode.
Soft Start	For Burst Firing only, this is the soft start duration, in supply voltage cycles, applying a phase angle ramp at the beginning of each on period (Figure 58).
Soft Stop	In Burst Firing, the soft stop duration, in supply voltage cycles, applying a phase angle ramp at the end of each on period.
Delayed Trigger	Appears only if Mode = Burst, Soft Start = Off, and Load Type = TxFormer. Delayed Trigger specifies the triggering delay, in phase angle, when delivering power into a transformer load. Used to minimize inrush current. the value is configurable between 0 and 90 degrees inclusive (Figure 59).
Enable	Enables/disables firing. Must be wired to a non-zero value to enable firing (typically a digital input).
In	Displays the input power demand value that the power module is to deliver.
PA Limit	Phase angle limit. This is a phase angle reduction factor used in Burst Firing. If lower than 100% the power module will deliver a burst of phase angle firing. Used, typically, to perform threshold current limiting in Burst Firing.
Ramp Status	Displays the safety ramp status as 'Ramping' or 'Finished'.

Examples

Safety Ramps, Soft Start and Delayed Trigger, firing types

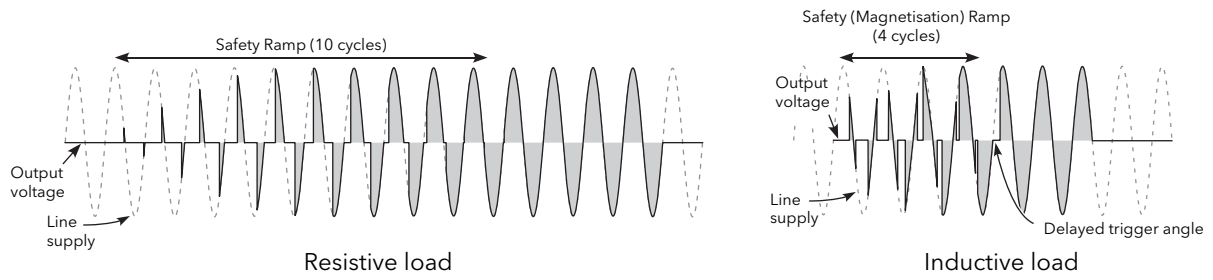


Figure 57 Safety ramp (burst firing) examples

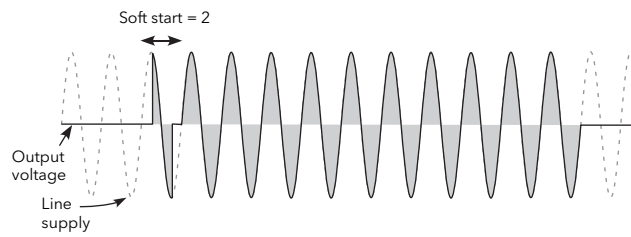


Figure 58 Soft start example

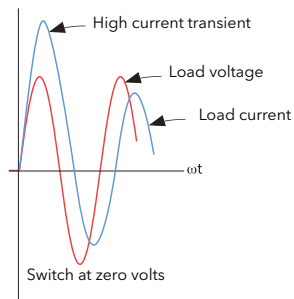


Figure 59 Delayed trigger definition

Note: Waveforms have been idealized for clarity.

Input/Output (IO) Configuration

This area of configuration allows the user to configure the analog and digital inputs and to view the status of the Relay output. The configuration is separated into the following areas:

- "Analog Input configuration" on page 146.
- "Digital Input configuration" on page 149.
- "Relay status" on page 150.

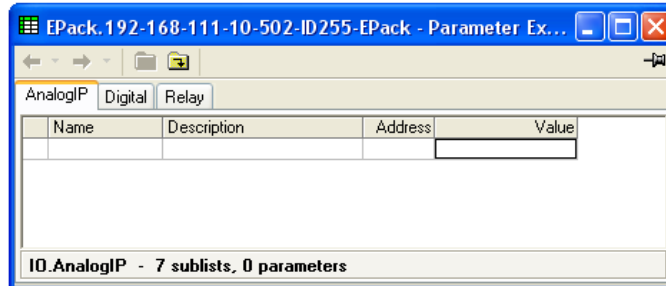


Figure 60 Top level IO menu

Analog Input configuration

The configuration for the analog input is divided into a number of areas:

- Ai Main,
- AlmDis,
- AlmDet,
- AlmSig,
- AlmLat,
- AlmAck,
- AlmStop
- AlmRelay

Ai Main

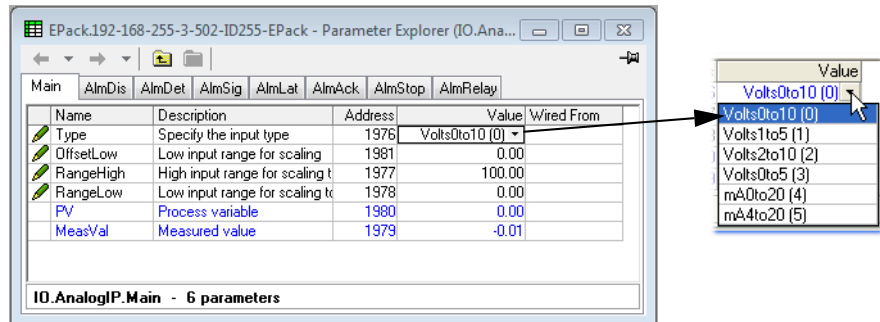


Figure 61 iTools analog input page

Parameters

- Type** Allows the type of input to be set as one of: 0 to 10V, 1 to 5V, 2 to 10V, 0 to 5V, 0 to 20mA, 4 to 20mA. For pinout details, see [Figure 13](#).
- OffsetLow** An offset, which is used to adjust measured value. The parameter value can be set from -1 to 1 in electrical units (depending on input type) and is added to MeasVal. This can be used to compensate for any accuracy issues or electrical noise on the analog input.
- RangeHigh** High range of input for scaling from measurement units to process units. PV is clipped to range high if input goes over range.
- RangeLow** Low range of input for scaling from measurement units to process units. PV is clipped to range low if input goes under range.
- PV** The scaled value in process units. Clipped to the Range High or Range Low value if the signal goes over range or under range respectively.
- MeasVal** The value at the instrument terminals, including the OffsetLow parameter value in electrical units.

AlmDis

Allows the user to enable or disable alarms individually.

Example

Figure 62 shows an iTools page for AlmDis. Pages for the other Alm parameters are similar.

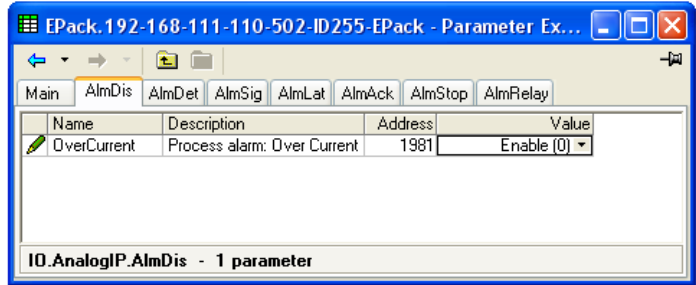


Figure 62 AlmDis example

AlmDet

Indicates whether each individual alarm has been detected and is currently active. This alarm becomes active if the input current goes higher than 25mA, in this case the Analog Input type is automatically switched to 0-10V to avoid damage.

AlmSig

Signals that an alarm has occurred, and whether or not it is a latched. If the user wishes to assign an alarm to for example a relay then the appropriate signaling parameter should be wired.

AlmLat

Allows each individual alarm to be configured as latching, the latched state is shown in the alarm signaling parameter.

AlmAck

Allows each individual alarm to be acknowledged. On an alarm being acknowledged the related signaling parameter (Almsig) is cleared. If the alarm is still active as shown by the detection parameter (Almdet) the alarm may not be acknowledged. The acknowledge parameters automatically clear after being written.

AlmStop

Allows each individual alarm type to be configured to stop the power channel firing. ALMSTOP is activated by the signaling parameter (Almsig) and may be latching or not according to the AlmLat setting for the alarm.

AlmRelay

Causes the relay to be controlled by this alarm

Note: When utilizing Almrelay function ensure FaultDet/CustomAlarm parameter remains wired to IO.Relay/PV.

Digital Input configuration

This allows the user to configure each of the digital inputs.

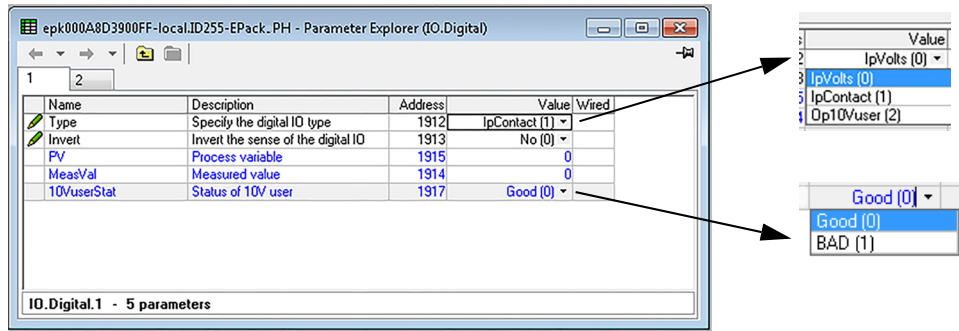



Figure 63 iTools Digital Input configuration page, (digital input 2 displayed)

Parameters

Type	Select to configure the Logic Input type: 0 = IpVolts. 1 = IpContact. 2 = Op10Vuser. For pinout details, see Figure 13 .
Invert	Sets the inversion status to 'No' or 'Yes'. When set to 'No', there is no inversion (e.g. if MeasVal = 0 then PV = 0). When set to 'Yes', an inversion takes place (e.g. if MeasVal = 0 then PV = 1)
PV	The current state of the input, after any inversion has been applied.
MeasVal	For inputs, this shows the value measured at the instrument terminals, in electrical units.
10VuserStat	Displays the 10V user inputs status; Good (0) = No issue can deliver 10V BAD (1) = No 10V output, possible short circuit or excessive current requirement. Example: The 10V user input would typically be used to connect a potentiometer located on a cabinets front fascia, which would be used to adjust setpoint values via digital input 1.

Note: The 10V user input is available using digital input 2.

Relay status

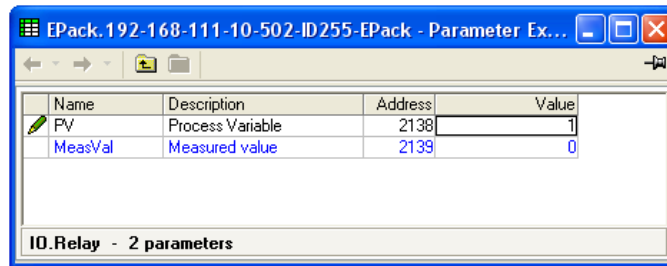

The screenshot shows a window titled "EPack.192-168-111-10-502-ID255-EPack - Parameter Ex...". It contains a table with the following data:

Name	Description	Address	Value
PV	Process Variable	2138	1
MeasVal	Measured value	2139	0

Below the table, it says "IO.Relay - 2 parameters".

Figure 64 iTools relay status page

Parameters

PV	This shows the status of the input to the relay as either 'On' (True) or 'Off' (False).
Meas Val	Shows the current state of the relay coil. 1 = energized; 0 = de-energized, where 'energized' is 'off' and 'de-energized' is 'on'. For pinout details, see Figure 13 . For specification, see Relay Specification (page 232) .

Instrument Configuration Menu

Instrument configuration is divided into the following sections:

- "Instrument Display configuration" on page 151
- "Instrument Config configuration" on page 152
- "Instrument configuration" on page 153
- "Scaling Factor" on page 154

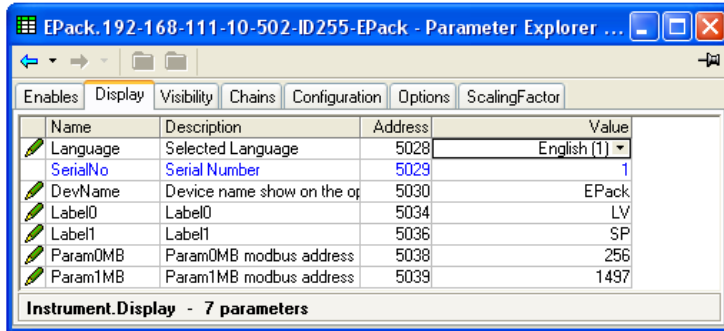


Figure 65 Top level instrument configuration page

Instrument Display configuration

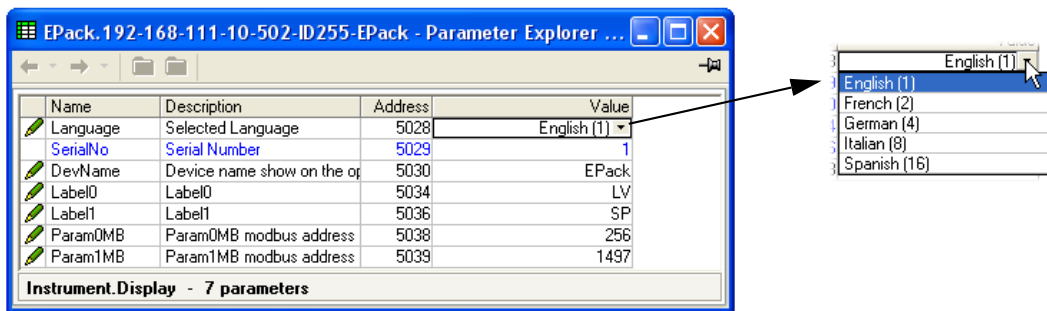


Figure 66 Instrument display configuration page

Parameters

- Language** Select required language for subsequent displays.
- Serial No** Read only. Displays the factory-set Serial number of the unit.
- Dev Name** The device name as it appears at the user display.
- Label 0(1)** The text that appears on the home page for the two parameters defined by the addresses listed in Param0 and Param1. User-definable 3 characters (maximum).
- Param0(1)MB** This is the Modbus address of the first (second) parameter to be displayed in the home screen of the instrument.

Instrument Config configuration

The current hardware configuration.

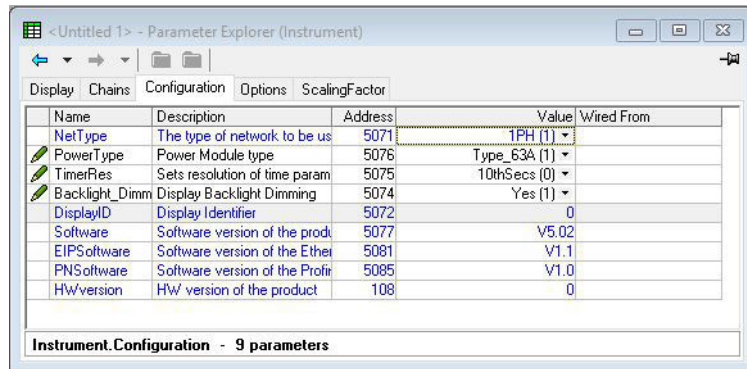


Figure 67 Instrument configuration

Note: If the EtherCAT option is fitted, 'EIPSoftware' and 'PNSoftware' are not displayed.

Parameters

- Net Type** Network type. This is set at the factory and cannot be changed by the user.
 0 = 3 phase
 1 = Single phase
 2 = 2 phase
- Power Type** This is set at the factory and cannot be changed by the user,
 (0 = 32A, 1 = 63A, 2 = 100A, 3 = 125A)
- Timer Res** Resolution of time parameters
 0 = 10ths of seconds (100ms); 1 = 10ths of minutes (6 seconds)
- Backlight_Dimming** Option to control the display's backlight by switching dimming on to reduce power consumption:
 0 = No (deactivate dimming)
 1 = Yes (activates dimming)
- DisplayID** Displays details of the manufacturer display (screen) type:
 0 = Tianma
 1 = Densitron
- Software** Software version of the product.
- HWversion** Displays product hardware version set at factory (read-only parameter).

Instrument configuration

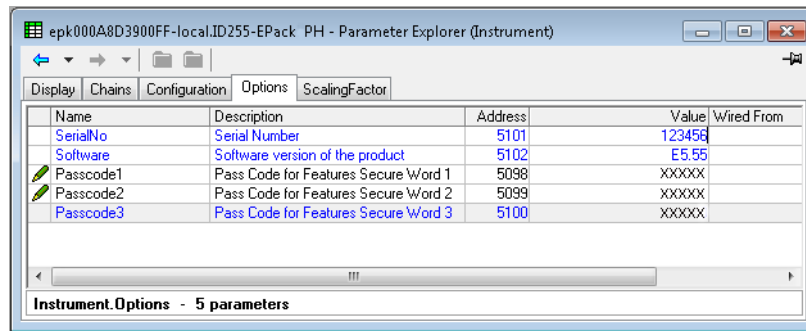


Figure 68 Instrument configuration page

Parameters

SerialNo	The instrument serial number.
Software	The version of software running on this instrument
Passcode1 (2)(3)	Pass Code for 'Features Secure Word' 1(2)(3).

Scaling Factor

Allows scaling factors to be entered for a number of parameters. In iTools, the scaling factors are arranged in ‘tabs’ of which, for the sake of clarity, this document depicts only one (SetProv).

These scaling factors are applied in Modbus transactions when access to relevant parameters is made using low range address (i.e. not the IEEE region).


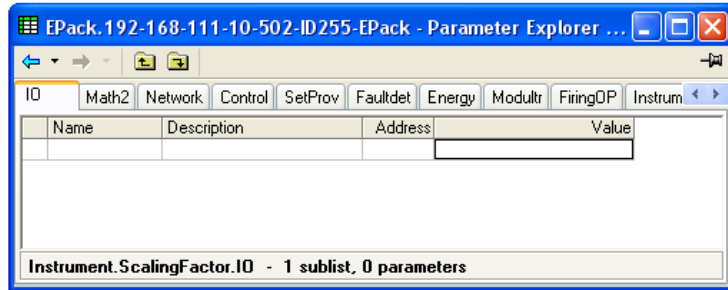


Figure 69 Scaling factor top level menu.

SetProv Example

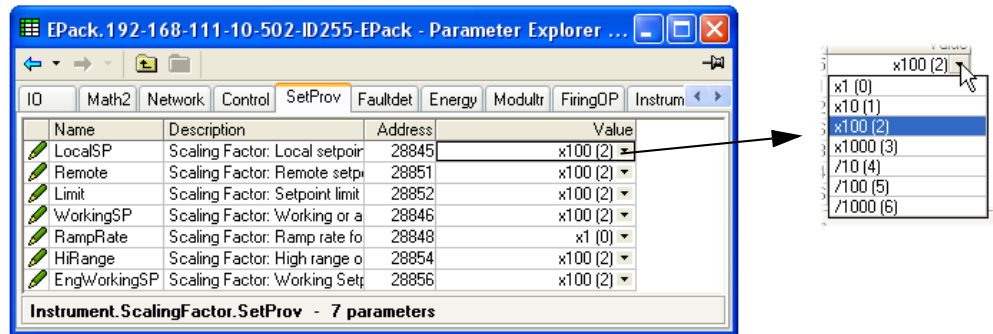

In the above example it can be seen that all the Set point provider parameters are scaled x100, except for Ramp Rate which is not scaled (i.e. the scaling factor = 1). As can also be seen, the scaling factors available are x1, x10, x100, x1000, ÷10, ÷100, ÷1000.

If the LocalSP, for example, has a scaling factor of x100, as above, then a value of say 5000 means in fact that the real value is 50.00.

Notes:

1. The above example shows the default scaling formats set - they are User configurable.
2. Values are rounded up/down.

IP Monitor Configuration

This monitors a wired parameter and records its maximum value, minimum value and the cumulative time that its value spends above a configurable threshold. An alarm can be set up to become active when the time-over-threshold exceeds a further threshold.

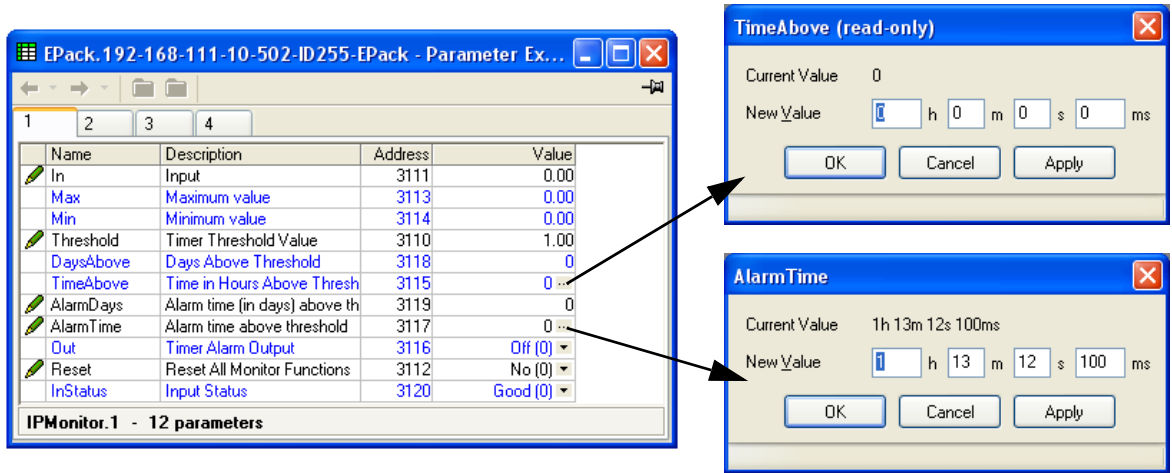


Figure 70 iTools input monitor page (IPMon1)

Parameters

- In** The parameter to be monitored. Normally wired (using iTools) to a parameter, but a numeric entry can be made for testing purposes.
- Max** The maximum value reached by the parameter since last reset.
- Min** The minimum value reached by the parameter since last reset.
- Threshold** This value acts as a trigger for the 'Time Above' measurement.
- Days above** Shows how many complete days the parameter value has spent above the Threshold value (continuously or intermittently) since last reset. The 'Time Above' value should be added to 'Days Above' in order to find the total time.
- Time Above** Shows how many hours, minutes and tenths of minutes that the parameter value has spent above the threshold value (continuously or intermittently) since last reset, or since the last complete day. (once the value exceeds 23:59.9, the 'Days Above' value is incremented and 'Time Above' is reset to 00:00.0.) The 'Time Above' value should be added to 'Days Above' in order to find the total time.
- Alarm Days** Together with 'Alarm Time' this defines a 'total time above threshold' value, which, when exceeded, sets the Alarm out parameter 'On'.
- Alarm Time** See 'Alarm Days' above.
- Reset** Resetting causes the Max. and Min. values to be set to the current value, sets the 'Days Above' value to zero, and the 'Time Above' value to 00:00.0.
- Status** Shows the status of the input parameter as either 'Good' or 'Bad'.

Lgc2 (Two Input Logic Operator) Menu

This logic operator block provides a number of two-input logic operations. The output is always a 'Boolean' (logic 0 or 1) no matter whether the inputs are analog or digital. For analog inputs, any value below 0.5 is deemed to be logic 0 (off). A value equal to or greater than 0.5 is treated as a logic 1 (on).

Either input can be 'inverted' as a part of the configuration (that is, a high input is treated as a low input and *vice-versa*.)

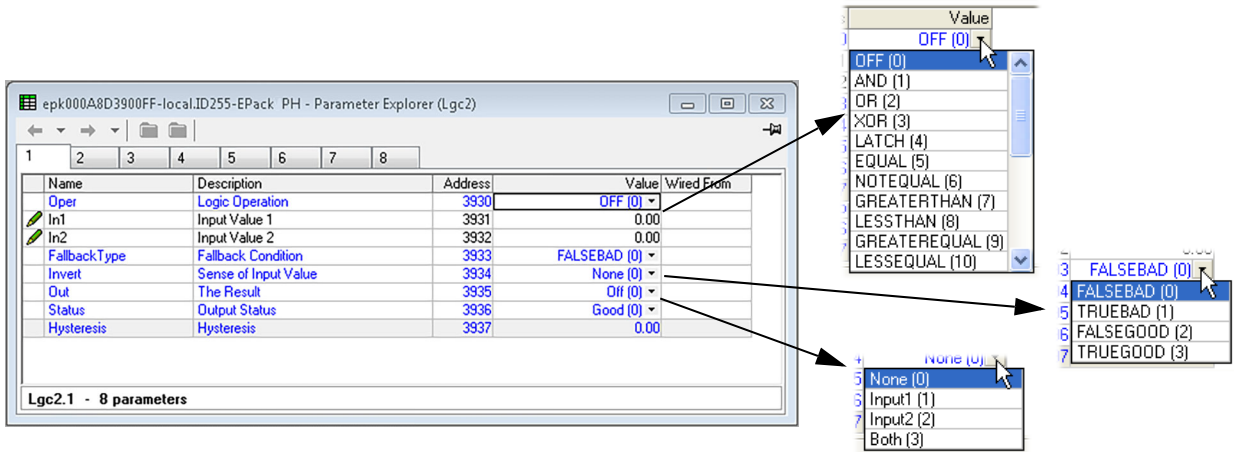


Figure 71 Lgc2 page (Lgc2 1)

Lgc2 Parameters

Oper

Allows the user to select a logic operation for the block. The descriptions below assume neither input is inverted. High = 1 or on; Low = 0 or off. OffNo logic operation selected. ANDOut is high if both inputs high, otherwise Out is low. OROut is high if either or both inputs high, otherwise Out is low. XOROutput high if either (but not both) inputs high. Low if neither or both inputs are high. LatchIf In2 low, Out latches next transition of In1. Value remains latched until In2 goes low, when Out = In1 (see figure 72). EqualOut high if both inputs are equal, otherwise output is low. Not Equal Out is high if inputs are unequal. Out is low if inputs are equal. Greater than Out is high if In1 value greater than In2 value, otherwise Out is low. Less than Out is high if In1 value less than In2 value, otherwise Out is low. GreaterEqual Out is high if In1 value is equal to or greater than In2 value, otherwise Out is low. LessEqual Out is high if In1 value is less than or equal to In2 value, otherwise Out is low.

In1

If wired, shows the value of In1; if not, allows the user to enter a value.

In2

If wired, shows the value of In2; if not, allows the user to enter a value.

Fallback type	Allows a fallback type to be selected. This defines the output value and status displays if the status of one or both inputs is 'bad'. FalseBadOutput value displays 'False' ; Status displays 'Bad' TrueBadOutput value displays 'True' ; Status displays 'Bad' FalseGoodOutput value displays 'False' ; Status displays 'Good' TrueGoodOutput value displays 'True' ; Status displays 'Good'.
Invert	Allows none, either or both inputs to be inverted.
Out	Shows the current output value
Status	Shows the status of the output ('Good' or 'Bad').
Hysteresis	For comparison operators only (e.g. Greater than) this allows a hysteresis value to be entered. For example, if the operator is 'Greater than' and hysteresis is H, then the output goes high when In1 exceeds In2, and remains high until In1 falls to a value less than (In2 - H). Not applicable to the 'Equal' function.


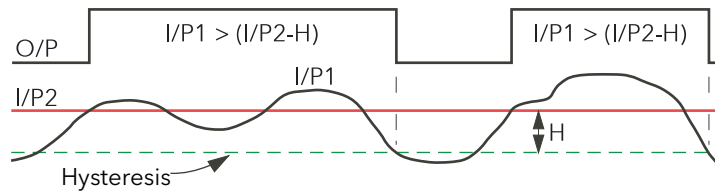


Figure 72 Hysteresis

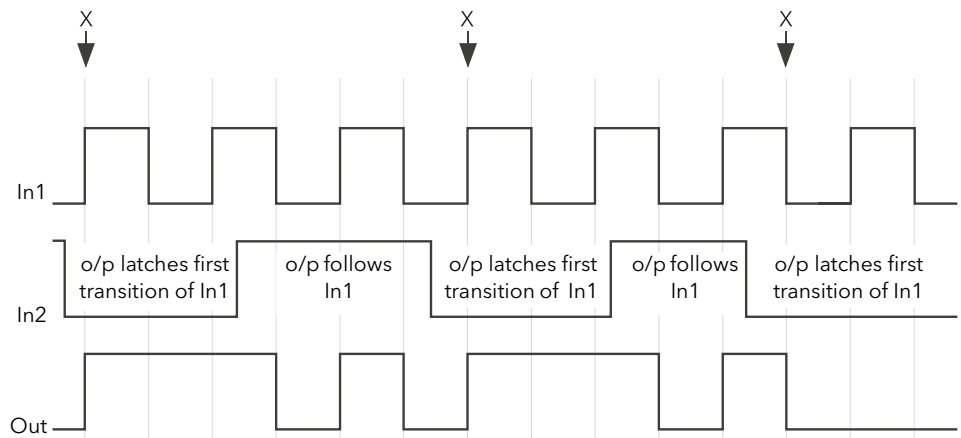

When In2 goes low, Out follows the next positive or negative transition of In1 (points 'X') and latches at this value until In2 goes high. When In2 is high, Out follows In1.

Figure 73 Latch operation

Lgc8 (Eight-input Logic Operator) Configuration

This allows between two and eight inputs to be combined using an AND, OR or Exclusive OR (EXOR) logic function. The inputs may be individually inverted, and the output can also be inverted, thus allowing the full range of logic functions to be implemented.

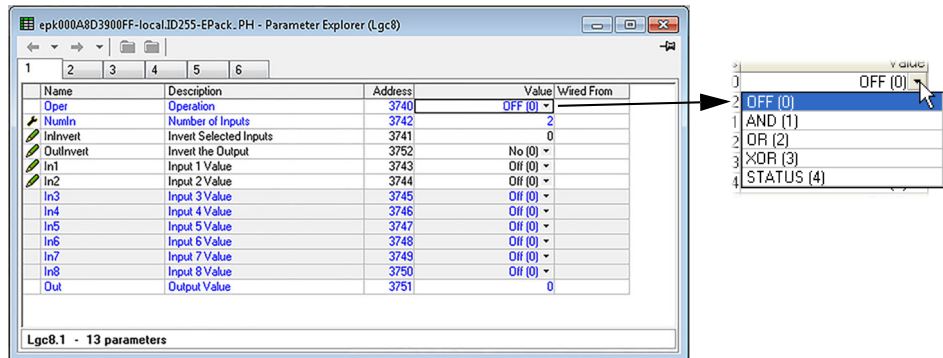


Figure 74 Lgc8 configuration page

Parameters

- Oper** Allows selection of AND, OR or Exclusive OR functions (or OFF).
 AND = output is high only if all inputs are high
 OR = output is high if any or all inputs are high
 XOR = output is high if an odd number of inputs are high, and low if an even number of inputs are high. Logically, a cascaded XOR function: (((((((In1 ⊕ In 2) ⊕ In 3) ⊕ In 4)... ⊕ In 8)
- NumIn** Set the number of inputs to between two and eight inclusive. This number defines how many invert keys appear in 'Invert', and how many Input value pages appear.
- InInvert** Allows the user to invert individual inputs, as described below.
- Out Invert** No = normal output; 'Yes' means that the output is inverted, allowing NAND and NOR functions to be implemented.
- In1** The state (on or off) of the first input
- In2 onwards** The state of the remaining inputs
- Out** The Output value of the function (i.e. On or Off)

LGC8 schematic

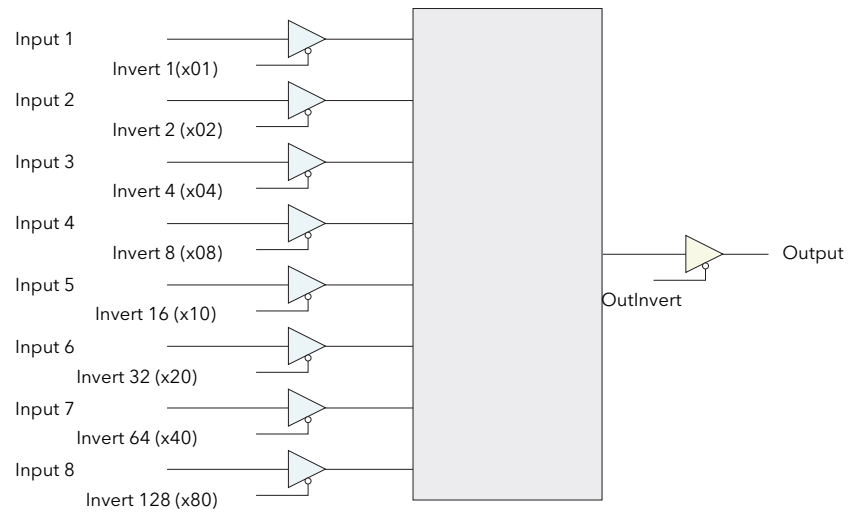


Figure 75 LGC8 Schematic

Invert input decoding table

The inversion status can be encoded/decoded using the following table.

Input		Hex	Dec	Input		Hex	Dec	Input		Hex	Dec	Input		Hex	Dec																									
8	7			6	5			4	3			2	1			8	7	6	5	4	3	2	1																	
N	N	N	N	N	N	N	N	00	0	N	7	N	N	N	N	N	40	64	8	N	N	N	N	N	N	80	128	8	7	N	N	N	N	N	N	C0	192			
N	N	N	N	N	N	N	1	01	1	N	7	N	N	N	N	1	41	65	8	N	N	N	N	N	1	81	129	8	7	N	N	N	N	1	C1	193				
N	N	N	N	N	N	N	2	02	2	N	7	N	N	N	N	2	42	66	8	N	N	N	N	N	2	82	130	8	7	N	N	N	N	2	C2	194				
N	N	N	N	N	N	N	2	03	3	N	7	N	N	N	N	2	43	67	8	N	N	N	N	N	2	83	131	8	7	N	N	N	N	2	C3	195				
N	N	N	N	N	N	3	N	04	4	N	7	N	N	N	3	44	68	8	N	N	N	N	3	N	84	132	8	7	N	N	N	N	3	N	C4	196				
N	N	N	N	N	N	3	N	05	5	N	7	N	N	N	3	45	69	8	N	N	N	N	3	N	85	133	8	7	N	N	N	N	3	N	C5	197				
N	N	N	N	N	N	3	2	06	6	N	7	N	N	N	3	46	70	8	N	N	N	N	3	2	N	86	134	8	7	N	N	N	N	3	2	N	C6	198		
N	N	N	N	N	N	3	2	07	7	N	7	N	N	N	3	47	71	8	N	N	N	N	3	2	1	87	135	8	7	N	N	N	N	3	2	1	C7	199		
N	N	N	N	N	N	4	N	08	8	N	7	N	N	4	N	48	72	8	N	N	N	4	N	N	N	88	136	8	7	N	N	4	N	N	N	C8	200			
N	N	N	N	N	N	4	N	09	9	N	7	N	N	4	N	49	73	8	N	N	N	4	N	N	1	89	137	8	7	N	N	4	N	N	1	C9	201			
N	N	N	N	N	4	N	2	0A	10	N	7	N	N	4	N	4A	74	8	N	N	N	4	N	2	N	8A	138	8	7	N	N	4	N	2	N	CA	202			
N	N	N	N	N	4	N	2	0B	11	N	7	N	N	4	N	4B	75	8	N	N	N	4	N	2	1	8B	139	8	7	N	N	4	N	2	1	CB	203			
N	N	N	N	N	4	3	N	0C	12	N	7	N	N	4	3	4C	76	8	N	N	N	4	3	N	N	8C	140	8	7	N	N	4	3	N	N	CC	204			
N	N	N	N	N	4	3	N	0D	13	N	7	N	N	4	3	4D	77	8	N	N	N	4	3	N	1	8D	141	8	7	N	N	4	3	N	1	CD	205			
N	N	N	N	N	4	3	2	0E	14	N	7	N	N	4	3	4E	78	8	N	N	N	4	3	2	N	8E	142	8	7	N	N	4	3	2	N	CE	206			
N	N	N	N	N	4	3	2	0F	15	N	7	N	N	4	3	4F	79	8	N	N	N	4	3	2	1	8F	143	8	7	N	N	4	3	2	1	CF	207			
N	N	N	N	N	5	N	N	10	16	N	7	N	5	N	N	50	80	8	N	N	5	N	N	N	90	144	8	7	N	5	N	N	N	N	D0	208				
N	N	N	N	N	5	N	N	1	11	17	N	7	N	5	N	51	81	8	N	N	5	N	N	1	91	145	8	7	N	5	N	N	1	D1	209					
N	N	N	N	N	5	N	2	12	18	19	N	7	N	5	N	52	82	8	N	N	5	N	2	N	92	146	8	7	N	5	N	2	N	D2	210					
N	N	N	N	N	5	N	2	13	19	20	N	7	N	5	N	53	83	8	N	N	5	N	2	1	93	147	8	7	N	5	N	2	1	D3	211					
N	N	N	N	N	5	N	3	14	20	21	N	7	N	5	N	54	84	8	N	N	5	N	3	N	94	148	8	7	N	5	N	3	N	D4	212					
N	N	N	N	N	5	N	3	15	21	22	N	7	N	5	N	55	85	8	N	N	5	N	3	N	95	149	8	7	N	5	N	3	N	D5	213					
N	N	N	N	N	5	N	3	16	22	23	N	7	N	5	N	56	86	8	N	N	5	N	3	2	N	96	150	8	7	N	5	N	3	2	N	D6	214			
N	N	N	N	N	5	N	3	17	23	24	N	7	N	5	N	57	87	8	N	N	5	N	3	2	1	97	151	8	7	N	5	N	3	2	1	D7	215			
N	N	N	N	N	5	4	N	18	24	25	N	7	N	5	4	N	88	88	8	N	N	5	4	N	N	98	152	8	7	N	5	4	N	N	D8	216				
N	N	N	N	N	5	4	N	19	25	26	N	7	N	5	4	N	89	89	8	N	N	5	4	N	1	99	153	8	7	N	5	4	N	1	D9	217				
N	N	N	N	N	5	4	N	1A	26	27	N	7	N	5	4	N	90	90	8	N	N	5	4	N	2	9A	154	8	7	N	5	4	N	2	DA	218				
N	N	N	N	N	5	4	N	1B	27	28	N	7	N	5	4	N	91	91	8	N	N	5	4	N	2	9B	155	8	7	N	5	4	N	2	DB	219				
N	N	N	N	N	5	4	3	1C	28	29	N	7	N	5	4	3	92	92	8	N	N	5	4	3	N	9C	156	8	7	N	5	4	3	N	DC	220				
N	N	N	N	N	5	4	3	1D	29	30	N	7	N	5	4	3	93	93	8	N	N	5	4	3	N	9D	157	8	7	N	5	4	3	N	DD	221				
N	N	N	N	N	5	4	3	1E	30	31	N	7	N	5	4	3	94	94	8	N	N	5	4	3	2	9E	158	8	7	N	5	4	3	2	DE	222				
N	N	N	N	N	5	4	3	1F	31	32	N	7	N	5	4	3	95	95	8	N	N	5	4	3	2	9F	159	8	7	N	5	4	3	2	DF	223				
N	N	N	N	N	6	N	N	20	32	33	N	7	6	N	N	60	96	8	N	6	N	N	N	N	A0	160	8	7	6	N	N	N	N	E0	224					
N	N	N	N	N	6	N	N	1	21	34	N	7	6	N	N	61	97	8	N	6	N	N	N	1	A1	161	8	7	6	N	N	N	1	E1	225					
N	N	N	N	N	6	N	N	2	22	35	N	7	6	N	N	62	98	8	N	6	N	N	2	N	A2	162	8	7	6	N	N	N	2	E2	226					
N	N	N	N	N	6	N	N	2	1	23	35	N	7	6	N	N	63	99	8	N	6	N	N	2	1	A3	163	8	7	6	N	N	N	2	E3	227				
N	N	N	N	N	6	N	3	N	24	36	N	7	6	N	N	64	100	8	N	6	N	N	3	N	N	A4	164	8	7	6	N	N	3	N	E4	228				
N	N	N	N	N	6	N	3	N	1	25	37	N	7	6	N	N	65	101	8	N	6	N	N	3	N	1	A5	165	8	7	6	N	N	3	N	E5	229			
N	N	N	N	N	6	N	3	2	N	26	38	N	7	6	N	N	66	102	8	N	6	N	N	3	2	N	A6	166	8	7	6	N	N	3	2	N	E6	230		
N	N	N	N	N	6	N	3	2	1	27	39	N	7	6	N	N	67	103	8	N	6	N	N	3	2	1	A7	167	8	7	6	N	N	3	2	1	E7	231		
N	N	N	N	N	6	N	4	N	28	40	N	7	6	N	4	N	68	104	8	N	6	N	4	N	N	A8	168	8	7	6	N	4	N	N	E8	232				
N	N	N	N	N	6	N	4	N	1	29	41	N	7	6	N	4	N	69	105	8	N	6	N	4	N	1	A9	169	8	7	6	N	4	N	1	E9	233			
N	N	N	N	N	6	N	4	N	2	2A	42	N	7	6	N	4	N	70	106	8	N	6	N	4	N	2	AA	170	8	7	6	N	4	N	2	EA	234			
N	N	N	N	N	6	N	4	N	2	1	2B	43	N	7	6	N	4	N	71	107	8	N	6	N	4	N	2	AB	171	8	7	6	N	4	N	2	EB	235		
N	N	N	N	N	6	N	4	3	N	2C	44	N	7	6	N	4	3	N	72	108	8	N	6	N	4	3	N	AC	172	8	7	6	N	4	3	N	EC	236		
N	N	N	N	N	6	N	4	3	N	1	2D	45	N	7	6	N	4	3	N	73	109	8	N	6	N	4	3	N	AD	173	8	7	6	N	4	3	N	ED	237	
N	N	N	N	N	6	N	4	3	2	N	2E	46	N	7	6	N	4	3	2	N	74	110	8	N	6	N	4	3	2	AE	174	8	7	6	N	4	3	2	EE	238
N	N	N	N	N	6	N	4	3	2	1	2F	47	N	7	6	N	4	3	2	1	75	111	8	N	6	N	4	3	2	AF	175	8	7	6	N	4	3	2	EF	239
N	N	N	N	N	6	5	N	N	30	48	N	7	6	5	N	N	70	112	8	N	6	5	N	N	N	B0	176	8	7	6	5	N	N	N	F0	240				
N	N	N	N	N	6	5	N	N	1	31	49	N	7	6	5	N	N	71	113	8	N	6	5	N	N	1	B1	177	8	7	6	5	N	N	1	F1	241			
N	N	N	N	N	6	5	N	N	2	32	50	N	7	6	5	N	N	72	114	8	N	6	5	N	N	2	B2	178	8	7	6	5	N	N	2	F2	242			
N	N	N	N	N	6	5	N	N	2	1	33	51	N	7	6	5	N	N	73	115	8	N	6	5	N	N	2	1	B3	179	8	7	6	5	N	N	2	F3	243	
N	N	N	N	N	6	5	N	3	N	34	52	N	7	6	5	N	3	N	74	116	8	N	6	5	N	3	N	N	B4	180	8	7	6	5	N	3	N	F4	244	
N	N	N	N	N	6	5	N	3	N	1	35	53																												

LIN16 Input Linearization

The Lin16 function block converts an input signal into an output PV using a series of up to 15 straight lines to characterize the conversion.

The function block provides the following behaviour.

1. The Input values must be monotonic and constantly rising.
2. To convert the MV to the PV, the algorithm will search the table of inputs until the matching segment is found. Once found, the points either side will be used to interpolate the output value.
3. If during the search, a point is found which is not above the previous (below for inverted) then the search will be terminated and the segment taken from the last good point to the extreme (In Hi-Out Hi) see following diagram.

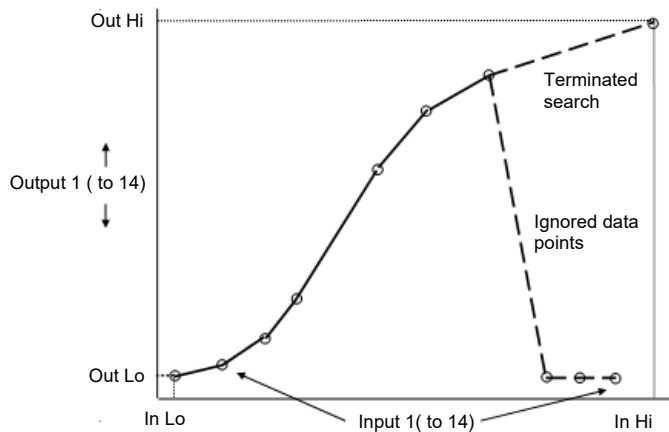


Figure 76 Linearization Example

Notes:

1. The linearization block works on rising inputs/rising outputs or rising inputs/falling outputs. It is not suitable for outputs which rise and fall on the same curve.
2. Input Lo/Output Lo and Input Hi/Output Hi are entered first to define the low and high points of the curve. It is not necessary to define all 15 intermediate points if the accuracy is not required. Points not defined will be ignored and a straight line fit will apply between the last point defined and the Input Hi/Output Hi point. If the input source has a bad status (sensor break, or over-range) then the output value will also have a bad status.

1. If the input value is outside the translated range then the output status will indicate Bad, and the value will be limited to the nearest output limit.
2. The units and resolution parameters will be used for the output values. The input values resolution and units will be specified by the source of the wire.
3. If the 'Out Low' is higher than the 'Out High' then the translation will be inverted

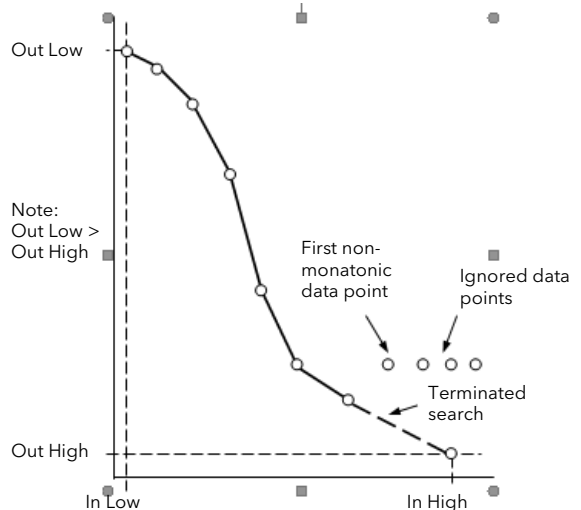


Figure 77 How an Inverted Curve will Terminate its search when it detects non-monotonic data

Compensation for Sensor Non-Linearities

The custom linearization feature can also be used to compensate for inaccuracies in the sensor or measurement system. The intermediate points are, therefore, available in Level 1 so that known discontinuities in the curve can be calibrated out. The diagram below shows an example of the type of discontinuity which can occur in the linearization of a temperature sensor.

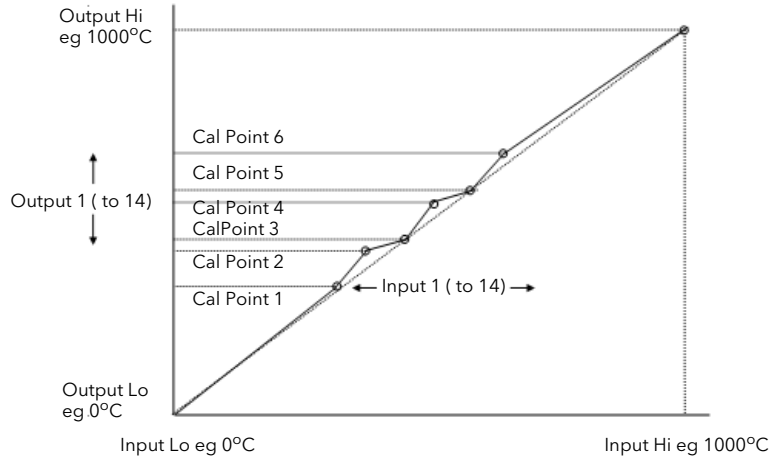


Figure 78 Compensation for Sensor Discontinuities

The calibration of the sensor uses the same procedure as described above. Adjust the output (displayed) value against the corresponding input value to compensate for any inaccuracies in the standard linearization of the sensor.

Note: Do not exceed the range of the instrument when choosing the compensation range. For example, whereas type K tables show mV values up to -270°C the instrument range is limited to -200°C so that inaccuracies may occur in the mid range if -200°C is exceeded.

Input Linearization Parameters

Name	Description	Address	Value	Wired From
Units	Units of the Linearised Output	4251	None (0)	
Resolution	Resolution of the Linearised Output	4252	X (0)	
In	Input Measurement to Linearise	4253	0.00	
FallbackType	Fallback Type	4287	ClipBad (0)	
FallbackValue	Fallback Value	4288	0.00	
Out	Linearisation Result	4254	0.00	
InLowLimit	Input Low Limit	4255	0.00	
OutLowLimit	Output Low Limit	4256	0.00	
InHighLimit	Input High Limit	4285	0.00	
OutHighLimit	Output High Limit	4286	0.00	
In1	Input Point 1	4257	0.00	
Out1	Output Point 1	4258	0.00	
In2	Input Point 2	4259	0.00	
Out2	Output Point 2	4260	0.00	
In3	Input Point 3	4261	0.00	
Out3	Output Point 3	4262	0.00	
In4	Input Point 4	4263	0.00	
Out4	Output Point 4	4264	0.00	
In5	Input Point 5	4265	0.00	
Out5	Output Point 5	4266	0.00	
In6	Input Point 6	4267	0.00	
Out6	Output Point 6	4268	0.00	
In7	Input Point 7	4269	0.00	
Out7	Output Point 7	4270	0.00	
In8	Input Point 8	4271	0.00	
Out8	Output Point 8	4272	0.00	
In9	Input Point 9	4273	0.00	
Out9	Output Point 9	4274	0.00	
In10	Input Point 10	4275	0.00	
Out10	Output Point 10	4276	0.00	
In11	Input Point 11	4277	0.00	
Out11	Output Point 11	4278	0.00	
In12	Input Point 12	4279	0.00	
Out12	Output Point 12	4280	0.00	
In13	Input Point 13	4281	0.00	
Out13	Output Point 13	4282	0.00	
In14	Input Point 14	4283	0.00	
Out14	Output Point 14	4284	0.00	
Status	Status of The Block	4250	Good (0)	

Lin16 - 39 parameters

- Units** Units of the linearized output.
- Resolution** Resolution of the output value
- In** Input measurement to linearise between InLowLimit and InHighLimit. Wire to the source for the custom linearization.
- FallbackType** Fallback Type
The fallback strategy will come into effect if the status of the input value is bad or if the input value is outside the range of input high scale and input low scale.
- Fallback Value** In the event of a bad status, the output may be configured to adopt the fallback value. This allows the strategy to dictate a known output in the event of a fallback type being indicated.
- Out** Result of the linearization
- InLowLimit** Adjust to the low input value
- OutLowLimit** Adjust to correspond to the low input value
- InHighLimit** Adjust to the high input value
- OutHighLimit** Adjust to correspond to the high input value
- In1** Adjust to the first break point
- Out1** Adjust to correspond to input 1
- In14** Adjust to the last break point
- Out14** Adjust to correspond to input 14
- Status** Status of the block. A value of zero indicates a healthy conversion.

The 16 point linearization does not require all 16 points to be used. If fewer points are required, then the curve can be terminated by setting the first unwanted value to be less than the previous point.

Conversely if the curve is a continuously decreasing one, then it may be terminated by setting the first unwanted point above the previous one.

Math2 Menu

This feature allows a range of two-input mathematical functions to be performed. The available functions are listed below.

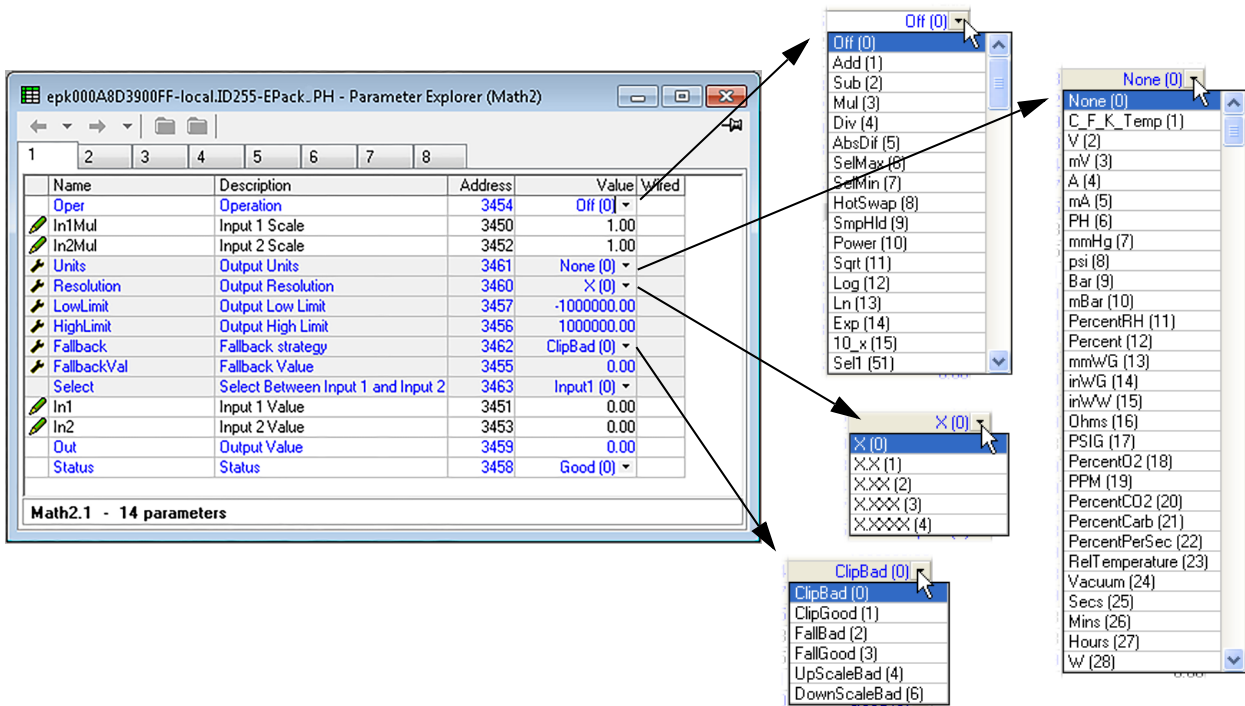


Figure 79 Maths2 configuration page

Math2 Parameters

Note: For the sake of this description, ‘High’, ‘1’ and ‘True’ are synonymous, as are ‘Low’, ‘0’ and ‘False’.

- Oper** Defines the mathematical function to be applied to the inputs

 - None No operation.
 - Add Adds input one to input two.
 - Sub Subtracts input two from input one.
 - Mul Multiplies inputs one and two together.
 - Div Divides input one by input two.
- AbsDif** The difference in value between inputs one and two, ignoring sign.
- SelMax** Output = the higher of inputs one and two.

SelMin Output = the lower of inputs one and two.
- HotSwap** Input one appears as the output for as long as input one is ‘good’. If input one status is bad, input two appears as the output instead.
- SmpHld** Sample and Hold. The output follows input one, for as long as input two is high (sample). When input two goes low (hold), the output is held, at the value current when the output went low, until input two goes high again. Input two is normally a digital value (low = 0 or high = 1); when it is an analog value, then any positive non-zero value is interpreted as a high.
- Power** Output = Input one raised to the power of input two ($In1^{In2}$). For example if input one has the value 4.2, and the value of input two is 3, then output = $4.2^3 = 74.09$ (approx.).

	Sqrt	The output is the square root of input one. Input two is not used.
	Log	Log base 10: Output = $\{\text{Log}_{10} (\text{In } 1)\}$. Input two is not used.
Oper (Cont.)	Ln	Log base e: Output = $\{\text{Log}_n (\text{In}1)\}$. Input two is not used.
	Exp	Output = $e^{(\text{input one})}$. Input two is not used.
	10_x	Output = $10^{(\text{input one})}$. Input two is not used.
	Sel1	If the Select input is high, input two appears at the output; if the Select input is low, input one appears at the output.
In1(2) Mul		The scaling factor to be applied to input one (two).
Units		Allows the user to choose units for the output (see figure 79).
Resolution		Use the up and down arrows to position the decimal point as required.
Low Limit		The low limit for all inputs to the function and for the fallback value.
High Limit		The high limit for all inputs to the function and for the fallback value.
Fallback		The fallback strategy comes into play if the status of the input value is 'Bad', or if its value lies outside the range (High limit- Low limit).
	Clip Bad	The output is set to the high or low limit as appropriate; output status is set to 'Bad'.
	Clip Good	The output is set to the high or low limit as appropriate; output status is set to 'Good'.
	Fall Bad	The output is set to the fallback value (below); output status is set to 'Bad'.
	Fall Good	The output is set to the fallback value (below); output status is set to 'Good'.
	Upscale Bad	The output is set to the high limit and Status is set to 'Bad'.
	Downscale Bad	The output is set to the low limit and Status is set to 'Bad'.
Fallback value		Allows the user to enter the value to which the output is set for Fallback = Fall Good, or Fall Bad.
Select		Editable only if Oper = Select. Allows input one or input two to be selected for output.
In1		Input one value
In2		Input two value
Out		The output value resulting from the configured mathematical operation. If either input is 'Bad', or if the result is out of range, the fallback strategy is adopted.
Status		Indicates the status of the operation as 'Good' or 'Bad'. Used to flag conditions and can be used as an interlock for other operations.

Modulator Configuration

This function implements the modulation type firing modes such as fixed and variable period modulation.

Note: For the sake of completeness, all Modulator parameters are shown in the figure below. Normally, for the sake of clarity, non-relevant (shaded) parameters should be hidden using the '>Parameter Availability Settings...>Hide Parameters and Lists when Not Relevant' menu item.

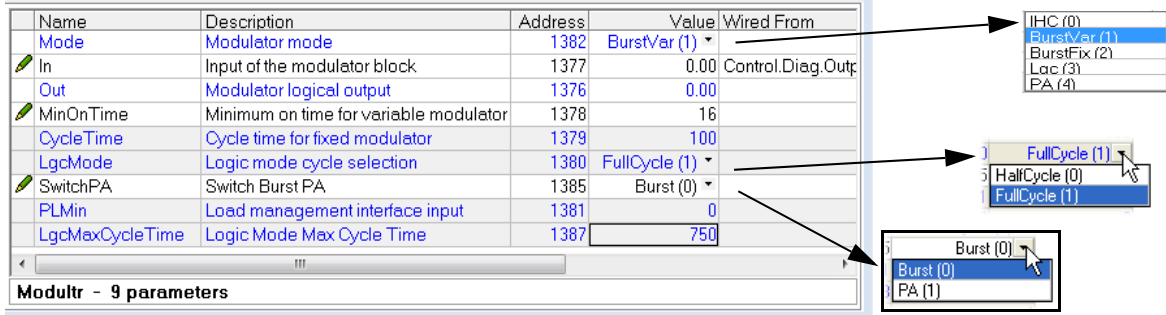


Figure 80 Modulator menu page

Modulator parameters

- Mode** Select the required firing mode from 'Logic', 'PA' (Phase angle) 'Half cycle', 'BurstVar' (Burst firing - minimum on time) or 'BurstFix' (Burst firing - cycle time).
- In** This is the value that the modulator is required to deliver.
- Out** The output logic signal controlling the power module on and off times, normally wired to the input of the firing block. For Mode = Phase angle, this is a phase angle demand.
- Min On Time** For Variable Period Modulation, this sets the minimum on time in supply voltage periods. At 50% demand from the modulator, Ton = Toff = Minimum on time, and Cycle time is 2 x Minimum on time = Modulation period. The minimum off time is equal to 'Min on time'.
- Cycle Time** For Fixed Period Modulation, this is the cycle time in supply voltage periods.
- Logic Mode** For Logic Firing Modulation, Half cycle sets firing stop to the next zero crossing; Full cycle sets firing stop at the zero crossing of the next full cycle.
- Switch PA** Allows the user to impose Phase Angle firing, overriding the configured Burst Mode as displayed in 'Mode', above.
- PLMin** Not applicable to this software release.
- LgcMaxCycleTime** Max cycle time for Logic mode. This is set in mains periods. This is the equivalent to the modulation period and it is used to compute Network electrical quantities when there is no modulation shift.

Network Configuration

This identifies the type of electrical network to be controlled, and this, in turn defines how the network's electrical measurements are presented. The configuration is divided into a number of areas:

- Meas
- Setup
- AlmDis
- AlmDet
- AlmSig
- AlmLat,
- AlmAck,
- AlmStop
- AlmRelay

Network Meas Menu

Name	Description	Address	Value
Frequency	Frequency of the line	267	0.00
Vline	Line voltage measurement	256	0.00
I	Irms of the load	257	0.00
IsqBurst	Average square value of load	258	0.00
Isq	Square value of the load cur	259	0.00
V	Vrms of the load	260	0.00
VsqBurst	Average square value of the	268	0.00
Vsq	Square value of load voltage	261	0.00
PBurst	True Power measurement in	262	0.00
P	True power measurement.	263	0.00
S	Apparent power measuremer	264	0.00
PF	Power Factor	265	0.00
Z	Load impedance	266	0.00
HSinkTemp	Heatsink 1 temperature	269	0.00

Network.Meas - 14 parameters

Figure 81 Network, Meas configuration panel

Parameters

This submenu presents power network measurements, according to the network type. All available measurements are listed below, but which values actually appear depends on the network configuration.

- Frequency** Displays the calculated frequency of the supply voltage of the power channel associated with this network.
- Vline** Displays supply line voltage.
- I** Displays load RMS current.
- IsqBurst** The time base measurement is the main period in Phase Angle, and the modulation period in Burst Mode.
Average square value of load current in burst firing. The average Isq in burst firing, the average is taken over the duration of the burst period. This is typically used for monitoring and alarming over the burst period.
- Isq** Square value of load current over the mains period in Burst and Phase Angle modes.
- V** Displays load voltage (V_{RMS}).
The time base measurement is the main period in phase angle, and the modulation period in burst mode.
- VsqBurst** Average square value of load voltage in burst firing taken over the duration of the burst period. Typically used for monitoring and alarm strategies over the burst period.
- Vsq** Square value of load voltage over the mains period in Burst and Phase Angle modes. Typically used for V^2 control.
- P Burst** Measurement of true power on the network. This is calculated over the modulation period in Burst Firing mode. Typically used for monitoring and alarm strategy.
- P** True power measurement over the mains period in Burst and Phase Angle modes. Typically used for true power control.
- S** Apparent power measurement. For phase angle firing $S=V_{line} \times I_{RMS}$; for burst firing $S=V_{RMS} \times I_{RMS}$
- PF** Calculation of power factor. Defined as Power Factor = True Power / Apparent Power. In phase angle this is $PF=P/S$; in burst firing $PF = PBurst/S = \text{Cos}\phi(\text{Load})$
- Z** Displays load impedance.

	Defined as: $Z=V_{rms}/I_{rms}$. Measurement uses line current and load voltage.
HSink Temp	Reserved for future development.

Network Setup configuration

This displays the setup of the network and associated functions.

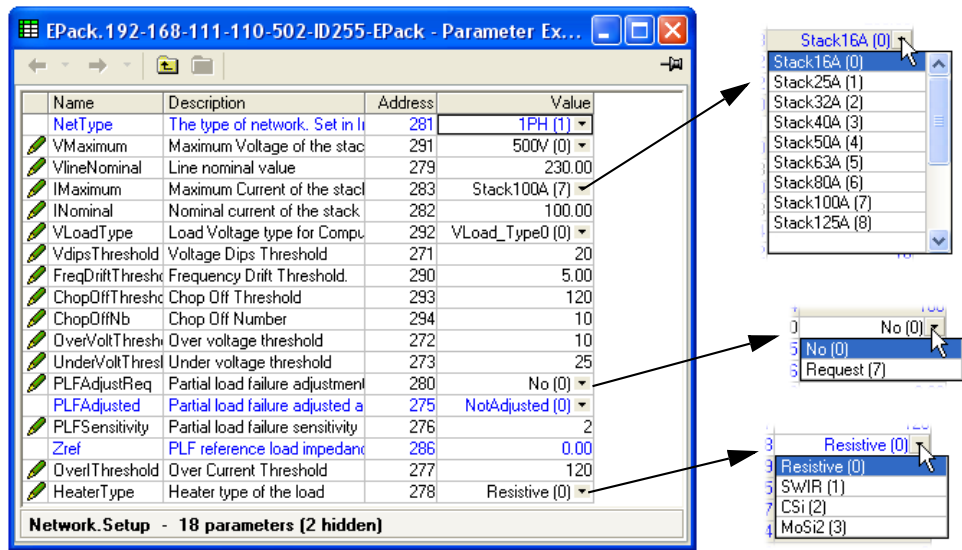


Figure 82 Network setup menu page

Parameters

- NetType** The type of network to which the unit can be connected. This is set at the factory and cannot be changed.
- VMaximum** Indicates the maximum voltage (physical rating) of the stack (500V).
- Vline Nominal** Line voltage nominal value (Line to neutral).
- IMaximum** Indicates the maximum current of the stack (16A, 25A, 40A, 63A, 100A, 125A). Further values are reserved for future development.
- INominal** Nominal current supplied to the load (limited by IMaximum).
- VLoadType** Defines the computation method for load voltage (Vload).
 0: Vload = Vline as long as I > Ithreshold (internal definition)
 1: Compute Vload using the formula $V^2_{load} = P^2 / I^2$.
 2: Vload = Vline as long as thyristor firing order
- Heatsink Tmax** Reserved for future development.
- VdipsThreshold** Voltage dips threshold. This is a percentage difference (relative to Vline Nominal) between two consecutive half cycles. Each half cycle voltage measurement is integrated and at the end of each half cycle the last two voltage integrals are compared.
- FreqDriftThold** The supply frequency is checked every half cycle, and if the percentage change between 1/2 cycles exceeds this threshold value, a Mains Frequency System Alarm is generated. The threshold may be set to a maximum of 5% to cater for the effects of heavily inductive networks.
- ChopOffThreshold** The 'Chop-off' alarm becomes active if load current exceeds this threshold for more than a pre-defined number of mains periods (Number Chop Off parameter). Threshold values lie between 100% and 350% of the unit's nominal current (INominal).

NumberChopOff	Definition of the number of mains periods in which Chop Off events can occur before a Chop Off alarm is enabled. Only used with Chop Off Threshold.
OverVoltThreshold	The threshold for detecting an over voltage condition as a percentage of VLineNominal. If Vline rises above the threshold an OverVolt alarm is set.
UnderVoltThreshold	This is the threshold for detecting an under voltage condition as a percentage of VLineNominal. If Vline falls below the threshold an UnderVolt alarm is set
Heatsink PreTemp	Reserved for future development.
PLFAdjustReq	Partial load failure adjustment request. To make the Partial Load Failure (PLF) alarm operate correctly, the normal steady-state condition must be known to the instrument. This is done by activating the PLF Adjust Req once the controlled process has achieved a steady state condition. This causes a load impedance measurement to be made which is used as a reference for detecting a partial load failure. If the load impedance measurement is successful PLFAdjusted (below) is set. The measurement cannot be made if the load voltage (V) is below 30% of (VNominal) or the current (I) is below 30% of (INominal). The PLF alarm becomes active as setup in 'PLF Sensitivity', below.
PLFAdjusted	Partial load failure adjusted acknowledge. Indicates that the user requested a PLF adjustment and that the adjustment was successful.
PLFSensitivity	Partial load failure sensitivity. This defines how sensitive the partial load failure detection is to be as the ratio between the load impedance for a PLFadjusted load and the current impedance measurement. For example for a load of N parallel, identical elements, if the PLF Sensitivity (s) is set to 2, then a PLF alarm will occur if N/2, or more elements are broken (i.e. open circuit). If PLF Sensitivity is set to 3, then a PLF alarm occurs if N/3 or more elements are broken. If (N/s) is non-integer, then the sensitivity is rounded up. E.G. if N = 6 and s= 4, then the alarm is triggered if 2 or more elements are broken.
Zref	Reference load impedance, as measured when PLF adjust is requested.
OverIThreshold	The threshold for detecting an over current condition as a percentage of INominal. If I is above the threshold a Mains Current Alarm occurs (DetoverCurrent).
HeaterType	Shows the type of heater used in the load as: 'Resistive', 'SWIR' (Short wave infra-red), 'CSi' (Silicon Carbide), 'MoSi2' (Molybdenum Disilicide).

Network Alarms

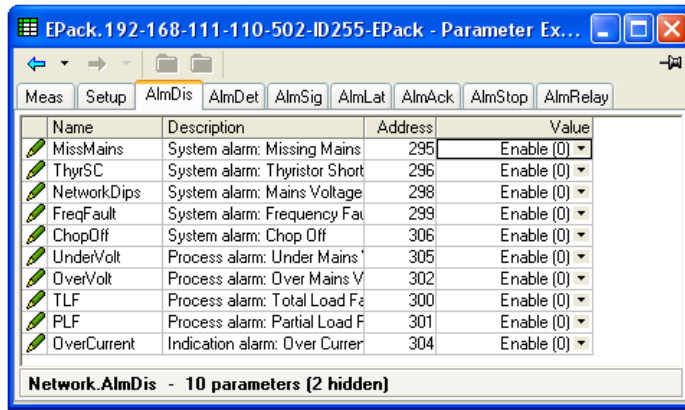


Figure 83 Network alarms page

AlmDis

This menu allows individual network block alarms (listed below) to be enabled/disabled.

- | | | |
|-------------------------------|--------------------------------|------------------------------|
| Missing Mains | Mains frequency fault detected | Total load failure |
| Thyristor short circuit | Chop Off | Partial load failure |
| Over-temperature ¹ | Under voltage | Pre-temperature ¹ |
| Mains voltage (Network) dips | Over voltage | Over current |

1.Reserved for future development

Network AlmDet Submenu

As for 'Alarm Disable', above, but this Alarm detect submenu indicates whether any of the network alarms has been detected and is currently active.

Network Almsig Submenu

These displays show whether an alarm has occurred and also contains latching information. The relevant AlarmSig parameter is used when wiring (to a relay for example). The alarm list is as given above.

Network Almlat Submenu

As for 'Alarm Disable', above, but this Alarm Latch submenu allows each individual network block alarm to be defined as latching or non-latching.

Network Almack Submenu

As for 'Alarm Disable', above, but this Alarm Acknowledge submenu allows each individual network block alarm to be acknowledged. Once acknowledged, the associated signaling parameter is cleared. Acknowledge parameters automatically clear after being written.

Note: Alarms may not be acknowledged whilst the trigger source is still active.

Network Almstop Submenu

Allows each individual alarm type to be configured to stop the related power module from firing. Activated by the related signaling parameter. The alarm list is as given above.

Network Almrelay Submenu

Allows each individual alarm to be selected to activate (or not) the relay.

Note: When utilizing Almrelay function, ensure FaultDet/CustomAlarm parameter remains wired to IO.Relay/PV.

Qcode

Quick code parameters are also settable when in Quickcode configuration mode.

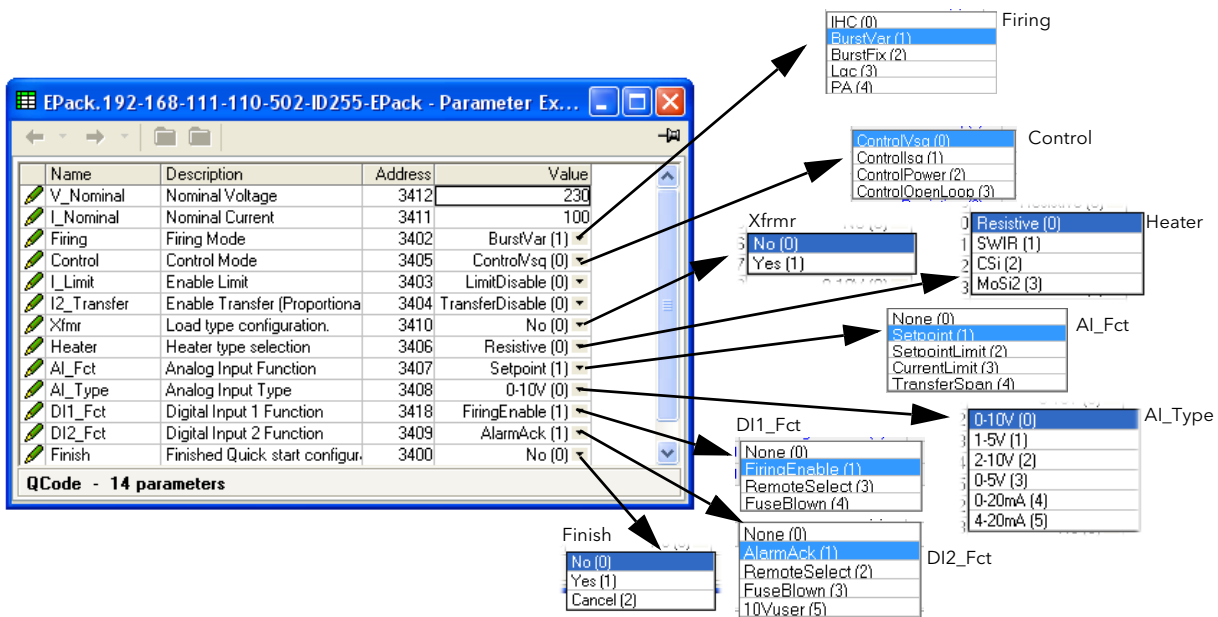


Figure 84 Quick code parameters

Parameters

- V_Nominal** The nominal output voltage to be supplied.
- I_Nominal** The nominal output current expected to be drawn.
- Firing** Select firing mode from IHC (Intelligent half cycle), Burst firing (fixed or variable), Logic or Phase angle.
- Control** Select 'Vsq' (V^2), 'Isq' (I^2), 'Power' or 'Open Loop' as the control mode.
- I_Limit** This is used to Enable or disable threshold limit. (By default the current limit function is enabled).
- I2_Transfer** Enable or disable transfer (Proportional limit). This is only available if ordered.
- XFmr** Select output as suitable for resistive loads (No) or for transformer primary loads (Yes).
- Heater** Select Resistive, Short wave infra red (SWIR), Silicon carbide (CSi) or Molybdenum disilicide (MoSi2) as the heating element type.
- AI_Fct** Select the Analog Input function as 'None', 'Setpoint' or 'Setpoint limit'.
- AI_Type** Select the required Volt or mA range (as shown above) for the analog input.
- DI1_Fct** Select the function of Digital Input 1 as 'None', 'Firing Enable', Alarm acknowledge ('AlarmAck'), Select remote setpoint ('RemoteSelect'), Fuse Blown ('Fuse Blown') or Setpoint.
- DI2_Fct** Select the function of Digital Input 2 as: 'None', Alarm acknowledge ('AlarmAck'), Select remote setpoint ('RemoteSelect') or Fuse Blown ('FuseBlown), or Setpoint, providing Firing is set too 'Logic', and AI_Type is not set too 'Setpoint'), or a configurable User Input ('10Vuser').
- Finish** Yes = quit quick code (after confirmation) and restart the unit with the new configuration; No = continue configuration editing; Cancel = ignore all changes and restart the unit with the previous (unedited) configuration.

Setprov Configuration Menu

The Setpoint provider supplies one local and two remote setpoints. It also allows users to manage a setpoint ramp, a setpoint limit (re-linearization) and the possibility to select between percentage and engineering for setpoint unit.

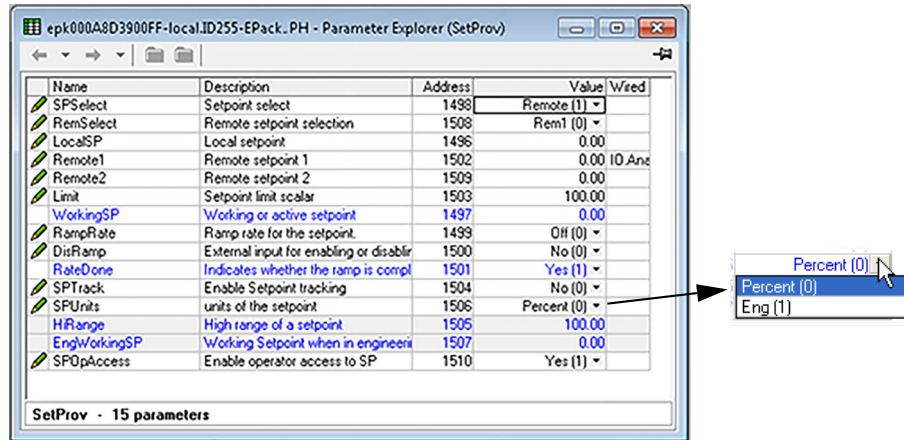


Figure 85 SetProv configuration page

Setpoint provider parameters

- SPSelect** Allows the user to select between Remote or Local as the setpoint source.
- RemSelect** Select Remote1 or Remote2 as the remote setpoint.
- LocalSP** Allows entry of a setpoint value to be used when SPSelect (above) is set to 'Local'.
- Remote1** The Remote setpoint value (normally wired from an analog input) for use when SPSelect = Remote and RemSelect = Remote1.
- Remote2** The Remote setpoint value (normally wired from an analog input) for use when SPSelect = Remote and RemSelect = Remote2.
- Limit** Allows the target setpoint to be scaled such that 'scaled target SP' = (target SP x limit)/100. Thus, when limit = 100, the setpoint is unscaled.
- WorkingSP** The active value being provided as a setpoint output. This might be the current target setpoint or the rate-limited target setpoint.
- RampRate** This applies a rate limit to the working setpoint, until the target setpoint has been achieved. The 'RateDone' parameter (below) is set to 'No' for the duration of the rate limiting, then set to 'Yes' when rate limiting is complete.
- DisRamp** This is an external control used to enable/disable ramp rate limiting and to write the target setpoint directly to the working setpoint. The 'RateDone' parameter (below) is set to 'Yes' when DisRamp is 'Yes'.
- RateDone** Set to 'No' if ramp rate limiting (above) is in operation. Otherwise set to 'Yes'.
- SPTrack** If enabled ('Yes') the local setpoint tracks the remote setpoints, so that if the setpoint is subsequently set to 'Local', the local setpoint will be the same as the last known value of the remote setpoint, thus helping to ensure a bumpless transfer.

SPOpAccess	<p>The SetPoint operational access parameter is used to allow or hide access to a local setpoint.</p> <p>Yes (1) = Enables access.</p> <p>No (0) = Disables (hides) access.</p> <p>Setpoint remains adjustable from a remote input whatever value of this parameter</p>
SPUnits	<p>Allows the user to select % or 'Eng' (Engineering units) as Setpoint units. If 'Eng' is selected, 'HiRange' and 'Eng workingSP' appear at the user interface.</p>
HiRange	<p>Appears only if SP units set to 'Eng'. This value is the high range of the setpoint used to scale the setpoint into % of High Range.</p>
EngWorkingSP	<p>Appears only if SP units set to 'Eng'. This value is an indication of the working setpoint in Engineering units. The parameter must not be used for control because control loops accept setpoints only as % values.</p>

Timer Configuration

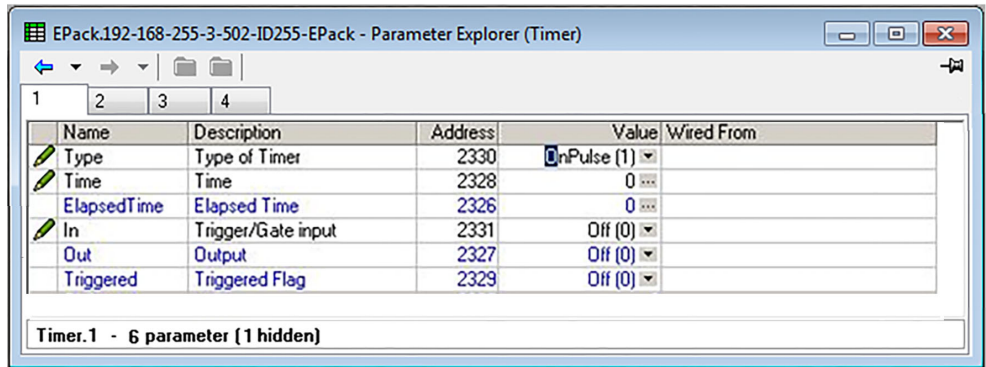


Figure 86 iTools Timer configuration

Parameters

- Type
 - Off
Timer is off
 - On Pulse
The timer output switches on when 'In' changes from Off to On, and it remains on until the time period ('Time' - see below) has elapsed. If the input is re-triggered before 'Time' has elapsed, the timer re-starts. 'Triggered' (below) follows the state of the output.
 - On delay
After the input changes from Off to On, the timer output remains off until the time period defined in 'Time' (below) has elapsed. Once this period has elapsed, if the input is still on, the output switches on and remains on until the input goes Off. Elapsed time is set to zero when the input goes off. 'Triggered' follows the state of the input.
 - One Shot
If the input is On, then as soon as a value is entered into the 'Time' parameter (below) the output goes on, and remains on until the Time period has elapsed, or the input goes off. If the input is off, the output is set off and the time countdown is inhibited until input goes on again. 'Triggered' goes On as soon as the time value is edited, and remains on until the output goes Off. The Time value may be edited whilst active. Once the time period has elapsed, the Time value must be re-edited in order to re-start the timer.
 - Min On
The output remains 'On' as long as the Input is on, plus the 'Time' period (below). If the input returns to the on state before the time period has elapsed, the elapsed time is reset to zero, so that the full time period is added to the On period when the input switches off again. 'Triggered' is On whilst the elapsed time is greater than zero.
- Time
Allows the user to set a time period for use as described in 'Type' above. Initially, the display is in the form Minutes:seconds.10ths of seconds, but as the input value increases the format changes first to Hours:Mins:Secs, then to Hrs:Mins. (Holding the up arrow key continuously operated causes the speed at which the value increments to increase. Minimum entry is 0.1 seconds; maximum is 500 hours.
- Elapsed Time
Shows how much of the time period has passed so far.
- In
The timer trigger input. The function of this input varies according to timer type, as described above.
- Out
Shows the timer on/off status.
- Triggered
Function depends on timer type, as described above.

Timer examples

Figure 87 shows some timing examples for the different types of timer available.

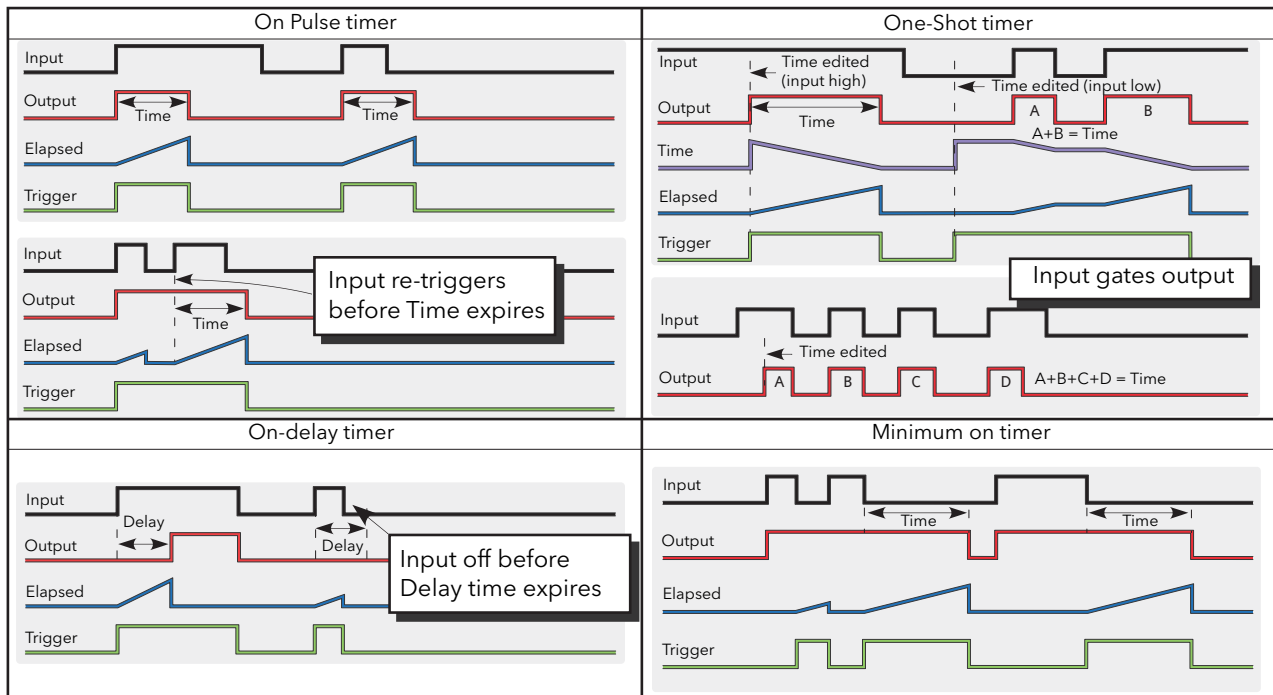


Figure 87 Timer examples

Totalizer Configuration

The totalizer is an instrument function used to calculate a total quantity by integrating a flow rate input over time. The maximum value of the totalizer is +/- 99999. The outputs from a totalizer are its integrated value, and an alarm state.

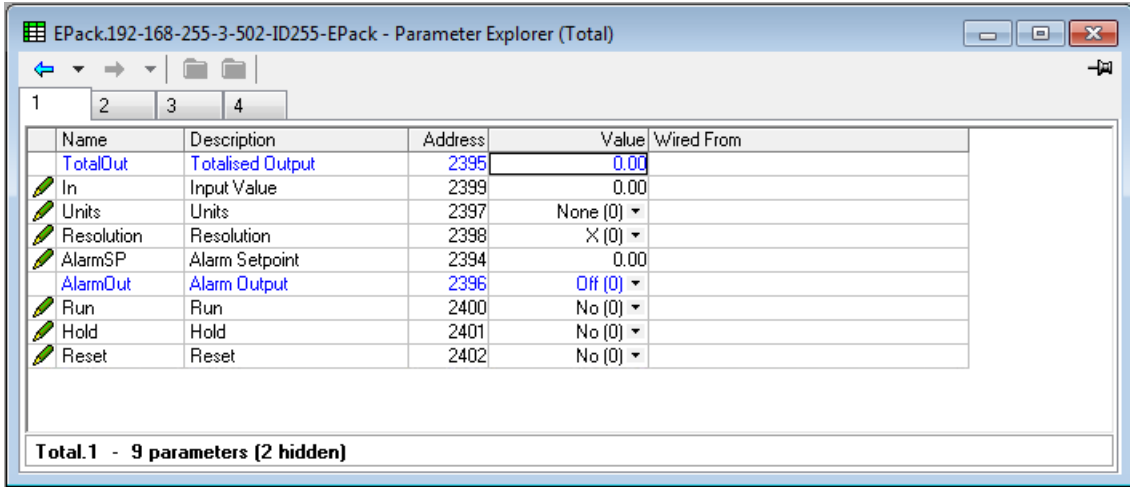


Figure 88 iTools Totalizer page

Parameters

- Total Out The integrated total between -10^{10} and $+10^{10}$ (i.e. $\pm 10,000,000,000$)
- In The parameter to be totalized.
- Units Units of the totalized measurement.
- Resolution Set the number of decimal places for the totalizer value.
- AlarmSP Totalizer alarm setpoint. This threshold is applied to the totalized measurement. When totalizing positive values, a positive AlarmSP value must be entered; the totalizer alarm being triggered when the totalizer value reaches or exceeds AlarmSP. When totalizing negative values, a negative value must be entered; the totalizer alarm being triggered when the totalizer value reaches or goes more negative than AlarmSP. If set to zero, the alarm is disabled.
- AlarmOut The on/off status of the totalizer alarm.
- Run Yes initiates integration; No inhibits integration.
- Hold Yes suspends integration; No restarts integration.
- Reset Yes resets the totalizer value to zero and resets the totalizer alarm.

User Value Configuration Menu

This provides storage for up to four user-defined constants. Typical uses are as a sources for maths functions, or as storage for values written over the communications link.

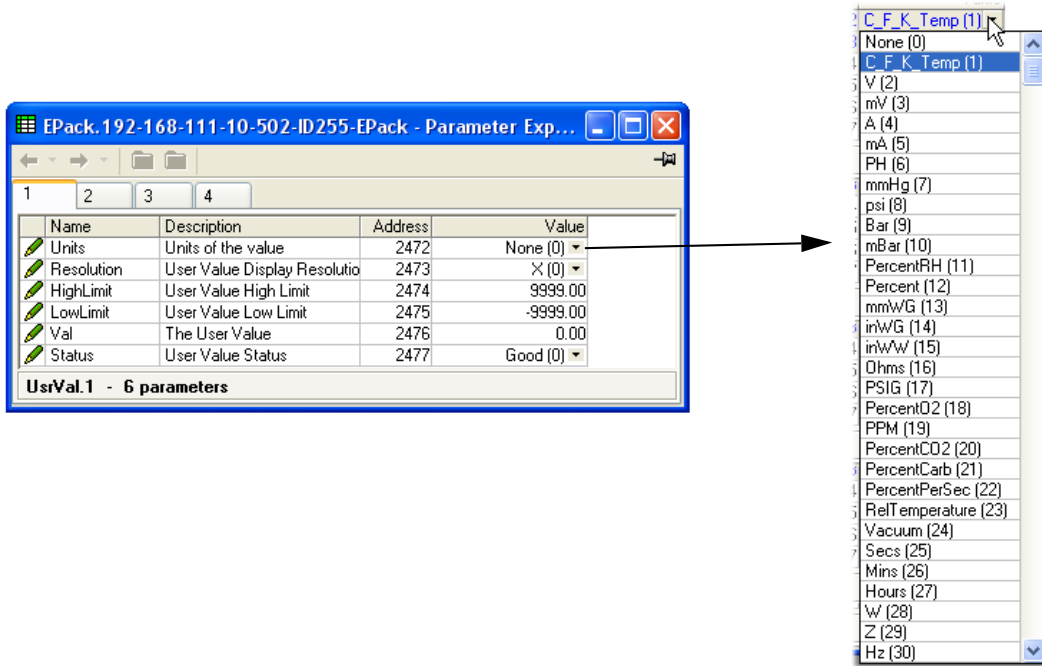


Figure 89 Top level UseVal page

User Value parameters

- Units** Allows the selection of User Value units.
- Resolution** Set the number of decimal places for the User Value.
- High/Low Limit** Allows the user to set limits to help prevent the User Value from being set out-of-bounds.
- Value** Allows the user to enter a value, or the value if wired to a suitable parameter.
- Status** If this parameter is wired, it can be used to force a Good or Bad status onto the User Value for test purposes (e.g. fallback strategy).
If not wired, it reflects the status of the Value input if this input is wired.

Using iTools

iTools software running on a PC allows quick and easy access to the configuration of the unit. The parameters used are the same as those described in "Configuration using iTools" on page 125, with the addition of various diagnostic parameters.

iTools also gives the user the ability to create software wiring between function blocks, something that is not possible from the operator interface. Such wiring is carried out using the Graphical wiring Editor feature.

In addition to the guidance given here, there are two on-line Help systems available within iTools: Parameter help and iTools help. Parameter help is accessed by clicking on 'Help' in the toolbar (opens the complete parameter help system), by right-clicking on a parameter and selecting 'Parameter Help' from the resulting context menu, or by clicking on the Help menu and selecting 'Device Help'. iTools help is accessed by clicking on the Help menu, and selecting 'Contents'. iTools help is also available in manual format under part number HA028838, either as a physical manual or as a PDF file.

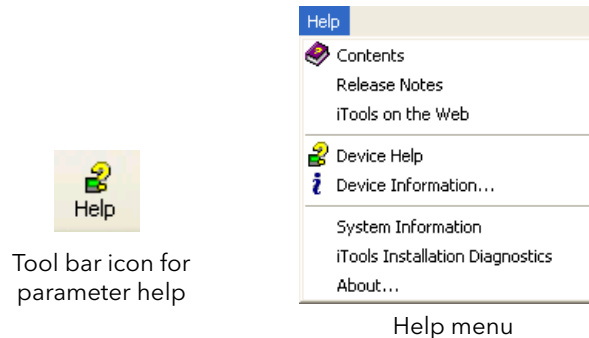


Figure 90 Help access

iTools connection

Automatic detection

The following descriptions assume that the latest version iTools software has been correctly installed on the PC.

For E-Pack units only (at time of publication), if the desktop/laptop and E-Pack are IP compatible (same subnet mask) then Plug & Play allows easy connection as follows.

1. Set correct IP mode and or IP address to the instrument and PC.
2. Launch iTools, click on the button 'Add' a popup window appears showing you all E-Pack instruments on the network.
3. Double click on one or more units to add them to iTools.

Note: 'Eurotherm discovery' mechanism is based on 'Zero Configuration Networking' which is generic name used to group protocols together in order to create communication networks automatically (Plug & Play).

Alternatively, if there is a mix of E-Pack and other instruments on the network, the following procedure can be used.

Ethernet (Modbus TCP) communications

Note: The following description is based on Windows XP. Windows 7 is similar.

It is first necessary to determine the IP address of the unit. This can be done from either the Config or Quickcode menu.

Once the Ethernet link has been correctly installed, carry out the following actions at the PC:

1. Click on 'Start'
2. Click on 'Control Panel'. (If Control Panel opens in 'Category View' select 'Classic View' instead.)
3. Double-click on 'iTools'.
4. Click on the TCP/IP tab in the Registry settings configuration.
5. Click on Add... The 'New TCP/IP Port' dialog box opens.
6. Type-in a name for the port, then click Add...
7. Type the IP address of the unit in the 'Edit Host' box which appears. Click OK.
8. Check the details in the 'New TCP/IP Port' box, then click on 'OK'.
9. Click on 'OK' in the 'Registry settings' box to confirm the new port.


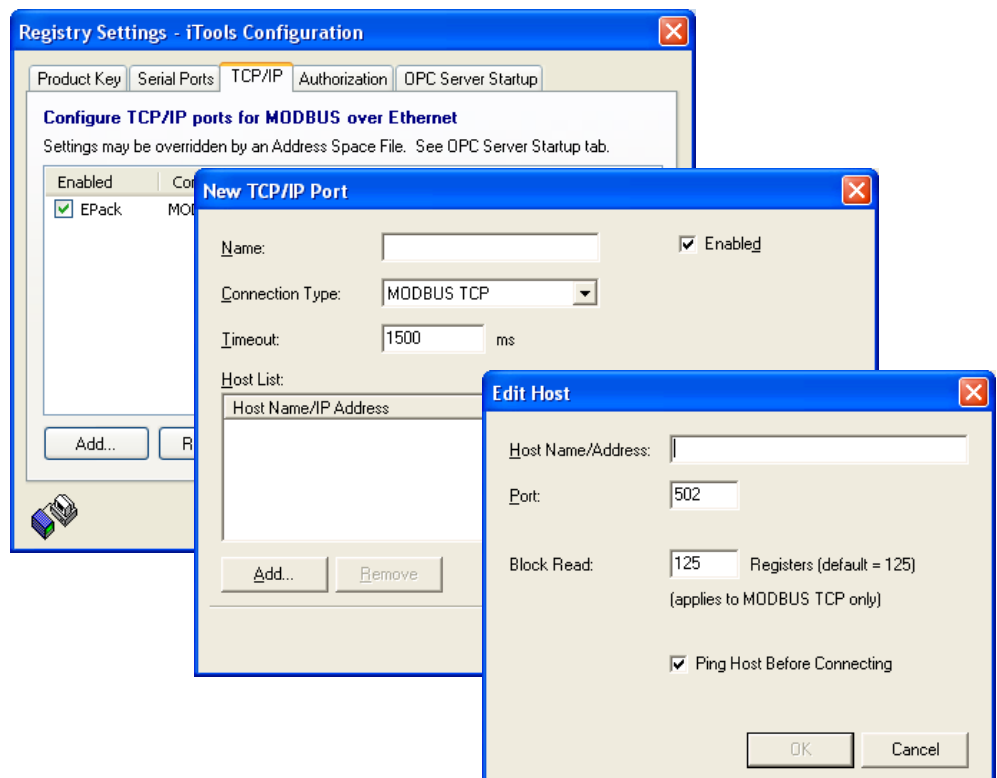


Figure 91 Adding a new Ethernet port

To check that the PC can now communicate with the instrument, Click 'Start', 'All Programs', 'Accessories', 'Command Prompt', when the Command Prompt box appears, type in : Ping<Space>IP1.IP2.IP3.IP4<Enter> (where IP1 to IP4 are the IP address of the instrument).

If the Ethernet link to the instrument is operating correctly, the 'successful' reply arrives. Otherwise, the 'Ping request could not find host' reply arrives, in which case, the Ethernet link, IP address, and PC port details should be verified.

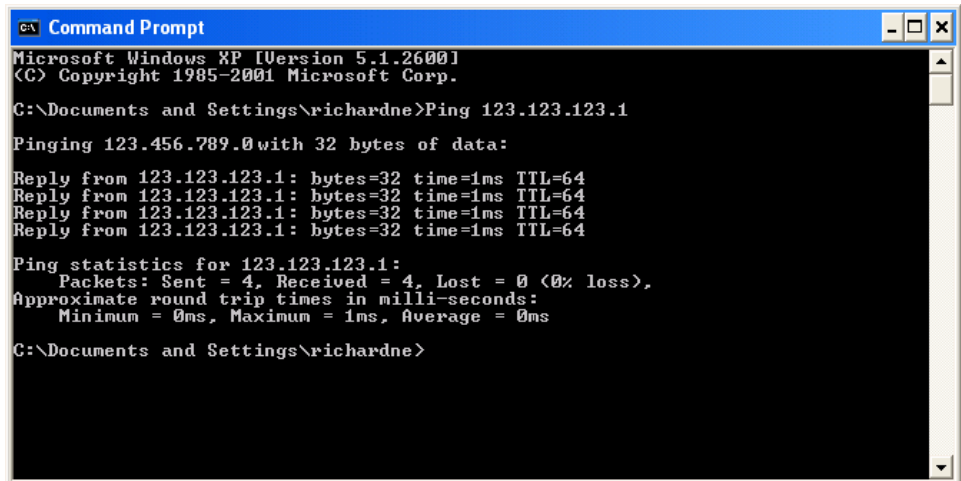

```
CA Command Prompt
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.


C:\Documents and Settings\richardne>Ping 123.123.123.1

Pinging 123.456.789.0 with 32 bytes of data:

Reply from 123.123.123.1: bytes=32 time=1ms TTL=64
Reply from 123.123.123.1: bytes=32 time=1ms TTL=64
Reply from 123.123.123.1: bytes=32 time=1ms TTL=64
Reply from 123.123.123.1: bytes=32 time=1ms TTL=64

Ping statistics for 123.123.123.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 1ms, Average = 0ms

C:\Documents and Settings\richardne>
```

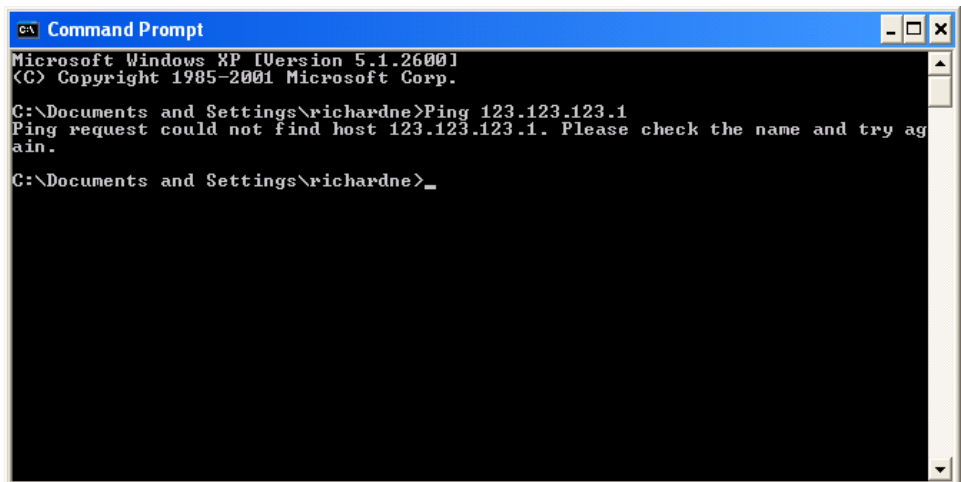

```
CA Command Prompt
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\richardne>Ping 123.123.123.1
Ping request could not find host 123.123.123.1. Please check the name and try again.

C:\Documents and Settings\richardne>_
```

Figure 92 Command prompt 'Ping' screens (typical)

Graphical Wiring Editor Graphical Wiring

Note: The Graphical Wiring Editor is a chargeable option, and the toolbar icon appears only if the option has been purchased and is enabled.

Clicking on the Graphical Wiring Editor (GWE) toolbar icon causes the Graphical wiring window for the current instrument configuration to open. Initially, this reflects the preset factory default block wiring.


 





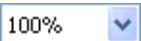




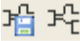

Figure 93 Graphical wiring Editor

The graphical wiring editor allows:

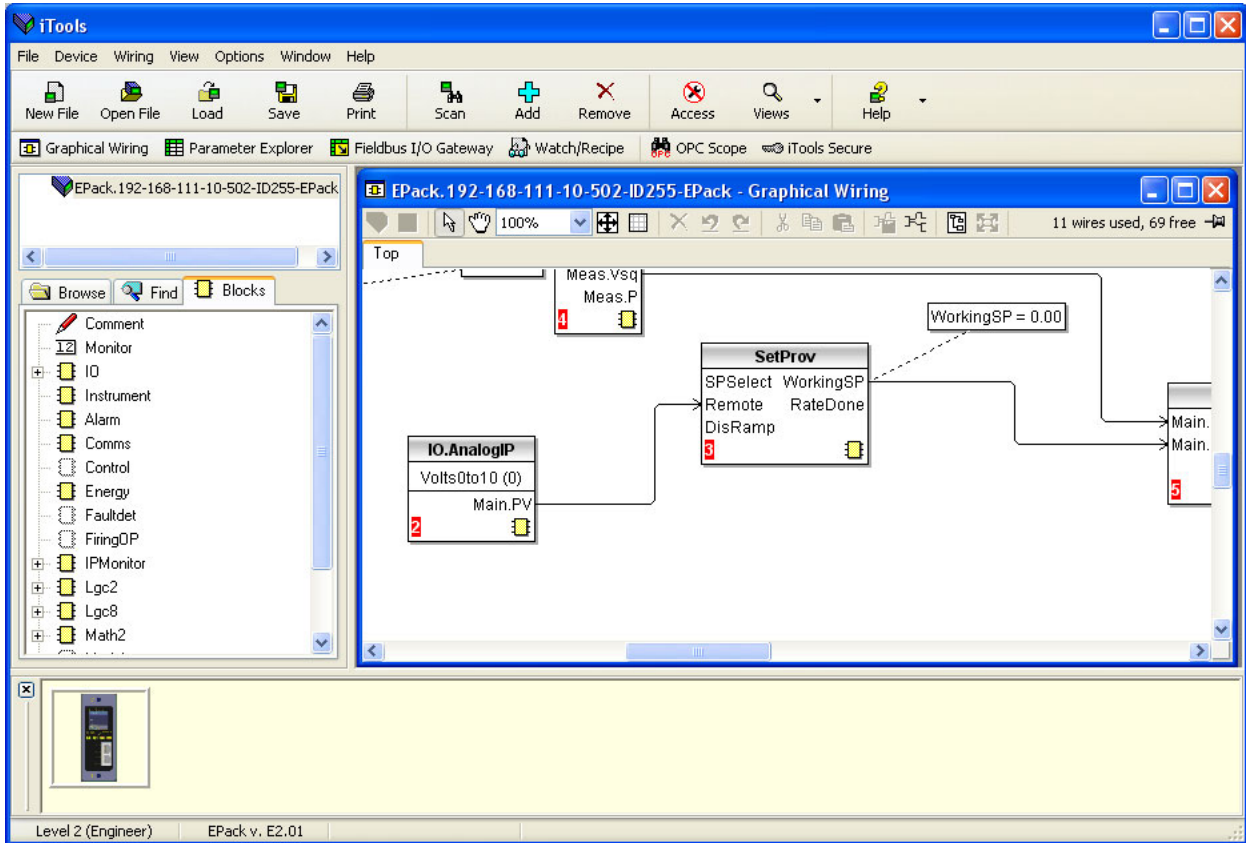1. Function blocks, notes, comments etc. to be 'dragged and dropped' into the wiring diagram from the tree list (left pane).
2. Parameters to be wired to one another by clicking on the output, the clicking on the required input.
3. Viewing and/or editing of parameter values by right-clicking on a function block and selecting 'Function Block View'.
4. The user to select parameter lists and to switch between parameter and wiring editors.
5. Completed wiring to be downloaded to the instrument (function blocks and wiring items with dashed outlines are new, or have been edited since the last download).

Toolbar

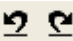

	Download wiring to Instrument.
	Mouse Select. Select normal mouse operation. Mutually exclusive with 'Pan', below.
	Mouse Pan. When active, this causes the mouse cursor to become a hand-shaped icon. Allows the graphical wiring diagram to be click-dragged within the GWE window aperture.
	Zoom. Allows the magnification of the wiring diagram to be edited.
	Pan tool. Whilst left-clicked, the cursor appears as a rectangle, representing the position of GWE window aperture over the whole wiring diagram. Click-dragging allows this aperture to be moved freely about the diagram. Rectangle size depends on Zoom (magnification) factor.
	Show/Hide grid. This icon toggles a background alignment grid on and off.
	Undo, Redo. Allows the user to undo the last action, or once an undo action has taken place, to undo the undo. Short cuts are <Ctrl>+<Z> for undo; <Ctrl>+<R> for re-do.
	Cut, Copy, Paste. Normal Cut (copy and delete), Copy (copy without delete) and Paste (insert into) functions. Short cuts are <Ctrl>+<X> for cut; <Ctrl>+<C> for copy and <Ctrl>+<V> for Paste.
	Copy diagram fragment; Paste diagram fragment. Allows a part of the wiring diagram to be selected, named and saved to file. The fragment may then be pasted into any wiring diagram, including the source diagram.
	Create compound; Flatten compound. These two icons allow compounds to be created and 'uncreated' respectively.

Wiring Editor Operating Details

Component Selection

Single wires are shown with boxes at 'corners' when selected. When more than one wire is selected, as part of a group, the wire color changes to magenta. All other items have a dashed line drawn round them when selected.

Clicking on a single item selects it. An Item can be added to the selection by holding down the control key (Ctrl) whilst clicking on the item. (A selected item can be deselected in the same way.) If a block is selected, then all its associated wires are also selected.

Alternatively, the mouse can be click-dragged on the background to create a 'rubber band' round the relevant area; anything within this area being selected when the mouse is released.

<Ctrl>+<A> selects all items on the active diagram.

Block Execution Order

The order in which the blocks are executed by the instrument depends on the way in which they are wired. The order is automatically worked out so that the blocks use the most recent data. Each block displays its place in its sequence in a colored square in the bottom left-hand corner (Figure 94).

Function Blocks

A Function Block is an algorithm which may be wired to and from other function blocks to make a control strategy. Each function block has inputs and outputs. Any parameter may be wired **from**, but only parameters that are alterable in Operator Mode may be wired **to**. A function block includes any parameters that are needed to configure or operate the algorithm. The inputs and outputs which are considered to be of most use are always shown. In most cases all of these need to be wired before the block can perform a useful task.

If a function block is not faded in the tree (left hand pane) it can be dragged onto the diagram. The block can be dragged around the diagram using the mouse.

A Maths block is shown below as an example. When block type information is alterable (as in this case) click on the box with the down arrow in it to display a dialog box allowing the value to be edited.

If it is required to wire from a parameter, which is not shown as a recommended output, click on the 'Click to Select Output' icon in the bottom right hand corner to display a full list of parameters in the block (Figure 96, below). Click on one of these to start a wire.

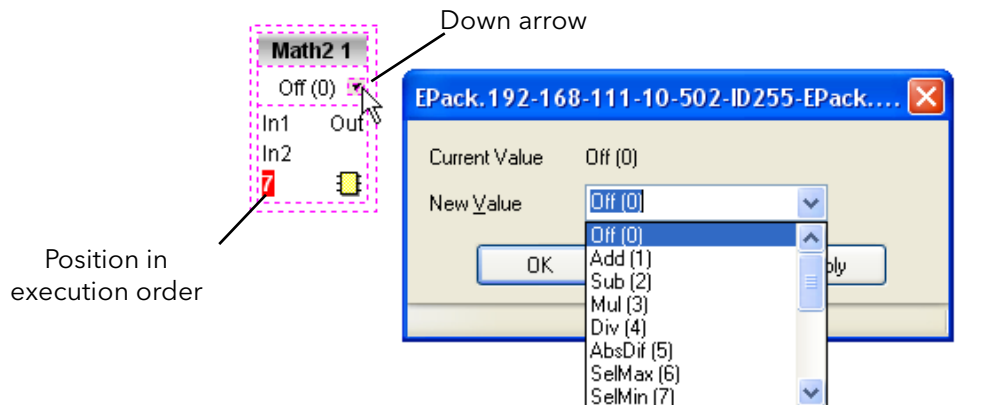


Figure 94 Function block example

Function Block Context Menu

Right-click in the function block to display the context menu.

Function block View Displays a list of parameters associated with the function block. 'Hidden' parameters can be displayed by de-selecting 'Hide Parameters and Lists when not Relevant' in the Options menu 'Parameter availability Settings...' item.


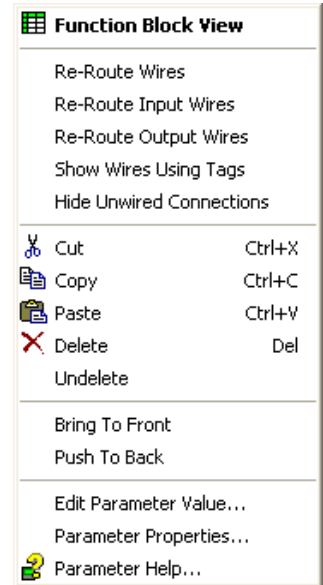


Figure 95 Function block context menu

Re-Route wires Redraws all wiring associated with the function block.
Re-Route Input wires Redraws all Input wiring associated with the function block.
Re-Route Output wires Redraws all Output wiring associated with the function block.
Show Wires Using Tags Wires are not drawn, but their Start and End destinations are indicated by tags instead. Reduces wire 'clutter' in diagrams, where source and destination are widely separated.

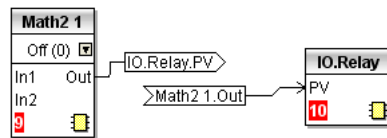


Hide Unwired Connections

Displays only those parameters which are wired.

Cut Allows one or more selected items to be moved to the Clipboard ready for pasting into another diagram or compound, or for use in a Watch window, or OPC scope. The original items are grayed out, and function blocks and wires are shown dashed until next download, after which they are removed from the diagram. Short cut = <Ctrl>+<X>. Cut operations carried out since the last download can be 'undone' by using the 'Undo' toolbar icon, by selecting 'Undelete' or by using the short cut <Ctrl>+<Z>.

- Copy** Allows one or more selected items to be copied to the Clipboard ready for pasting into another diagram or compound, or for use in a Watch window, or OPC scope. The original items remain in the current wiring diagram. Short cut = <Ctrl>+<C>. If items are pasted to the same diagram from which they were copied, the items will be replicated with different block instances. Should this result in more instances of a block than are available, a message appears showing details of which items couldn't be copied.
- Paste** Copies items from the Clipboard to the current wiring diagram. <Ctrl>+<V>. If items are pasted to the same diagram from which they were copied, the items will be replicated with different block instances. Should this result in more instances of a block than are available, a Paste message log display appears showing details of which items couldn't be copied.

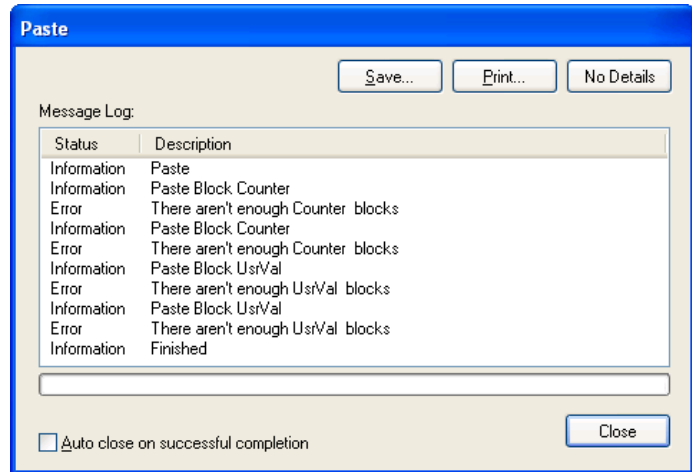

- Delete** Marks all selected items for deletion. Such items are shown dashed until next download, after which they are removed from the diagram. Short cut = .
- Undelete** Reverses 'Delete' and 'Cut' operations carried out on selected item(s) since the last download.
- Bring To Front** Brings selected items to the front of the diagram.
- Push To back** Sends the selected items to the back of the diagram.
- Edit Parameter Value...** This menu item is active if the cursor is hovering over an editable parameter. Selecting this menu item causes a pop-up window to appear, which allows the user to edit the parameter value.
- Parameter Properties...** This menu item is active if the cursor is hovering over an editable parameter. Selecting this menu item causes a pop-up window to appear, which allows the user to view the parameter properties, and also, to view the parameter Help (by clicking on the 'Help' tab).
- Parameter Help...** Produces Parameter Properties and Help information for the selected function block or parameter, depending on the hover position of the cursor, when the right-click occurs.

Wires

To make a wire

1. Drag two (or more) blocks onto the diagram from the function block tree.
2. Start a wire by either clicking on a recommended output or clicking on the 'Click to Select output' icon at the bottom right corner of the block to bring up the connection dialog, and clicking on the required parameter.
Recommended connections are shown with a green plug symbol; other parameters which are available being shown in yellow. Clicking on the red button causes all parameters to be shown. To dismiss the connection dialog either press the escape key on the keyboard, or click the cross at the bottom left of the dialog box.
3. Once the wire has started a dashed wire is drawn from the output to the current mouse position. To complete the wire click on the required destination parameter.
4. Wires remain dashed until they are downloaded

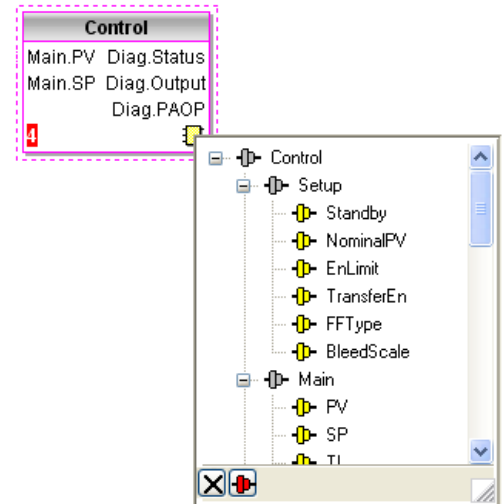


Figure 96 Output selection dialog box



Routing Wires

When a wire is placed it is auto-routed. The auto routing algorithm searches for a clear path between the two blocks. A wire can be auto-routed again using the context menus or by double clicking the wire. A wire segment can be edited manually by click-dragging. If the block to which it is connected is moved, the end of the wire moves with it, retaining as much of the path as possible.

If a wire is selected by clicking on it, it is drawn with small boxes on its corners.

Wire Context Menu

Right click on a wire to display the wire block context menu:

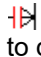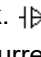Force Exec Break	When wires form a loop, a break point must be introduced, where the value written to the block comes from a source which was last executed during the previous cycle. A break is automatically placed by iTools, and appears in red.  Force Exec Break allows the user to define where a break must be placed. Surplus breaks appear in black. 
Re-Route wire	Replaces the current wire route with a new route generated from scratch.
Use Tags	Toggles between wire and tag mode between parameters. Tag mode is useful for sources and destinations which are widely separated.
Find Start	Goes to the source of the wire.
Find End	Goes to the destination of the wire.
Cut, Copy, Paste	Not used in this context.
Delete	Marks the wire for deletion. The wire is redrawn as a dashed line (or dashed tags) until next download. Operation can be reversed until after next download.
Undelete	Reverses the effect of the Delete operation up until the next download, after which, Undelete is disabled.
Bring to Front	Brings the wire to the front of the diagram.
Push to Back	Sends the wire to the back of the diagram.

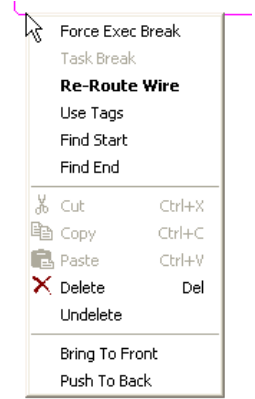


Figure 97 Wire context menu

Wire Colors

Black	Normal functioning wire
Red	The wire is connected to a non-changeable parameter. Values are rejected by the destination block.
Magenta	A normal functioning wire is being hovered-over by the mouse cursor.
Purple	A red wire is being hovered-over by the mouse cursor.
Green	New Wire (dashed green wire changes to solid black after being downloaded.)

Thick Wires

When attempting to wire between blocks which are located in different tasks, if no task break is inserted, then all the affected wires are highlighted by being drawn with a much thicker line than usual. Thick wires still execute, but the results are unpredictable, as the unit cannot resolve the strategy.

Comments

Comments are added to a wiring diagram by click-dragging them from the Function Block tree onto the diagram. As soon as the mouse is released, a dialog box opens to allow comment text to be entered.

Carriage returns are used to control the width of the comment. Once text entry is complete, 'OK' causes the comment to appear on the diagram. There are no restrictions on the size of a comment. Comments are saved to the instrument along with the diagram layout information.

Comments can be linked to function blocks and wires by clicking on the chain icon at the bottom right-hand corner of the comment box and then clicking again on the required block or wire. A dashed line is drawn to the top of the block or to the selected wire segment (Figure 99).

Note: Once the comment has been linked, the Chain icon disappears. It re-appears when the mouse cursor is hovered over the bottom right-hand corner of the comment box, see Figure 99.

Comment Context Menu

Edit	Opens the Comment dialog box to allow the comment text to be edited.
Unlink	Deletes the current link from the comment.
Cut	Moves the comment to the Clipboard, ready to be pasted elsewhere. Short cut = <Ctrl>+<X>.
Copy	Copies the comment from the wiring diagram to the Clipboard, ready to be pasted elsewhere. Short cut = <Ctrl>+<C>.
Paste	Copies a comment from the Clipboard to the wiring diagram. Short cut = <Ctrl>+<V>.
Delete	Marks the comment for deletion at next download.
Undelete	Undoes the Delete command if download has not taken place since.

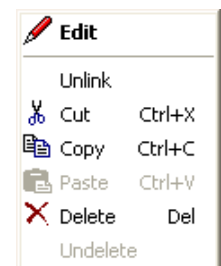


Figure 98 Comment context menu

Monitors

Monitor points are added to a wiring diagram by click-dragging them from the Function Block tree onto the diagram. A monitor shows the current value (updated at the iTools parameter list update rate) of the parameter to which it is linked. By default the name of the parameter is shown. To hide the parameter name either double click on the monitor box or 'Show Names' in the context (right-click) menu can be used to toggle the parameter name on and off.

Monitors are linked to function blocks and wires by clicking on the chain icon at the bottom right-hand corner of the box and then clicking again on the required parameter. A dashed line is drawn to the top of the block or the selected wire segment.

Note: Once the monitor has been linked, the Chain icon disappears. It re-appears when the mouse cursor is hovered over the bottom right-hand corner of the monitor box

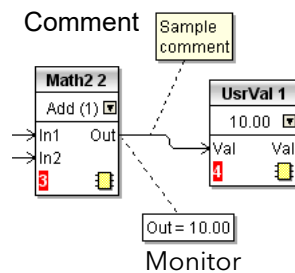


Figure 99 Comment and Monitor appearance

Monitor Context Menu

Show names	Toggles parameter names on and off in the monitor box.
Unlink	Deletes the current link from the monitor.
Cut	Moves the monitor to the Clipboard, ready to be pasted elsewhere. Short cut = <Ctrl>+<X>.
Copy	Copies the monitor from the wiring diagram to the Clipboard, ready to be pasted elsewhere. Short cut = <Ctrl>+<C>.
Paste	Copies a monitor from the Clipboard to the wiring diagram. Short cut = <Ctrl>+<V>.
Delete	Marks the monitor for deletion at next download.
Undelete	Undoes the Delete command if download has not taken place since.
Bring to Front	Moves the item to the 'top' layer of the diagram.
Push to Back	Moves the item to the 'bottom' layer of the diagram.
Parameter Help	Shows parameter help for the item.

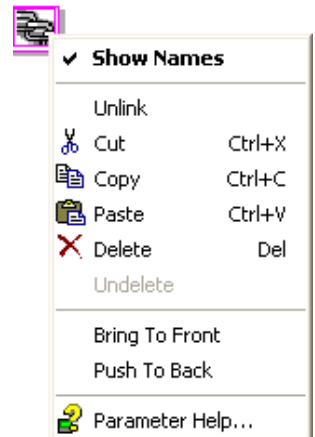


Figure 100 Monitor context menu

Downloading

When the wiring editor is opened the current wiring and diagram layout is read from the instrument. No changes are made to the instrument function block execution or wiring until the download button is pressed. Any changes made using the operator interface after the editor is opened are lost on download.

When a block is dropped onto the diagram, instrument parameters are changed to make the parameters for that block available. If changes are made and the editor is closed without saving them there is a delay while the editor clears these parameters.

During download, the wiring is written to the instrument which then calculates the block execution order and starts executing the blocks. The diagram layout including comments and monitors is then written into instrument flash memory along with the current editor settings. When the editor is reopened, the diagram is shown positioned as it was when it was last downloaded.

Colors

Items on the diagram are colored as follows:

Red	Items which totally or partially obscure other items and items which are totally or partially obscured by other items. Wires that are connected to unalterable or non-available parameters. Execution breaks. Block execution orders for Task 1.
Blue	Non-available parameters in function blocks. Block execution orders for Task 4. Task breaks.
Green	Items added to the diagram since last download are shown as green dashed lines. Block execution orders for Task 2.
Magenta	All selected items, or any item over which the cursor is hovering.
Purple	Red wires when being hovered over by the mouse cursor.
Black	All items added to the diagram before the last download. Block execution orders for Task 3. Redundant execution breaks. Monitor and comment text.

Diagram Context Menu

Cut	Active only when the right click occurs within the bounding rectangle which appears when more than one item is selected. Moves the selection off the diagram to the Clipboard. Short cut = <Ctrl>+<X>.
Copy	As for 'Cut', but the selection is copied, leaving the original on the diagram. Short cut = <Ctrl>+<C>.
Paste	Copies the contents of the Clipboard to the diagram. Short cut = <Ctrl>+<V>.
Re-Route wires	Reroutes all selected wires. If no wires are selected, all wires are re-routed.
Align Tops	Aligns the tops of all blocks in the selected area.
Align Lefts	Aligns the left edges of all blocks in the selected area.
Space Evenly	Spaces selected items such that their top left corners are spaced evenly across the width of the diagram. Click on the item which is to be the left-most item, then <Ctrl>+<left click> the remaining items in the order in which they are to appear.
Delete	Marks the item for deletion at next download time. Can be 'Undeleted' up until download occurs.
Undelete	Reverses the action of 'Delete' on the selected item.
Select All	Selects all items on the current diagram.
Create Compound	Active only when the right click occurs, in the top level diagram, within the bounding rectangle which appears when more than one item is selected. Creates a new wiring diagram as described in 'Compound', below.
Rename	Allows a new name to entered for the current wiring diagram. This name appears in the relevant tab.
Copy Graphic	Copies the selected items (or the whole diagram if no items are selected) to the clipboard as a Windows metafile, suitable for pasting into a documentation application. Wiring entering/leaving the selection (if any) are drawn in tag mode.
Save Graphic...	As for 'Copy Graphic' above, but saves to a user-specified file location instead of the clipboard.
Copy Fragment To File...	Copies selected items to a user-named file in folder 'My iTools Wiring Fragments' located in 'My Documents'.
Paste Fragment From File	

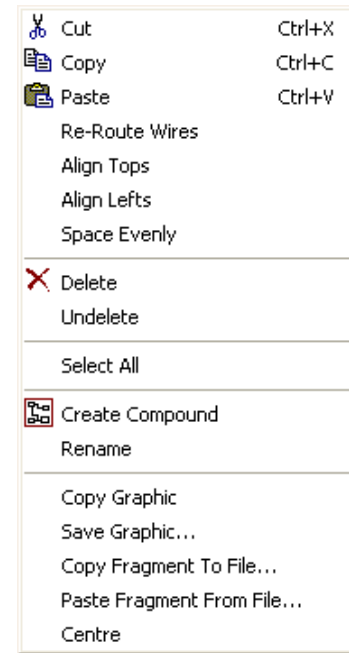


Figure 101 Diagram context menu

	Allows the user to select a stored fragment for inclusion in the wiring diagram.
Centre	Places the display window at the centre of the selected items. If 'Select All' has previously been clicked-on, then the display widow is placed over the centre of the diagram.

Compounds

Compounds are used to simplify the top level wiring diagram, by allowing the placing of any number of function blocks within one 'box', the inputs and outputs of which operate in the same way as those of a normal function block.

Each time a compound is created, a new tab appears at the top of the wiring diagram. Initially compounds and their tabs are named 'Compound 1', 'Compound 2', etc. but they can be renamed by right clicking either on the compound in the top level diagram, or anywhere within an open Compound, selecting 'Rename' and typing in the required text string (16 characters max.).

Compounds cannot contain other compounds (i.e. they can be created only in the top level diagram).

Compound creation

1. Empty compounds are created within the top level diagram by clicking on the 'Create Compound' toolbar icon.
2. Compounds can also be created by highlighting one or more function blocks in the top level diagram and then clicking on the 'Create Compound' toolbar icon. The highlighted items are moved from the top level diagram into a new compound.
3. Compounds are 'uncreated' (flattened), by highlighting the relevant item in the top level menu and then clicking on the 'Flatten Compound' toolbar icon. All the items previously contained within the compound appear on the top level diagram.
4. Wiring between top level and compound parameters is carried out by clicking on the source parameter, then clicking on the compound (or the compound tab) and then clicking on the destination parameter. Wiring from a compound parameter to a top level parameter or from compound to compound is carried out in similar manner.
5. Unused function blocks can be moved into compounds by dragging from the tree view. Existing blocks can be dragged from the top level diagram, or from another compound, onto the tab associated with the destination compound. Blocks are moved out of compounds to the top level diagram or to another compound in a similar way. Function blocks can also be 'cut and pasted'.
6. Default compound names (e.g. 'Compound 2') are used only once, so that if, for example, Compounds 1 and 2 have been created, and Compound 2 is subsequently deleted, then the next compound to be created will be named 'Compound 3'.
7. Top level elements can be click-dragged into compounds.



Tool Tips

Hovering the cursor over the block displays 'tooltips' describing that part of the block beneath the cursor. For function block parameters the tooltip shows the parameter description, its OPC name, and, if downloaded, its value. Similar tooltips are shown when hovering over inputs, outputs and over many other items on the iTools screen.

A Function Block is enabled by dragging the block onto the diagram, wiring it, and finally downloading it to the instrument. Initially blocks and associated wires are drawn with dashed lines, and when in this state the parameter list for the block is enabled but the block is not executed by the instrument.


The block is added to the instrument function block execution list when the 'Download' icon is operated and the items are redrawn using solid lines.

If a block which has been downloaded is deleted, it is shown on the diagram in a ghosted form until the download button is pressed. (This is because it and any wires to/from it are still being executed in the instrument. On download it will be removed from the instrument execution list and the diagram.) A ghosted block can be 'undeleted' as described in 'Context menu', above.

When a dashed block is deleted it is removed immediately.

Parameter Explorer

This view is displayed:

1. by clicking on the 'Parameter Explorer' toolbar icon,  Parameter Explorer
2. by double clicking on the relevant block in the tree pane or in the Graphical Wiring Editor
3. by selecting 'Function Block View' from the Function block context menu in the Graphical Wiring Editor.
4. by selecting 'parameter Explorer' from the 'View' menu
5. by using the short cut <Alt>+<Enter>

In each case the function block parameters appear in the iTools window in tabular form, such as the example in Figure 102.

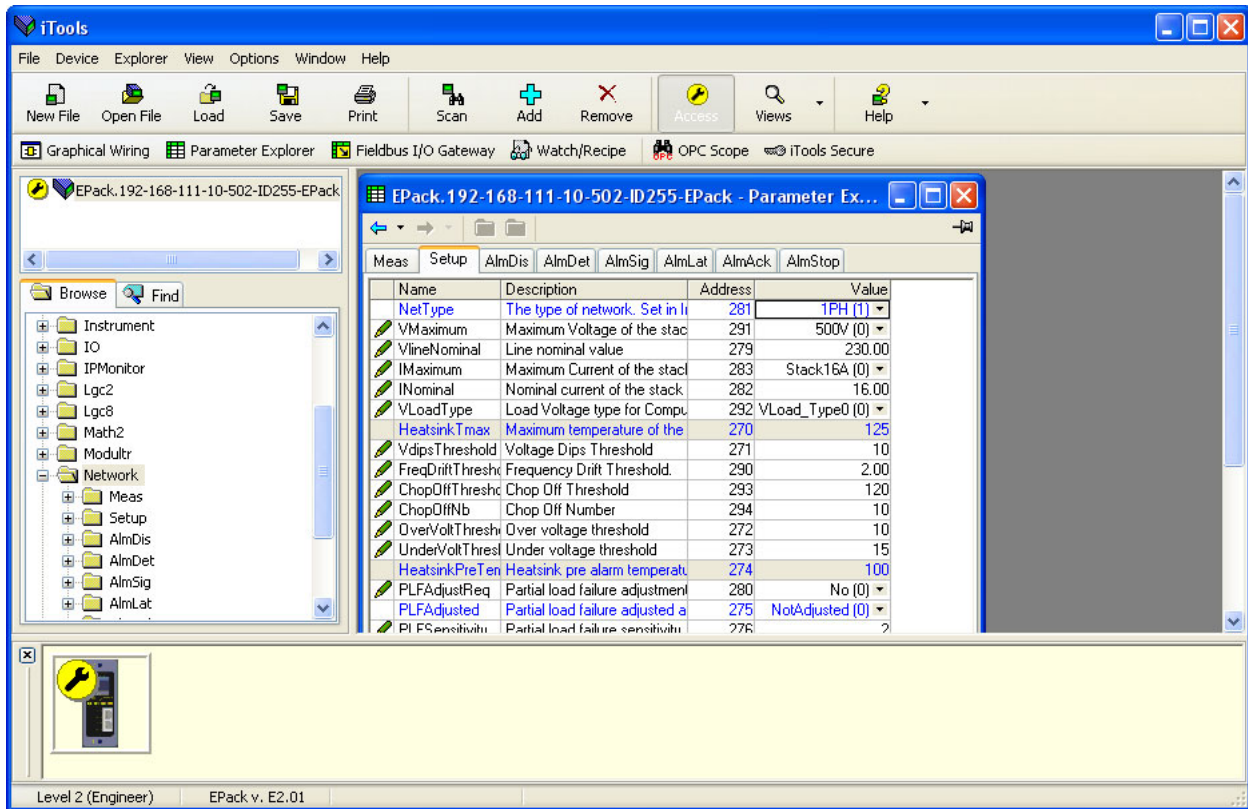


Figure 102 Parameter table example

The figure above shows the default table layout. Columns can be added/deleted from the view using the 'Columns' item of the Explorer or context menus (Figure 103).

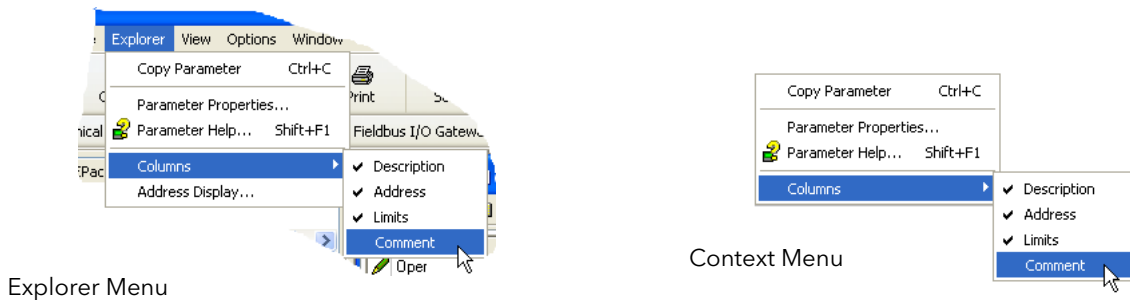


Figure 103 Column enable/disable

Parameter Explorer Detail

Figure 104 shows a typical parameter table. This particular parameter has a number of subfolders associated with it, and each of these is represented by a 'tab' across the top of the table.

Name	Description	Address	Value	Low Limit	High Limit
Frequency	Frequency of the line	267	0.00	-10000000000.00	10000000000.00
Vline	Line voltage measurement	256	0.00	-10000000000.00	10000000000.00
I	Irms of the load	257	0.00	-10000000000.00	10000000000.00
IsqBurst	Average square value of load	258	0.00	-10000000000.00	10000000000.00
Isq	Square value of the load cur	259	0.00	-10000000000.00	10000000000.00
V	Vrms of the load	260	0.00	-10000000000.00	10000000000.00
VsqBurst	Average square value of the	268	0.00	-10000000000.00	10000000000.00
Vsq	Square value of load voltage	261	0.00	-10000000000.00	10000000000.00
PBurst	True Power measurement in	262	0.00	-10000000000.00	10000000000.00
P	True power measurement.	263	0.00	-10000000000.00	10000000000.00
S	Apparent power measuremer	264	0.00	-10000000000.00	10000000000.00
PF	Power Factor	265	0.00	-10000000000.00	10000000000.00
Z	Load impedance	266	0.00	-10000000000.00	10000000000.00
HtSink Temp	Heatsink 1 temperature	269	0.00	-10000000000.00	10000000000.00

Network.Meas - 14 parameters

Figure 104 Typical parameter table

Notes:

- Parameters in blue are non-editable (Read only). In the example above all the parameters are read only. Read/write parameters are in black and have a 'pencil' symbol in the 'read/Write access column at the left edge of the table. A number of such items are shown in Figure 102, above.
- Columns. The default explorer window (Figure 102) contains the columns 'Name', 'Description', 'Address' and 'Value'. As can be seen from Figure 105, above, the columns to be displayed can be selected, to a certain extent, using either the 'Explorer' menu or the context menu. 'Limits' have been enabled for the example above.
- Hidden Parameters. By default, iTools hides parameters which are considered irrelevant in the current context. Such hidden parameters can be shown in the table using the 'Parameter availability' settings item of the options menu (Figure 105). Such items are displayed with a shaded background.
- The full pathname for the displayed parameter list is shown at the bottom left hand corner of the window.

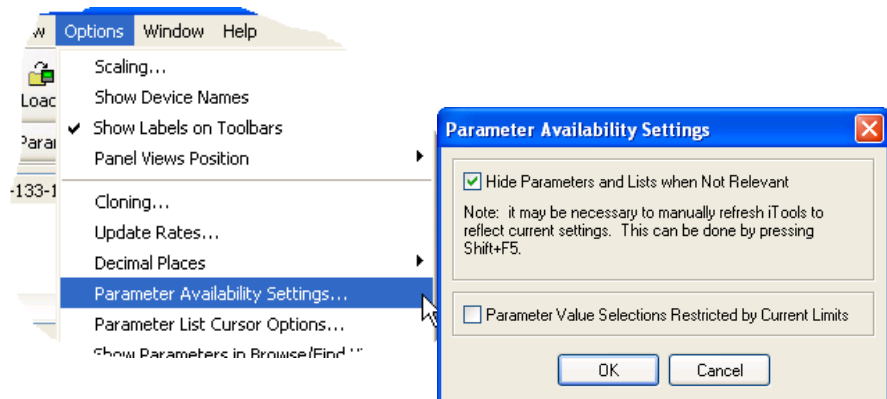







Figure 105 Show/Hide parameters

Explorer Tools

A number of tool icons appear above the parameter list:

-  Back to: and Forward to:
The parameter explorer contains a history buffer of up to 10 lists that have been browsed in the current instance of the window. The 'Back to: (list name)' and 'Forward to: (list name)' icons allow easy retracing or repeating of the parameter list view sequence. If the mouse cursor is hovered over the tool icon, the name of the parameter list which will appear if the icon is clicked-on appears. Clicking on the arrow head displays a pick list of up to 10 previously visited lists which the user can select. Short cut = <Ctrl>+ for 'Back to' or <Ctrl>+<F> for 'Forward to'.
-  Go Up a Level, Go Down a Level. For nested parameters, these buttons allow the user to navigate 'vertically' between levels. Short cut = <Ctrl>+<U> for 'Go Up a Level' or <Ctrl>+<D> for 'Go Down a Level'.
-  Push pin to give the window global scope. Clicking on this icon causes the current parameter list to be permanently displayed, even if another instrument becomes the 'current device'.
- 

Context Menu

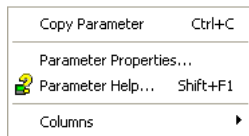

- | | |
|----------------------|--|
| Copy Parameter | Copies the clicked-on parameter to the clipboard |
| Parameter properties | Displays parameter properties for the clicked-on parameter |
| Parameter Help... | Displays help information for the clicked-on parameter |

Watch/Recipe Editor Watch/Recipe

The watch/recipe editor is opened by clicking on the Watch/Recipe tool icon, by selecting 'Watch/Recipe' in the 'Views' menu or by using the short cut <Ctrl>+<A>. The window is in two parts: the left part containing the watch list; the right-hand part containing one or more data sets, initially empty and unnamed.

The Watch/Recipe window is used:

1. To monitor a list of parameters. This list can contain parameters from many different, and otherwise unrelated parameter lists within the same device. It cannot contain parameters from different devices.
2. To create 'data sets' of parameter values which can be selected and downloaded to the device in the sequence defined in the recipe. The same parameter may be used more than once in a recipe.

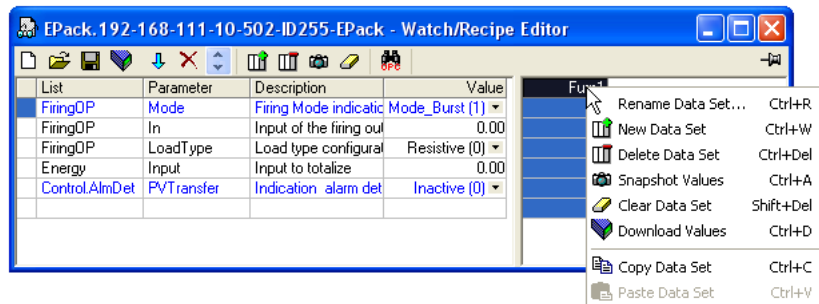



Figure 106 Watch/Recipe Editor window (with context menu)

Creating a Watch List


After opening the window, parameters can be added to it as described below. The values of the parameters update in real-time, allowing the user to monitor a number of values simultaneously.

Adding Parameters to the Watch List

1. Parameters can be click-dragged into the watch list from another area of the iTools window (for example, the parameter explorer window, the graphical wiring editor, the browse tree). The parameter is placed either in an empty row at the bottom of the list, or if it is dragged on top of an already existing parameter, it is inserted above this parameter, with the remaining parameters being moved down one place.
2. Parameters can be dragged from one position in the list to another. In such a case, a copy of the parameter is produced, the source parameter remaining in its original position.
3. Parameters can be copied <Ctrl>+<C> and pasted <Ctrl>+<V> either within the list, or from a source external to it, for example the parameter browse window or the Graphical Wiring Editor.
4. The 'Insert item...' tool button  the 'Insert Parameter' item in the Recipe or context menu or the short cut <Insert> can be used to open a browse window from which a parameter is selected for insertion above the currently selected parameter.

Data Set Creation


Once all the required parameters have been added to the list, select the empty data set by clicking on the column header. Fill the data set with current values using one of the following methods:

1. Clicking on the 'Capture current values into a data set' tool icon  (also known as the 'Snapshot Values' tool).
2. Selecting 'Snapshot Values' from the Recipe or Context (right-click) menu.
3. Using the short cut <Ctrl>+<A>.


Individual data values can now be edited by typing directly into the grid cells. Data values can be left blank or cleared, in which case, no values will be written for those parameters at download. Data values are cleared by deleting all the characters in the cell then either moving to a different cell or typing <Enter>.

The set is called 'Set 1' by default, but it can be renamed by either by using the 'Rename data set...' item in the Recipe or context menus, or by using the short cut <Ctrl>+<R>.













New, empty data sets can be added using one of the following:

1. Clicking on the 'Create a new empty data set' toolbar icon. 
2. Selecting 'New Data Set' in the Recipe or context menus
3. Using the short cut <Ctrl>+<W>

Once created, the data sets are edited as described above.

Finally, once all the required data sets have been created, edited and saved, they can be downloaded the instrument, one at a time, using the Download tool, the 'Download Values' item in the Recipe or context menus, or the short cut <Ctrl>+<D>. 

Watch Recipe Toolbar Icons

-  Create a new watch/recipe list. Creates a new list by clearing out all parameters and data sets from an open window. If the current list has not been saved, confirmation is requested. Short cut <Ctrl>+<N>
-  Open an existing watch/recipe file. If the current list or data set has not been saved, confirmation is requested. A file dialog box then opens allowing the user to select a file to be opened. Short cut <Ctrl>+<O>
-  Save the current watch/recipe list. Allows the current set to be saved to a user specified location. Short cut <Ctrl>+<S>.
-  Download the selected data set to the device. Short cut <Ctrl>+<D>
-  Insert item ahead of selected item. Short cut <Insert>.
-  Remove recipe parameter. Short cut <Ctrl>+<Delete>.
-  Move selected item. Up arrow moves selected parameter up the list; down arrow move the selected parameter down the list.
-  Create a new empty data set. Short cut <Ctrl>+<W>.
-  Delete an empty data set. Short cut <Ctrl>+<Delete>
-  Capture current values into a data set. Fills the selected data set with values. Short cut <Ctrl>+<A>.
-  Clear the selected data set. Removes values from the selected data set. Short cut <Shift>+<Delete>.
-  Open OPC Scope. Opens a separate utility that allows trending, data logging and Dynamic Data Exchange (DDE). OPC Scope is an OPC explorer program that can connect to any OPC server that is in the windows registry. (OPC is an acronym for 'OLE for Process Control, where OLE stands for 'Object Linking and Embedding'.)

Watch/Recipe Context Menu

The Watch/Recipe Context menu items have the same functions as described above for toolbar items.

Parameter Addresses (Modbus)

Introduction

The iTools address fields display each parameter's Modbus address to be used when addressing integer values over the serial communications link. In order to access these values as IEEE floating point values, the calculation: IEEE address = {(Modbus address x 2) + hex 8000} should be used.

Notes:

1. Certain parameters may have values which exceed the maximum value that can be read from or written to using a 16-bit integer communications. Such parameters have a scaling factor applied to them as described in Parameter Scaling.
2. When using 16-bit scaled integer Modbus addressing, time parameters can be read from or written to in 10ths of minutes, or in 10ths of seconds as defined in the parameter [Instrument.config.TimerRes](#).

Parameter Types

The following parameter types are used:

bool	Boolean
uint8	Unsigned 8-bit integer
int16	Signed 16-bit integer
uint16	Unsigned 16-bit integer
int32	Signed 32-bit integer
uint32	Unsigned 32-bit integer
time32	Unsigned 32-bit integer (time in milliseconds)
float32	IEEE 32-bit floating point
string	String - an array of unsigned 8-bit integers.

Parameter Scaling

Some parameters might have values which exceed the maximum value (32767) that can be read/written via 16-bit scaled integer comms. Such parameters are assigned a scaling factor as described in "[Scaling Factor](#)" on page 154.

Parameter List

The full list of parameters available via the communications link is to be found in the SCADA table supplied as a part of the iTools help system. Individual parameter addresses also appear in each iTools configuration page along with 'enumerations' showing all the possible values that the parameter can take.

To display the parameters list load the Parameter Help file (*Phelp_Epack_Vx.xx.chm*) from the iTools menu;

1. Select Help, Device Help from the iTools menu bar.
2. The Parameter Help file will display.
3. Select the topic Scada from the Content tab.
4. Scroll to the heading List of Parameters in the main window, click EPack parameters.

The EPack Parameters table will be displayed.

Alarms

DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- Use appropriate safety interlocks where personnel and/or equipment hazards exist.

Failure to follow these instructions will result in death or serious injury.

EPack alarms protect thyristors and loads against abnormal operation, and provide the user with valuable information regarding the type of fault.

Under no circumstances must these alarms be regarded as a replacement for proper personnel protection.

Global System Monitoring

At power-up and in running for some functionalities EPack performs a check of most of electronic parts (power supply, digital memory, and so on). In case of failure, EPack reports a status in the Global Status Parameters available using communication and displays a message on its front fascia.

There are four types of message described below:

- The first one is related to a detected failure on displays microcontroller board and EPack displays 'CONFIG ERROR'. For this kind of problem it is recommended to send the unit back to a repair center. EPack also displays a code in hexadecimal for a technician. This code is also available in decimal through iTools in Global Status 0.
- The second one reports issues related to a hardware problem detected by the microcontroller. Issues can be located on the different boards. In this situation EPack displays 'HW Problem'. For this kind of problem it is recommended to send the unit back to a repair center or contact your local representative. EPack also displays a code in hexadecimal for a technician. This code is also available in decimal through iTools in Global Status 1.
- The third one is more related to configuration data set on production line, or during upgrade. In this case EPack displays 'INVALID DATA'. For this kind of problem it is recommended to send the unit back to a repair center. EPack also displays a code in hexadecimal for a technician. This code is also available in decimal through iTools in Global Status 2.
- The fourth one concerns detection of an internal malfunction mainly on the display microcontroller board. For this event EPack displays 'INTERNAL FAILURE'. For this kind of problem it is recommended to send the unit back to a repair center. EPack also displays a code in hexadecimal for a technician. This code is also available in decimal through iTools in Global Status 3.

System Alarms

System alarms are considered to be 'Major Events' which help prevent proper operation of the system, and the unit is placed in standby mode.

The following subsections describe each of the possible system alarms.

Missing mains

Supply power is missing.

Thyristor short circuit

A thyristor short circuit leads to current flow even when not firing.

Over temperature

Reserved for future development.

Network dips

This detects a reduction in supply voltage, and if this reduction exceeds a configurable measured value (VdipsThreshold), firing will be inhibited until the supply voltage returns to a suitable value. VdipsThreshold represents a percentage change in supply voltage between successive half cycles, and can be defined by the user in the Network.Setup menu, as described in "[Network Setup configuration](#)" on [page 170](#).

Mains frequency fault detected

Triggered if the supply voltage frequency strays out of the range 47 to 63Hz, or if the mains frequency changes, for one cycle to the next, by more than the threshold defined in the Network.Setup menu described in "[Network Setup configuration](#)" on [page 170](#).

The value can be adjusted between 0.9% and 5%, the default value is 5%.

Chop Off alarm

Chop-off alarm will be active when a current threshold is exceeded for more than a pre-defined number of mains periods. This current threshold is user-adjustable from 100% to 350% of unit's nominal current. (to be found in the Network.setup area of configuration ("[Network Setup configuration](#)" on [page 170](#))).

Process Alarms

Process Alarms are related to the application and can be configured either to stop the unit firing (Standby Mode) or to allow operation to continue. Process alarms can also be configured to be latched and if so, they have to be acknowledged before the alarm is considered to be non-active. Alarms cannot be acknowledged until the trigger source has returned to a non-active state.

Total Load Failure (TLF)

No load is connected.

Closed Loop alarm

Closed loop break alarm is currently active.

Alarm input

The alarm input associated with the alarm block is active.

Over current detection

The analog input over current detection alarm is active.

Over Voltage Alarm

An 'OverVoltThreshold' can be configured in the Network.Setup area of configuration ("[Network Setup configuration](#)" on page 170) as a percentage of VLineNominal. If the VLine voltage rises above this threshold the OverVoltage alarm is set.

Note: This Alarm is returned FALSE if the MissingMains Alarm is set.

Under Voltage Alarm

An 'UnderVoltThreshold' can be configured in the Network.Setup area of configuration ("[Network Setup configuration](#)" on page 170) as a percentage of VLineNominal. If the VLine voltage falls below this threshold the UnderVoltage alarm is set.

Note: This Alarm is returned FALSE if the MissingMains Alarm is set.

Partial Load Failure (PLF)

This alarm detects a static increase in load impedance by comparing the reference load impedance (as configured by the user) with the actual measured load impedance over a mains cycle (for phase angle firing) and over the burst period (for burst and logic firing).

Non-inductive loads, for example resistance furnaces, resistive loads with low temperature coefficient or short wave infrared loads can be monitored using this function. For other load types, for example AC51 slightly inductive loads or AC56a primary of transformer, please consult Eurotherm.

The sensitivity of the partial load failure measurement can be set to any value between 2 to 6 inclusive, where an entry of 2, for example, means that one half of the elements (or more) must be open circuit in order to trigger the alarm; an entry of 3 means that one third of the elements (or more) must be open circuit in order to trigger the alarm, and so on down to one sixth. All elements must have identical characteristics and identical impedance values and must be connected in parallel).

The relevant parameters (PLFAdjustReq, and PLFSensitivity) are both to be found in Network.Setup, as described in ["Network Setup configuration" on page 170](#)..

Indication Alarms

Indication Alarms signal events for operator action if required. Indication alarms cannot be configured to stop power module firing, but they may be latched if required, and if latched, they must be acknowledged for the Signalling Status to return to the normal (non-alarm) state.

Process Value Transfer active

Indicates when a transfer control mode (e.g. $V^2 \leftrightarrow I^2$ P $\leftrightarrow I^2$ or $V^2 \leftrightarrow I^2$) is active.

Limitation active

Indicates when the internal firing control loop limits the firing output (I^2 or V^2) (in order not to exceed the adjusted maximum value)

Load Over-Current

Indicates when a configurable RMS load current threshold (Overlthreshold) is reached or exceeded. The parameter is found in the Network.Setup area of configuration (["Network Setup configuration" on page 170](#)) and is configurable as 10% to 400% of Nominal Current.

Maintenance

Precautions

DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See applicable national standards e.g. NFPA70E, CSA Z462, BS 7671, NFC 18-510.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Refer to manual for installation and servicing.
- The product is not suitable for isolation applications, within the meaning of EN60947-1 Turn off all power supplying this equipment before working on the loads of the equipment.
- Turn off all power supplying this equipment before working on equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Do not disassemble, repair or modify the equipment. Contact your supplier for repair.
- This product must be installed, connected and used in compliance with prevailing standards and/or installation regulations.

Failure to follow these instructions will result in death or serious injury.

Reasonable use and responsibility

The information contained in this manual is subject to change without notice. While every effort has been made to ensure the accuracy of the information, your supplier shall not be held liable for errors contained herein.

EPack is an “AC semiconductor controllers for non-motor loads” designed according to IEC60947-4-3 & UL60947-4-1, it meets the requirements of the Low voltage and EMC European Directives which covers safety and EMC aspects.


Use in other applications, or failure to observe the installation instructions of this manual may impair safety or EMC.

The safety and EMC of any system incorporating this product is the responsibility of the assembler/installer of the system.

Failure to use approved software/hardware with our hardware products may result in injury, harm, or improper operating results.

Eurotherm shall not be held responsible for any damage, injury, losses or expenses caused by inappropriate use of the product (EPack), or failure to comply with these instructions.

Under some circumstances, the EPack heatsink temperature may rise by more than 50°C and it can take up to 15 minutes to cool after the product is shut down.

 CAUTION
HOT SURFACE RISK OF BURNS <ul style="list-style-type: none">• Allow heatsink to cool before servicing.• Do not allow flammable or heat-sensitive parts in the immediate vicinity of heatsink. Failure to follow these instructions can result in injury or equipment damage.

Preventive Maintenance

 DANGER
HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH <ul style="list-style-type: none">• Tighten all connections in conformance with the torque specifications. Periodic inspections are required. Failure to follow these instructions will result in death or serious injury.


See Table 1, “Connection Details” on page 37.

Wires are not properly retained in terminals with insufficient torque.


Insufficient torque may increase the contact resistance:

- The protective earth ground connection may be too resistive. In case of short circuit between live parts and heatsink, the heatsink may reach a dangerous voltage.
- The power terminals will overheat.

Excessive torque may damage the terminal.

 DANGER
HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH <ul style="list-style-type: none">• Do not allow anything to fall through the case apertures and ingress the product. Failure to follow these instructions will result in death or serious injury.

Conductive or non-conductive parts which ingress product may reduce or short the insulations barriers inside the product.

 DANGER
HAZARD OF FIRE <ul style="list-style-type: none">• Heat-sink must be cleaned regularly. Periodicity depends on the local environment, but should not exceed 1 year. Failure to follow these instructions will result in death or serious injury.

Fusing

DANGER

HAZARD OF FIRE

- This product does not contain any branch-circuit protection, the installer must add branch-circuit protection upstream of the unit.
- Branch circuit protection must be selected according to maximum current in each phase and must be rated in compliance with local and national regulatory requirements.

Failure to follow these instructions will result in death or serious injury.

Branch circuit protection are mandatory to protect the wiring.

- CE: branch-circuit protection must be selected according to IEC 60364-4-43 or applicable local regulations.
- UL: branch-circuit protection must be selected according to NEC article 210.20, it is necessary for compliance with National Electric Code(NEC) requirements.

DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- High speed fuses (supplemental fuses in addition to branch circuit protective device), as listed in fusing sections, are mandatory to protect EPack against load short circuit.
- If opening of either the branch circuit protective device or the high-speed fuses (supplemental fuses) occurs, the product must be examined by suitably qualified personnel and replaced if damaged.

Failure to follow these instructions will result in death or serious injury.

The power circuit must be protected by a supplementary fuse, which should be used in conjunction with suitable fuse holders (and contact kits, if required) as shown in Table 4 or Table 5.

Note: With a supplementary fuse (high speed fuse), EPack is suitable for use on a circuit capable of delivering not more than 100kA RMS symmetrical amperes, 500 Volts Maximum (coordination Type 1).

Table 43: Details of high-speed fuses (WITHOUT microswitch) and fuse holders required for EPack with order code HSP

EPack current rating	Fuse rating	Fuse manufacturer & catalog number	Qty	Fuse body size (mm)	Fuse holder		Contact kit
					Manufacturer & catalog number	Qty	Qty
≤25A	30A or 32A	Mersen FR10GR69V30 Mersen FR10GR69V32	1	10×38	Mersen US101 or Mersen CUS101	1	0
32A	40A	Mersen FR14GR69V40 Mersen FR14GC69V40 Cooper-Bussmann FWP-40A14F		14×51	Mersen US141		
40A	50A	Mersen FR14UC69V50 Cooper-Bussmann FWP-50A14F					
50A	63A	Mersen FR22UD69V63		22×58	Mersen US221		
63A	80A	Mersen FR27UQ69V80T Mersen FR27UB10C80T		27×60	Mersen US271		
80A to 125A	200A	Mersen FR27UQ69V200T					

Table 44: Details of high-speed fuses (WITH microswitch) and fuse holders required for E-Pack with order code HSM

E-Pack current rating	Fuse rating	Fuse manufacturer & catalog number	Qty	Fuse body size (mm)	Fuse holder		Contact kit	
					Manufacturer & catalog number	Qty	Manufacturer & catalog number	Qty
≤25A	32A	Mersen FR14GR69V32T Mersen FR14GC69V32T Cooper-Bussmann FWP-32A14FI	1	14×51	Mersen US141	1	Mersen Y227928A	1
32A	40A	Mersen FR14GR69V40T Mersen FR14GC69V40T Cooper-Bussmann FWP-40A14FI						
40A	50A	Mersen FR14UD69V50T Cooper-Bussmann FWP-50A14FI						
50A	63A	Mersen FR22UD69V63T		22×58	Mersen US221		Mersen G227959A	
63A	80A	Mersen FR27UQ69V80T Mersen FR27UB10C80T		27×60	Mersen US271		Mersen E227612A	
80A & 125A	200A	Mersen FR27UQ69V200T						

DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- Tighten all connections in conformance with the torque specifications. Periodic inspections are required.

Failure to follow these instructions will result in death or serious injury.

Unless otherwise mentioned on the side of the fuse holders, torque fuse holders terminals at 2Nm.

Wires are not properly retained in terminals with insufficient torque. Insufficient torque may increase the contact resistance, causing the power terminals to overheat.

Excessive torque may damage the terminal.

Fuses Holders Contacts Kit

For technical specification and recommended wiring, see "Fuse Holders Contact Data (Fuse Ordering Code HSM)" on page 51.

Fuse holder dimensions

Figures 107 to 110 show dimensional details for the various fuse holders listed in Table 4 and Table 5 (not all shown to the same scale).

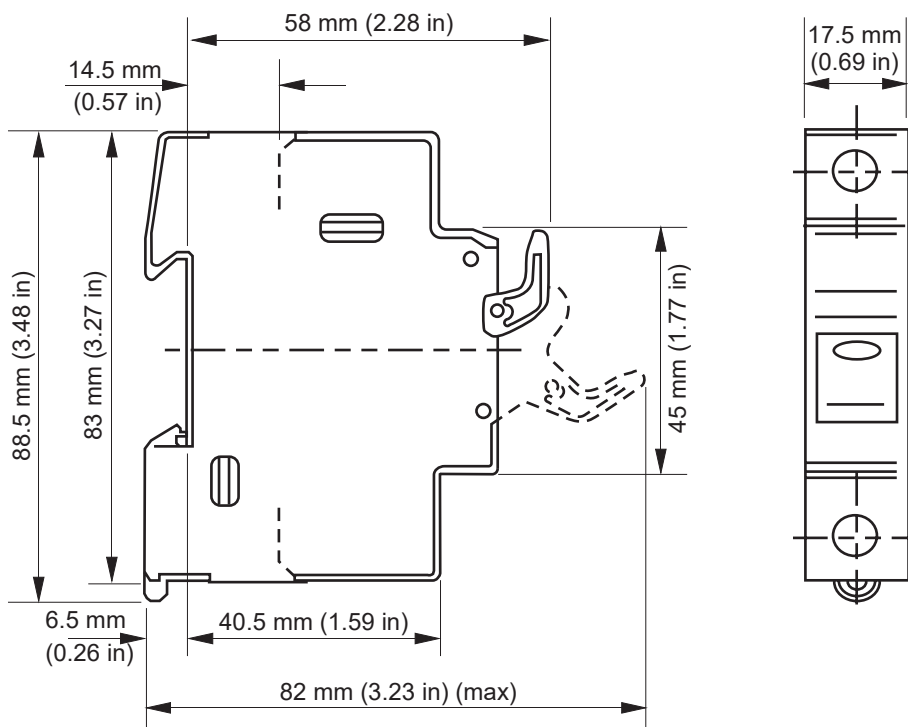


Figure 107 Fuse holder dimensions: US101 (10x38mm)

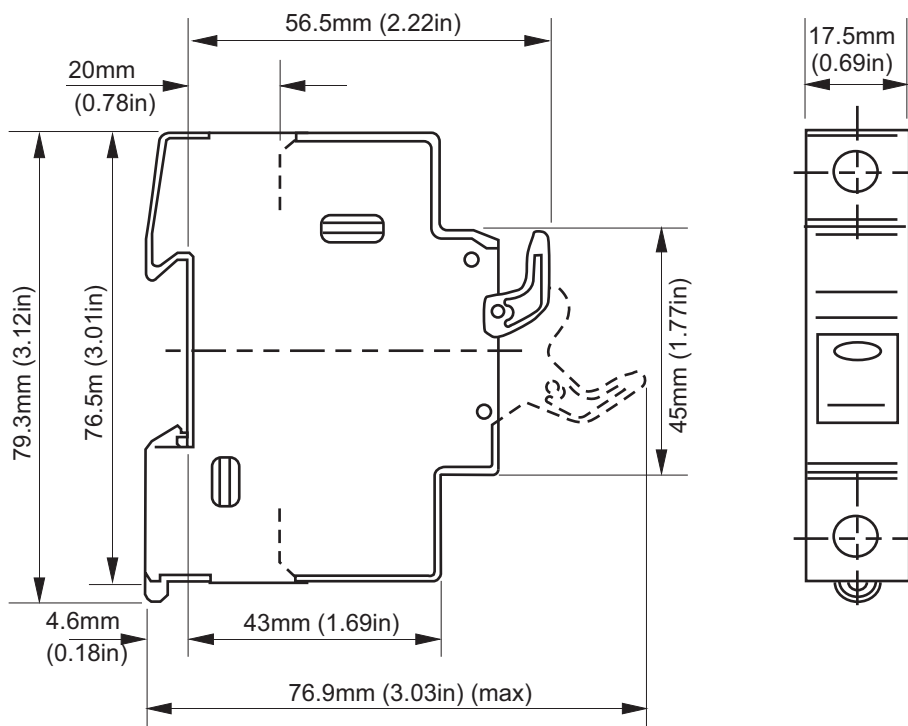


Figure 108 Fuse holder dimensions: CUS101 (10x38mm)


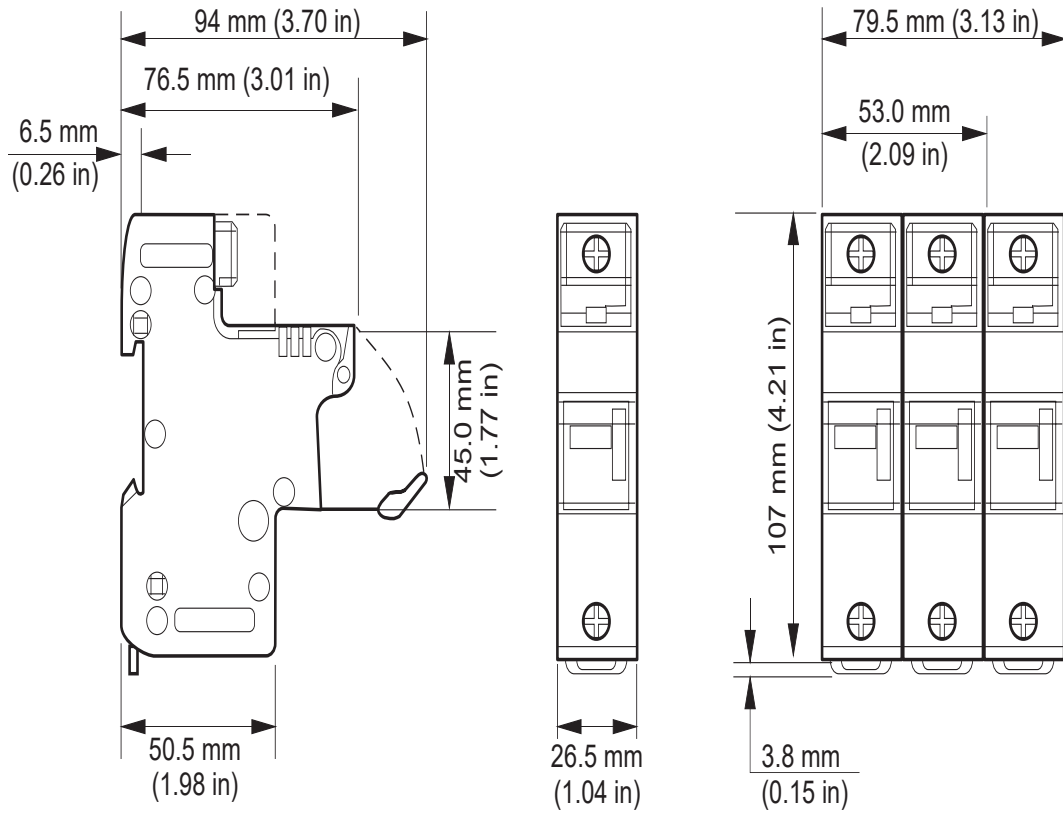


Figure 109 Fuse holder dimensions: US141 (14x51mm)

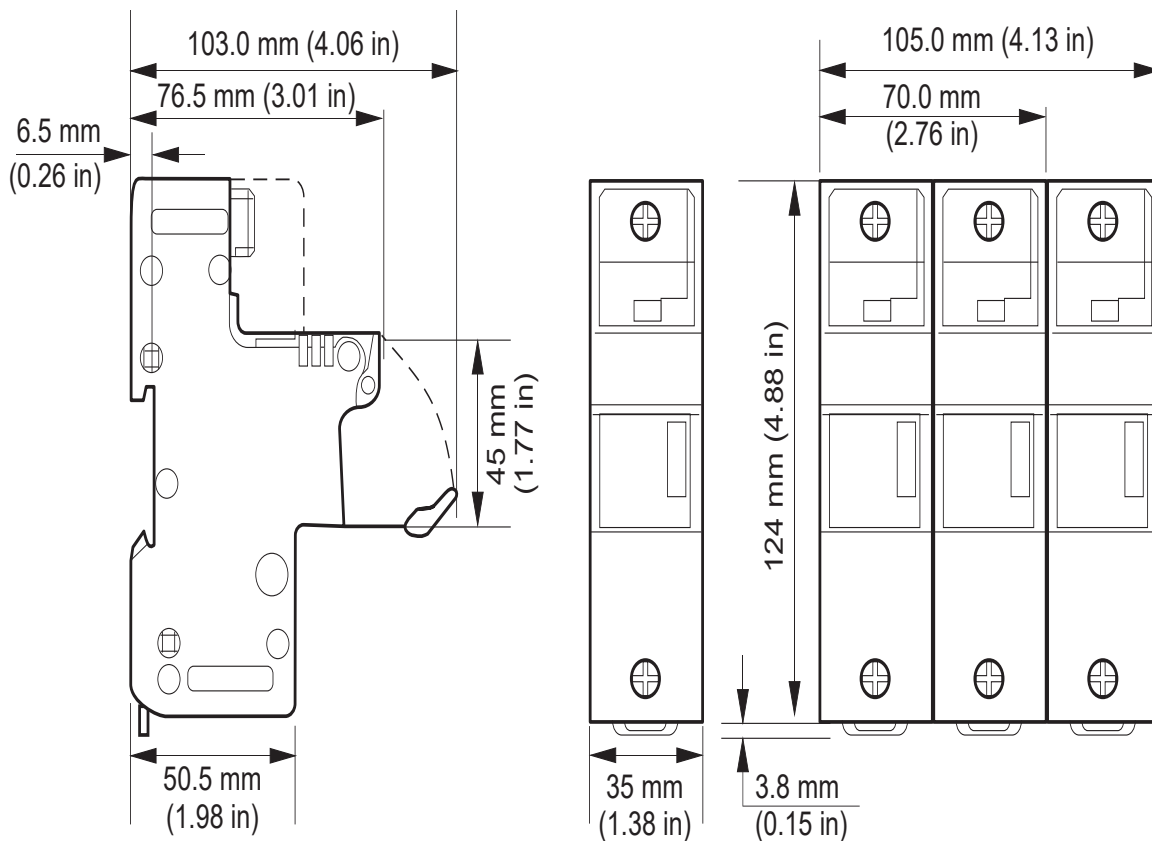

Fuse holder dimensions: US221 (22x58mm)

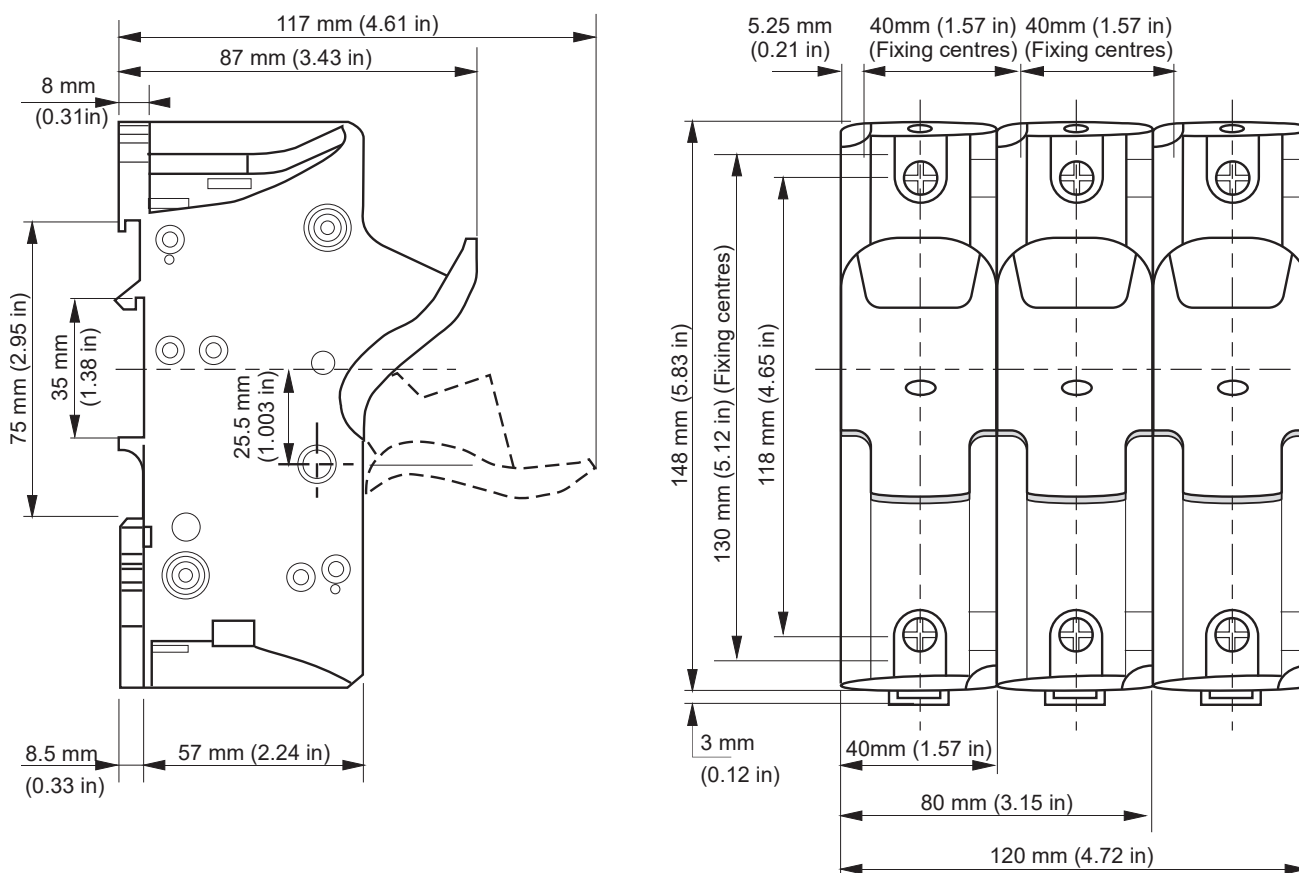


Figure 110 Fuse holder dimensions: US271 (27x60mm)

Auxiliary supply fuse protection

DANGER

HAZARD OF FIRE

- The cables used to connect the EPack's auxiliary supply and voltage reference must be protected by branch-circuit protection. Such branch-circuit protection must comply with local and national regulatory requirements.

Failure to follow these instructions will result in death or serious injury.

Branch circuit protection is mandatory to protect the cable used to connect the auxiliary supply.

- CE: branch-circuit protection must be selected according to IEC 60364-4-43 or applicable local regulations.
- UL: branch-circuit protection must be selected according to NEC article 210.20, it is necessary for compliance with National Electric Code(NEC) requirements.

DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- A High-speed fuse (supplemental fuses in addition to branch circuit protective device) or a double protection fuse as listed in fusing sections is mandatory for 85Vac to 550Vac auxiliary supply.

Failure to follow these instructions will result in death or serious injury.

This fuse is necessary to avoid the 85Vac to 550Vac auxiliary supply to emit flame or molten element in case of breakdown of a component.

High-speed fuse (supplemental fuse) does not protect the wiring they must be fitted in addition to branch circuit protective device).

Double protection fuse combines a branch circuit fuse and a high-speed fuse. Double protection fuse must be selected according to applicable national standards. Branch circuit protection fuses Standard in USA/Canada differ from IEC standards (e.g; Europe (CE)). Therefore:

- A fuse approved as branch circuit protection fuses in USA/Canada is not a branch circuit in all countries where IEC standards apply (e.g; Europe (CE)).
- A fuse approved as branch circuit protection fuses in all countries where IEC standards apply (e.g; Europe (CE)) is not a branch circuit in USA/Canada.

Table 45: Auxiliary supply fuse protection

UL Fuse Category	CE Fuse Category	Fuse (Make and Type)
Supplemental	Supplemental	ATM2-type fuse rated 2A, 600Vac/dc: Mersen/Ferraz Shawmut (UL file: E33925)
Branch Circuit	Supplemental	J-type fuse rated 3A/600Vac: HSJ3 by Mersen/Ferraz Shawmut (UL file: E2137; CSA class: 1422-02 LR12636) or DFJ-3 by Eaton/Cooper Bussman (UL file: E4273; CSA class: 1422-02 LR53787)
Supplemental	Branch Circuit	gR-type fuses rated 3A /700V: FR10GR69V3 (V1014571) by Mersen/Ferraz Shawmut (UL file: E76491)


DANGER
HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- If opening of any fuses or branch circuit protection device that supply the 85Vac to 550Vac auxiliary supply occurs, first check the wiring. If the wiring is not damaged, do not replace the fuse and contact the manufacturer's local service center.

Failure to follow these instructions will result in death or serious injury.

If the wiring is not damaged a component inside the 85Vac to 550Vac auxiliary supply is broken and product must go back to service center.

Instrument upgrade

Instrument upgrade is done in two steps: upgrading iTools to the latest version and upgrading software. Contact your local representative.

iTools upgrade

On the www.Eurotherm.com website, locate the 'Downloads' section, and click the 'Quick search' button for ITOOLS. A list of the latest available iTools software and documentation is displayed. Click on the links to download and install the latest version.


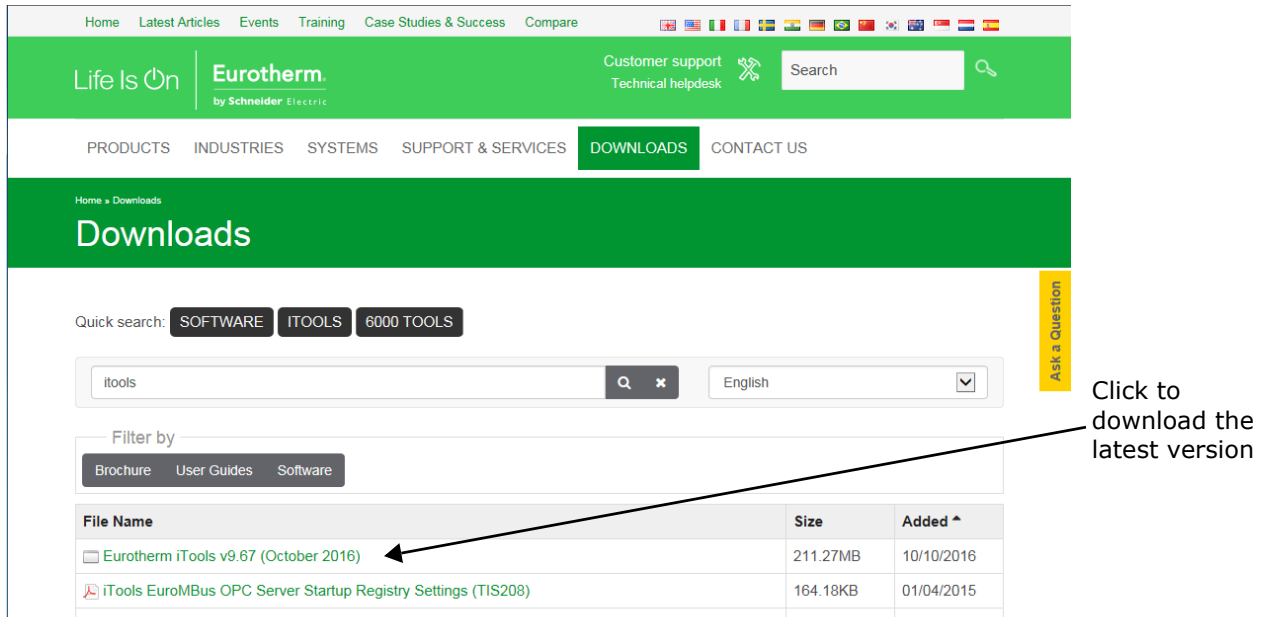


Figure 111 Downloads section


Software upgrade

Software upgrade can be carried out by one of two methods, as follows:

 Obtaining a Passcode via Telephone



1. Telephone the local Eurotherm Sales/Service agent with the serial number of the instrument to be updated, and the current software version. The serial number is to be found on the side label of the instrument; the software version at the bottom of the iTools window, as shown.
2. Place an order for the required new functionality.
3. A new passcode will be provided which is to be entered in the Instrument Options configuration.

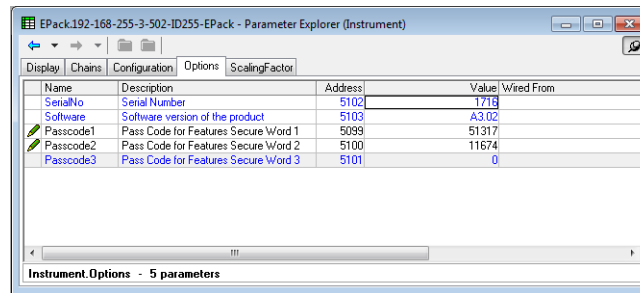


Name	Description	Address	Value	Wired From
SerialNo	Serial Number	5102	1218	
Software	Software version of the product	5103	A3.02	
Passcode1	Pass Code for Features Secure Word 1	5099	51317	
Passcode2	Pass Code for Features Secure Word 2	5100	11674	
Passcode3	Pass Code for Features Secure Word 3	5101	0	

Instrument.Options - 5 parameters

Figure 112 Instrument options configuration

Obtaining a Passcode via iTools

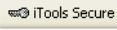1. Click on the 'iTools Secure' tool button .
2. Accept the warning message.
3. Select the functions required from the displayed list (figure 113). If the EtherCAT option is fitted, the EthernetIP and PROFINET options are not available.
4. Click on 'Proceed...'. This sends an email requesting the option passcode. Follow the instructions.
5. Enter the new passcode as described in step three above.

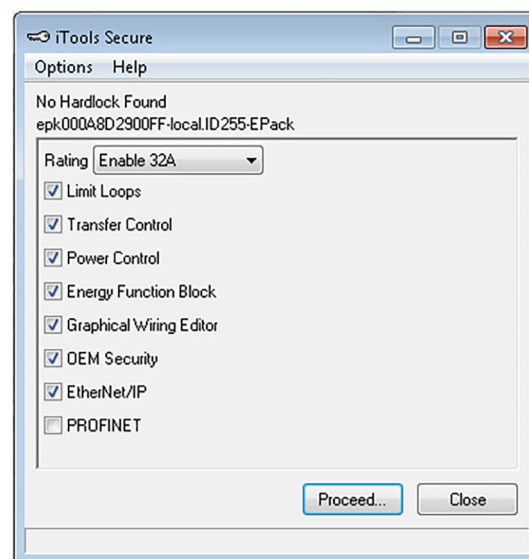


Figure 113 iTools secure

EPack Licence Notice

FreeRTOS

EPack is powered by an original FreeRTOS from version v7.1.0.

FreeRTOS is available at <http://www.freertos.org>

EtherNet/IP

EPack uses an embedded MOLEX Ethernet/IP stack.

PROFINET

EPack uses an embedded PROFINET PORT stack.

/* microutf8

Copyright © 2011 by Tomasz Konojacki

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice must be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

/*

lwip

/*

* Copyright © 2001, 2002 Swedish Institute of Computer Science.

* All rights reserved.

* Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

* 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.




* 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

* 3. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

Technical Specification

Standards

The product is designed and produced to comply with:

Countries	Standard symbol	Standard details
European community		EN60947-4-3:2014. Low-voltage switchgear and controlgear - Part 4-3: Contactors and motor-starters - AC semiconductor controllers and contactors for non-motor loads (identical to IEC60947-4-3:2014). Declaration of conformity available on request.
USA & Canada		UL60947-4-1 CAN/CSA C22.2 NO.60947-4-1-14 Low-Voltage Switchgear and Controlgear - Part 4-1: Contactors and Motor-Starters - Electromechanical Contactors and Motor-Starters U.L. File N° E86160
Australia		Regulatory Compliance Mark (RCM) to Australian Communication and Media Authority. Based on compliance to EN60947-4-3:2014.
China	/	Product not listed in catalog of products subject to China Compulsory Certification (CCC)

Installation Categories

⚠ DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- Do not exceed the device's ratings.

Failure to follow these instructions will result in death or serious injury.

The insulation barriers of the equipment have been designed for the rating as defined in the table below at an altitude of 2000m maximum.

Table 46: Installation categories

	Installation Category	Rated impulse withstand voltage (Uimp)	Rated insulation voltage	Maximum value of rated operational voltage to earth
Communications	II	0.5kV	50V	50V
Standard IO	II	0.5kV	50V	50V
Relays	III	4kV	300V	300V
Power terminals	III	6kV	500V	500V

Specification

Power (at 45°C)

Voltage range

Load: 100 to 500V (+10% -15%)
 Auxiliary: 24V ac/dc (+20% -20%)
 or
 100 to 500V (+10% -15%)

⚠ DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- The maximum voltage between any pole of the 85Vac to 550Vac auxiliary supply and all other terminals must be lower than 550Vac.

Failure to follow these instructions will result in death or serious injury.

If the 85Vac to 550Vac auxiliary supply is supplied by a dedicated transformer the phasing must be checked to avoid overvoltage.

⚠ DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- The "24V auxiliary supply" is an SELV circuit. The supply voltage must be derived from a SELV or PELV circuit.

Failure to follow these instructions will result in death or serious injury.

SELV is defined (in IEC60947-1) as an electrical circuit in which the voltage cannot exceed 'ELV' under normal conditions or under single fault conditions, including earth ground faults in other circuits.

The definition of ELV is complex as it depends on environment, signal frequency, etc. See IEC 61140 for further details.

Frequency range	47 to 63Hz for line and ac auxiliary supplies
Power requirement:	
	24V dc 12W
	24V ac 18VA
	500V ac 20VA
Installation category	See Table 46 above.
Nominal load current	16 to 125 Amps
Power Dissipation	1.3 Watts per amp, per phase
Pollution degree	Pollution degree 2

DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- Electrically conductive pollution must be excluded from the cabinet in which the product is mounted.

Failure to follow these instructions will result in death or serious injury.

The product has been designed for pollution degree 2 according to IEC60947-1 definition: Normally, only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation may be expected.

Electrically conductive pollution must be excluded from the cabinet in which the product is mounted. To ensure a suitable atmosphere in conditions of conductive pollution, fit adequate air conditioning/filtering/cooling equipment to the air intake of the cabinet, e.g. fitting fan-cooled cabinets with a fan failure detection device or a thermal safety cut-out.

Duty cycle	Uninterrupted duty / continuous operation
Device form designation	Form 4 (Semiconductor controller)
Short circuit protection	By external supplemental fuses (high speed fuse) - see "Fusing" on page 213.
Rated conditional short-circuit current	100kA (Coordination Type 1)
Utilization categories	AC51: Non-inductive or slightly inductive loads, resistance furnaces AC56a: Transformer Primary
Heater Type	Low/high temperature coefficient and non-aging/aging types: MOSI Molybdenum Silicide, Silicon Carbide, Carbon.
Overload conditions	AC51: 1xle continuous
Load Power factor	0.85 for Loads from 32A up to 125A

DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- Do not exceed the device's ratings.

Failure to follow these instructions will result in death or serious injury.

Only SLIGHTLY inductive loads are allowed, contact Eurotherm for advice for Loads lower than 32A.

Physical

Dimensions and mounting centers	See Figure 4, Figure 5, Figure 6 and Figure 7 for details
Weight:	
16 to 32A units	800g + user connectors
40 to 63A units	950g + user connectors
80A and 100A units	1800g + user connectors
125 A units	2500g + user connectors

Environment

Temperature limits:	
Operating:	0°C to 45°C at 1000m 0°C to 40°C at 2000m
Storage:	-25°C to +70°C
Altitude:	1000m maximum at 45°C 2000m maximum at 40°C


 DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- Do not exceed the device's ratings.

Failure to follow these instructions will result in death or serious injury.

The insulations barriers of the equipment have been designed for an altitude of 2000m maximum.

 DANGER

HAZARD OF FIRE

- At commissioning ensure that under maximum load condition, the ambient temperature of the product will not exceed the limit stated in that manual.

Failure to follow these instructions will result in death or serious injury.

Humidity limits	5% to 95% RH (non-condensing)
Degree of Protection (CE)	
16A to 63A units:	IP10 (EN60529)
80A to 125A units:	IP20 (EN60529)

 DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- Respect electrical installation requirements to ensure, improve the IP rating.

Failure to follow these instructions will result in death or serious injury.

If the conductor stripping lengths of the power cables are longer than the requirements IP20 is compromised.

If the conductor stripping lengths of the power cables are shorter than the requirements there is a potential risk of total loss of connection. Wires may slip out of the terminals.

For product rated 80A to 125A, if the breakaway features are removed for cables with diameter lower than 9mm the IP20 is compromised and the product is IP10.

<p>Enclosure type ratings (UL) All units: Atmosphere External wiring</p>	<p>Open type Non-explosive, non-corrosive, non-conductive</p>
	<p>IEC/CE: Must comply with IEC60364-1 and IEC60364-5-54 and all applicable local regulations. UL: Wiring must comply with NEC and all applicable local regulations. Cross sections must comply with NEC, Article 310 Table 310-16.(see Table 1 of this manual for temperature ratings)</p>
<p>Shock</p>	<p>According to EN60068-2-27 and IEC60947-1 (Annex Q, Category E)</p>
<p>Vibration</p>	<p>According to EN60068-2-6 and IEC60947-1 (Annex Q, Category E)</p>
<p>EMC Standard:</p>	<p>EN60947-4-3:2014. See Table 47 and Table 48 for EMC emission and immunity levels attained.</p>

Table 47: EMC immunity tests

EMC immunity tests (According to EN60947-4-3:2014)				
	Level		Criteria	
	Requested	Achieved	Requested	Achieved
Electrostatic discharge (test method of IEC 61000-4-2)	Air discharge mode 8kV Contact discharge mode 4kV	Air discharge mode 8kV Contact discharge mode 4kV	2	2
Radiated radio-frequency electromagnetic field test (test method of EN 61000-4-3)	10V/m from 80MHz to 1GHz and from 1.4GHz to 2GHz	10V/m from 80MHz to 1GHz and from 1.4GHz to 2GHz	1	1
Fast transient/burst test (5/50 ns) (test method of EN 61000-4-4)	Power ports 2kV / 5kHz Signal ports 1kV / 5kHz	Power ports 2.5kV / 5 kHz Signal ports 1kV / 5 kHz	2	1
Surge Voltage test (1,2/50µs - 8/20µs) (test method of EN 61000-4-5)	2kV line to earth 1kV line to line	2kV line to earth 1kV line to line	2	2
Conducted radio-frequency test (test method of EN 61000-4-6)	10V (140dBµV) from 0.15MHz to 80 MHz	15V (143.5dBµV) from 0.15MHz to 80 MHz	1	1
Voltage dips test (test method of EN 61000-4-11)	0% during 0.5 cycle & 1 cycle	0% during 0.5 cycle & 1 cycle	2	2
	40% during 10/12 cycles	40% during 10/12 cycles	3	3
	70% during 25/30 cycles	70% during 25/30 cycles	3	2
	80% during 250/300 cycles	80% during 250/300 cycles	3	2
Short interruptions test (test method of EN 61000-4-11)	0% during 250/300 cycles	0% during 250/300 cycles	3	2

Table 48: EMC emission tests

EMC emission tests (According to EN60947-4-3:2014)				
Test	Frequency (MHz)	Limit level for class A industrial		Comments
		Quasi peak dB (μ V)	Average dB (μ V)	
Radiated radio frequency emission test According to EN60947-4-3:2014 (test method of CISPR11)	30 to 230	40 at 10m	N/A	Pass
	230 to 1000	47 at 10m	N/A	
Conducted radio frequency emission test According to EN 60947-4-3:2014 for rated power <20kVA (test method of CISPR11)	0.15 to 0.5	79	66	The conducted emissions can meet the requirement of IEC60947-4-3:2014 with an external filter added on the line connections. This is in line with the rest of the industry ²
	5 to 30	73	60	
Conducted radio frequency emission test According to EN 60947-4-3:2014 for rated power >20kVA (test method of CISPR11)	0.15 to 0.5	100	90	
	0.5 to 5	86	76	
	5 to 30	90 to 73 ¹	80 to 60 ¹	

1. Decrease with log of frequency emissions.
2. Technical note TN1618 (available upon customer request) describes the recommended filter structures which reduce conducted radio-frequency emissions.




WARNING

UNINTENDED EQUIPMENT OPERATION

- Do not use the product for critical control or protection applications where human or equipment safety relies on the operation of the control circuit.
- Signal and power voltage wiring must be kept separate from one another. Where this is impractical, all wires must be rated to the power voltage & shielded cables are recommended for signal wiring.
- This product has been designed for environment A (Industrial). Use of this product in environment B (domestic, commercial and light industrial) may cause unwanted electromagnetic disturbances in which cases the installer may be required to take adequate mitigation measures.
- For Electromagnetic Compatibility, the panel or DIN rail to which the product is attached must be grounded.
- Observe all electrostatic discharge precautions before handling the unit.
- Nominal current of product must be set between 25% & 100% of maximum current

Failure to follow these instructions can result in death, serious injury or equipment damage.


DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- The I/O Input & Output, the Communications ports are SELV circuit. They must be connected to SELV or PELV circuit.
- The relay output and the fuse holders contacts are compliant to the SELV requirements; they can be connected to SELV, PELV circuit or to voltage up to 230V (maximum value of rated operational voltage to earth:230V)

Failure to follow these instructions will result in death or serious injury.

SELV is defined (in IEC60947-1) as an electrical circuit in which the voltage cannot exceed 'ELV' under normal conditions or under single fault conditions, including earth ground faults in other circuits.

The definition of ELV is complex as it depends on environment, signal frequency, etc. See IEC 61140 for further details.

Operator Interface

Display	1.44" square TFT colour display allowing viewing of selected parameter values in real time, plus configuration of instrument parameters for users with adequate access permission.
Push buttons	Four push buttons provide page and item entry and scroll facilities.

Inputs/Outputs

All figures are with respect to 0V, unless otherwise stated.

Number of inputs/outputs	1 Analog input; 2 Digital inputs (DI1 and DI2); 1 Relay output 1 User configured output (DI2 input) * (* Exclusive to DI2 when not used as an digital input). See I/O Input & Output Details (page 47)
Update rate	Twice the mains frequency. Defaults to 55Hz (18 ms) if the supply frequency lies outside the range 47 to 63Hz.)
Termination	Removable 5-way connector. Located as shown in Figure 10 .

Analog Input

Performance	See Table 49 and Table 50
Input type	Configurable as one of: 0 to 10V, 1 to 5V, 2 to 10V, 0 to 5V, 0 to 20mA, 4 to 20mA
Absolute input maxima	-0.6V to +16V and ±40mA

Table 49: Analog input specification (voltage inputs)

Analog input: Voltage input performance		
Parameter	Typical	Max/Min
Total voltage working input span		0V to +10V
Resolution (electrical noise free) (note 1)	11 bits	
Calibration accuracy (notes 2, 3)	<0.1%	<0.1%
Linearity accuracy (note 2)		±0.1%
Ambient temperature deviation (note 3)		<0.01%/°C
Input resistance (terminal to 0V)	142kΩ	±0.2%

Note 1: w.r.t. total working span
 Note 2: % of effective range (0 to 5V, 0 to 10V)
 Note 3: After warm up. Ambient = 25 °C

Table 50: Analog input specification (current inputs)

Analog input: Current input performance		
Parameter	Typical	Max/Min
Total current working input span		0 to +25mA
Resolution (electrical noise free) (note 1)	11 bits	
Calibration accuracy (notes 2, 3)		<0.2%
Linearity accuracy (note 2)		±0.1%
Ambient temperature deviation (note 2)		±0.01%/°C
Input resistance (terminal to 0v)	<102Ω	±1%

Note 1: w.r.t. total working span
 Note 2: % of effective range (0 to 20mA)
 Note 3: After warm up. Ambient = 25 °C

Digital Inputs

Voltage inputs

Active level (high): $11V < V_{in} < 30V$ with $6mA < \text{input current} < 30mA$

Non-active level (low): $-3V < V_{in} < 5V$ with $2mA < \text{input current} < 30mA$

Or

$5V < V_{in} < 11V$ with input current $< 2mA$

Contact closure inputs

Source current: 10mA min - 15mA max

Open contact (non active)

resistance: $> 800\Omega$

Closed contact (active)

resistance: $< 450\Omega$

Absolute Maxima: $\pm 30V$ or $\pm 25mA$

Note: Absolute maximum ratings refer to externally applied signals

Digital Output

User configured output (DI2): $\pm 2\%$ 10.2V, 10mA

For example; To supply a potentiometer between $2k\Omega - 10k\Omega$ ($\pm 20\%$) used to drive the Analog Input when set to Voltage mode - see [Inputs/Outputs \(page 230\)](#).

Relay Specification

The relay has gold plated contacts suitable for 'dry circuit' (low current) use. See "I/O Input & Output Details" on page 47.

Contact life

Resistive loads: 100,000 operations

Inductive loads: Derate as per accompanying graph (Figure 114)

High power use

Current: 2A (resistive loads)

Voltage: <264V RMS (UL: voltage 250Vac.)

Low power use

Current: >10 mA

Voltage: >5V

Contact configuration:

Single pole change-over (one set of Common, Normally Open and Normally Closed contacts)

Termination

Removable 3-way connector. Located as shown in Figure 10.

Installation Category

Installation category III, assuming that nominal phase to earth ground voltage is $\leq 300V$ RMS.

Absolute max. switching capability

<2A at 240V RMS (resistive loads)

Note: 'Normally Closed' and 'Normally Open' refer to the relay when the coil is not energized.

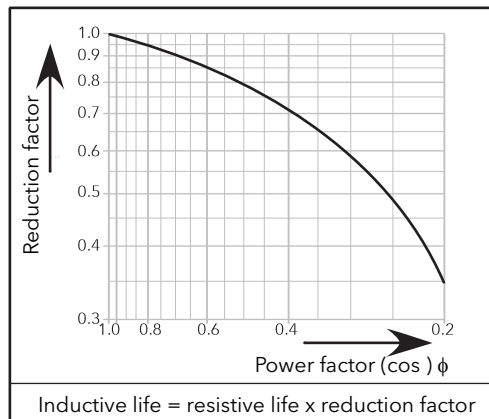


Figure 114 Relay derating curves

Fuse Holders Contacts Kit Specification

Fuse Holders Contacts Kit are delivered with NO, NC contact

Connection: Faston lugs 2.8 X 0.5 mm

Rated insulation voltage: 250VAC

Rated operational current following IEC 60947-5 & -1

Utilization category AC15: 4A/24V, 4A/48V, 3A/127V, 2.5A/240V

Utilization category DC13: 3A/24V, 1A/48V, 0.2A/127V, 0.1A/240V

Minimum operational current and voltage:

(For contact kit reference according to product rating see Table 5)

Contact kit Mersen Y227928A, for fuse size 14x51, or,

Contact kit Mersen G227959A for fuse size 22x58.

1mA/4V AC or DC

Contact kit Mersen E227612A, for fuse size 27x60

100mA/20V AC or DC

Mains Network Measurements

All network measurements are calculated over a full mains cycle, but internally updated every half-cycle. For this reason, power control, current limits and alarms all run at the mains half-cycle rate. The calculations are based on waveform samples taken at a rate of 20kHz. The phase voltage referred to is the line voltage referenced to N/L2 input potential.

The parameters below are directly derived from measurements for each phase.

Accuracy (20 to 25°C)

- Line frequency (F): ±0.02Hz
- Line RMS voltage (Vline): ±2% of Nominal Vline.
- Load RMS voltage (V): ±2% of Nominal V for voltage readings >1% of Nominal V. Unspecified for readings lower than 1%Vnom.
- Load current (I_{RMS}): ±2% of Nominal I_{RMS} for current readings >3.3% of Nominal I_{RMS}. Unspecified for readings ≤ 3.3% of Nominal. I_{RMS}.
- Load RMS voltage squared (Vs_q): ±2% of (Nominal V)²
- Thyristor RMS current squared (Is_q): ±2% of (Nominal I)²
- True load power (P): ±2% of (Nominal V) × (Nominal I)
- Frequency resolution: 0.1 Hz
- Measurement resolution: 11 bits of Nominal value
- Measurement drift with ambient temp.: <0.02% of reading / °C

Further parameters (S, PF, Z, IsqBurst, Vs_q Burst, and PBurst) are derived from the above, for the network (if relevant). See "Network Meas Menu" on page 168 for further details.

WARNING
<p>UNINTENDED EQUIPMENT OPERATION</p> <ul style="list-style-type: none"> Nominal current of product must be set between 25% & 100% of maximum current. <p>Failure to follow these instructions can result in death, serious injury or equipment damage.</p>

Communications

<p>Connection</p> <p>Cable type</p> <p>Protocol</p> <p>Baud rate</p> <p>Indicators</p>	<p>Connected to EtherCAT slave controller</p> <p>See ETG.1600 EtherCAT Installation Guidelines</p> <p>EtherCAT, Modbus TCP (over EtherCAT),</p> <p>100M full duplex</p> <p>Link activity (green)</p>
---	---



Scan for local contents

Eurotherm Ltd

Faraday Close
Durrington
Worthing
West Sussex
BN13 3PL
Phone: +44 (0)1903 268500
www.eurotherm.co.uk

As standards, specifications, and designs change from time to time, please ask for confirmation of the information given in this publication.

© 2019 Eurotherm Limited. All Rights Reserved.

HA033412 Issue 01
(CN37342)

